注册您的产品并在以下网站链接中了解详情 www.philips.com/AVENT

SCF724







Important safety instructions

For the safety and health of your child, adult supervision is required when your child uses the lunch box.

- Before the first use and after each use, disassemble the lunch box, clean, and sterilize all the components.
- Before each use, check the lunch box. If any damage or crack is detected, stop using the lunch box immediately.

A Warning:

· Prevent your child from running or walking while feeding.

Caution:

- The lunch box is intended for heating food or food storage. Do not use it to cook.
- · Never heat an empty lunch box in a microwave oven.
- To heat food in a microwave oven: The heat up time should not exceed two minutes. If the food is not warm enough, repeat the heating procedure or see the user manual of the microwave oven.
- Never use the lunch box to heat ketchup, lemon/orange peels, vinegar, soy sauce, or foods flavored with much oil or sugar.
- To prevent scalding, open the four buckles on the lid and lift the lid a bit aside before you heat food in the microwave.
- · Before feeding, stir the food and check the food temperature.

Cleaning and sterilization

Caution:

*

- Never use abrasive, anti-bacterial cleaning agents, or chemical solvents.
- Do not place the lunch box directly on surfaces that are cleaned with anti-bacterial cleaners.
- · Food coloring can discolor components.
- Use cleaning agents of appropriate concentration. Cleaning agents of excessive concentration may eventually cause the lunch box to crack.

- Use a soft dishcloth to clean the lunch box thoroughly in warm and soapy water, and then rinse them in clean water. Or, clean it on the top rack of dishwasher.
- Do not sterilize or store the lunch box in drying or sterilizing cabinets with heating elements.

Storage

Caution:

- Never place the lunch box near flames or other heat sources. Keep it from direct sunlight.
- For hygiene maintenance, store the lunch box in a dry and covered container.

2HS 重要安全说明

为了宝宝的安全和健康,宝宝必须在成人的陪同下使用餐盒。

- 首次使用前及每次使用完后,请拆开餐盒,对所有组件进行清洁 并消毒。
- 每次使用之前,先检查一下餐盒。如果发现损坏或破裂,请立即 停止使用餐盒。

A 警告:

在喂食的过程中使宝宝不要跑动或走动。

! 注意:

- 餐盒适用于加热或存储食物。请勿用其进行烹饪。
- 切勿在微波炉中加热空的餐盒。
- 要在微波炉中加热食物:加热时间不得超过两分钟。如果食物不够热,请重复加热过程或查看微波炉用户手册。
- 切勿使用餐盒加热蕃茄酱、柠檬/柑橘皮、醋、酱油或以重油或 糖调味的食物。

PHILIPS

AVENIT



飞利浦新安怡 飞利浦电子(英国)有限公司 地址: 飞利浦中心, 吉尔福德商业区, 吉尔福德, 萨里 邮编: GU2 8XH

商标由飞利浦集团所有 ©荷兰皇家飞利浦电子有限公司,版权所有

为避免烫伤,在用微波炉加热食物前,请打开羔子上的四个带 扣, 稍稍将羔子提起一边。

喂食前,搅动食物并检查食物温度。

清洁和消毒

- ! 注意:
- 请勿使用腐蚀性抑菌清洁剂或化学溶液。
- 请勿将餐盒直接放在使用抗菌清洁剂清洁讨的物体表面。
- 食物的颜色可能使组件变色。
- 使用适当浓度的清洁剂。清洁剂浓度过高可能最终会造成餐盒 破裂。
- 在温和的肥皂水中使用柔软的抹布彻底清洁餐盒,然后用清水冲 洗干净,或者,在洗碗机的上搁架上进行清洁。
- 不要将餐盒放在带加热元件的烘干或消毒柜中进行消毒或存放。

- 切勿将餐盒置于靠近明火或其它热源的地方。不要将其置于阳光 直射处.
- 为保持卫生,请将餐盒存放在干燥的带盖容器中。

① 重要安全指示

為了兒童的安全及健康,兒童使用午餐盒時需有成人監督。

- 首次使用前及每次使用後,拆開午餐盒,清潔並消毒所有組件。
- 每次使用前,檢查午餐盒。如果發現任何損壞或裂痕,請立即 停用午餐盒。

A 警告:



存储

1 注意:

- 盒裂開。 在溫暖的肥皂水裡使用柔軟的抹布徹底清潔午餐盒,然後在清水
 - 裡清洗。或者,放在洗碗機中清洗。 請勿在備有發熱元件的抽濕或消毒櫃消毒或存放午餐盒。

清潔與消毒

注意:

注意

存放

- 注意
- 請勿將午餐盒放在靠近火焰或其他熱源的位置。保存在遠離陽光 直射的地方。
- 為了保持衛生,將午餐盒存放在乾爽密封的容器內。

午餐盒用作食物加熱或存放食物。請勿用作烹調。

温暖,重複加熱步驟或參閱微波爐的使用手冊。

要在微波爐內加熱食物:加熱時間不應超過兩分鐘。如果食物不夠

請勿使用午餐盒加熱番茄汁、檸檬/橙皮、醋、豉油或使用多油

為了避免燙傷,在微波爐內加熱食物前,請先拉開蓋上的扣環,

諸勿在微波爐內加熱空的午餐盒。

並將蓋掀開稍微放到旁邊。

食物顏色可導致組件退色。

- 餵食前, 把拌食物並檢查食物溫度。

請勿使用磨蝕性、抗菌清潔劑或化學溶劑。

請勿將午餐盒直接放在使用抗菌清潔劑清潔的表面上。

使用適當濃度的清潔劑。濃度過高的清潔劑最終可能導致午餐

或糖調味的食物。

PHILIPS AVENIT

产品	旅行喂养	装装
型号	SCF724	
主要材料	聚丙烯、	硅肜
使用温度	100 °C	
检验	合格	
产地	中国	

珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 邮政编码: 519040 全国顾客服务热线:4008 800 008

3140 035 26532

