

功能

KidPacer

Sonicare For Kids 声波震动牙刷会通过一系列短音来提示刷牙者开始清洁口腔的下一区域，并在刷牙周期结束时发出一声祝贺音，然后自动关闭。这样可确保孩子的牙齿得到全面、彻底的清洁（请参阅“刷牙说明”）。

注意：指导您的宝宝开始刷牙，直到听到祝贺音且牙刷关闭。

Easy-start 刷牙动力增强功能

Easy-start 刷牙动力增强功能在最初 14 次刷牙时会缓慢增加动力，以帮助您适应使用飞利浦 Sonicare 刷牙。Sonicare For Kids 声波震动牙刷出厂时已启用的 Easy-start 刷牙动力增强功能。

注意：前 14 次刷牙每次时间至少为 1 分钟，以便正确度过 Easy-start 刷牙动力增强功能的循序渐进期。

启用或禁用 Easy-start 刷牙动力增强功能

1 将牙刷柄放在充电器上。

要启用 Easy-start 刷牙动力增强功能：按住电源开/关按钮 2 秒钟。听到 2 声蜂鸣音，表示 Easy-start 刷牙动力增强功能已启用。要禁用 Easy-start 刷牙动力增强功能：按住电源开/关按钮 2 秒钟。听到 1 声蜂鸣音，表示 Easy-start 刷牙动力增强功能已禁用。

注意：不建议在初始动力递增阶段后仍使用 Easy-start 刷牙动力增强功能，这样做会降低飞利浦 Sonicare 去除牙菌斑的效果。

清洁

警告：请勿使用洗碗机清洁牙刷头、牙刷柄、充电器、充电器盖或可替面板。

牙刷柄

1 卸下牙刷头并用温水冲洗金属轴。确保清除所有残留牙膏（图 12）。

警告：请勿使用尖锐物品按压金属轴上的橡胶密封圈，否则可能造成损坏。

2 使用湿布擦拭牙刷柄的整个表面。

牙刷头

1 每次刷牙（图 13）后冲洗牙刷头和刷毛。

2 从牙刷柄上卸下牙刷头，每周至少用温水冲洗一次牙刷头连接处。

充电器

1 清洁产品前，请先将充电器电源拔掉。

2 使用湿布擦拭充电器的表面。确保清除充电器表面的所有牙膏或其他残留物。

储藏

如果打算较长时间不使用 Sonicare 声波震动牙刷，请从电源插座中拔出充电器，清洁并且储藏于凉爽、干燥且远离阳光直射的地方。

更换

牙刷头

- 每 3 个月更换一次 Sonicare 声波震动牙刷头以获得最佳效果。

- 只能使用 Sonicare For Kids 替换刷头。

关于产品序列号

如何找到我的飞利浦 Sonicare For Kids 儿童声波震动牙刷的刷柄序列号？

要获得您的飞利浦 Sonicare For Kids 儿童声波震动牙刷的序列号，您必须将刷柄连接至飞利浦 Sonicare For Kids 儿童声波震动牙刷应用程序。连接建立后，您可打开 Sonicare For Kids 儿童声波震动牙刷应用程序，访问主菜单中的“关于”部分，即可找到刷柄序列号。在“关于”部分中，您可以找到与您的 Sonicare For Kids 儿童声波震动牙刷应用程序中的档案相关联的刷柄序列号列表。如果未在此列表中看到您的刷柄，请开始新的刷牙环节，以重新连接您的刷柄。

回收

弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。

部件名称	产品中有害物质的名称及含量					
	有害物质					
PCB's 集成电路板	X	O	O	O	O	O
本表格依据 SJ/T11646 的规定编制。						
O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。						
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。						

*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关信息的存在信息，有助于产品废弃时的妥善处理。

取出充电电池

警告：仅在丢弃产品时取出充电电池。在取出电池时请确保电池电量已耗尽。

要取出充电电池，您需要一个平头（标准）螺丝刀。按照下面列出的步骤执行操作时，请遵循基本的安全措施。务必保护好您的眼睛、手、手指以及工作台面。

1 要耗尽充电电池的电量，可以从充电器上取下牙刷柄，打开飞利浦 Sonicare 并让其运行直到停止。重复这一步骤，直至飞利浦 Sonicare 无法再打开。

2 将螺丝刀插入牙刷柄底部的槽口，逆时针转动螺丝刀直到您看到底盖和牙刷柄（图 14）之间出现间隙。

3 将螺丝刀插入间隙中，从牙刷柄（图 15）中撬出底盖。

4 握住牙刷柄，使牙刷柄顶部朝下并向下推动牙刷柄，释放牙刷柄（图 16）的内部元件。

5 将螺丝刀插入电路板下面电池连接处的旁边，并拧动以断开连接。

卸下电路板并从塑料电池槽（图 17）中取出电池。

现在可以回收或弃置充电电池，并妥善处理产品剩余部分。

保修和支持

如需信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

保修条款

国际保修条款中不包括以下各项：

- 牙刷头。
- 因使用未授权的备件而造成的损坏。
- 由于误用、滥用、疏忽、改装或擅自修理造成的损坏。
- 正常磨损和撕裂，包括裂口、擦痕、磨损、变色或褪色等。
- 可更替贴纸
- 可更替面板

繁體中文

簡介

感謝您購買本產品。歡迎來到飛利浦的世界！為充分享受飛利浦為您提供的好處，請至下列位址註冊產品：www.philips.com/welcome。

您的孩子現在擁有一支連線的牙刷。與藍牙連線的牙刷會和有趣的刷牙行動裝置應用程式互動，讓孩子喜歡刷牙，並學習正確的刷牙技巧。

一般說明（圖 1）

- 旅行用衛生保護蓋
- 刷頭
- 防滑握柄
- 電源開/關 (on/off) 按鈕附電池充電指示燈
- 可拆式面板搭配更換式貼紙
- 刷牙模式附模式指示燈
- 充電器
- 面板
- 貼紙

重要安全資訊

使用裝置之前，請先仔細閱讀此重要資訊，並保留說明以供日後參考。

危險

- 充電器請勿沾到水。請勿放置或存放於裝水的澡盆、洗臉盆、洗臉槽的上方或附近。請勿將充電器浸入水中或任何液體中。充電器清潔之後，必須完全乾燥，才能再接上電源。
- 本產品不是玩具。請定期檢查刷頭有無裂痕，有裂痕的刷頭可能造成窒息危險。

警告

- 不可更換電源線。如果電源線損壞，請丟棄充電器。
- 請務必以原型號的充電器更換，以免發生危險。
- 充電器不可在室外或高熱表面附近使用。
- 如果產品有任何機件受損（刷頭、牙刷握柄或充電器），請停止使用產品。本產品未包含可維修零件。如果產品損壞，請聯絡您所在國家/地區的客戶服務中心（參見「保固與支援」單元）。
- 本產品不適合供下列人士（包括孩童）使用：身體官能或心智能力退化者，或是經驗與使用知識缺乏者。他們需要有負責其安全的人員在旁監督，或指示產品的使用方法，方可使用。
- 孩童使用本產品須有人監督，以免孩童將本產品當成玩具。

警語

- 請勿將刷頭、握柄或充電器放入洗碗機中清洗。
- 如果您的口腔或牙齦在過去 2 個月內曾動過手術，使用本牙刷之前請先諮詢牙醫師。
- 如果您在使用本牙刷後大量出血，或出血狀況持續超過 1 星期，請諮詢牙醫師。使用飛利浦 Sonicare 時，如果有明顯的不適或疼痛，也請諮詢牙醫師。
- 飛利浦 Sonicare 牙刷符合電磁装置的安全標準。若您裝有心律調節器或其他植入裝置，使用本產品之前請先諮詢醫師或植入手術製造商。
- 若您有醫療方面的顧慮，使用飛利浦 Sonicare 之前請先諮詢醫師。
- 本用品只適用於清潔牙齒、牙齦與舌頭，請勿用於其他用途。如果發生任何不適或疼痛，請停用本產品並就醫。
- 飛利浦 Sonicare 電動牙刷為個人保健用品，不宜在牙醫診所或醫療機構供多名病患使用。
- 若刷頭的刷毛斷裂或彎折，請勿再使用。刷頭請每 3 個月更換，如果有磨損跡象應提前更換。請勿使用非製造商推薦的刷頭。
- 如果牙膏含有過氧化氫、小蘇打或重碳酸鈉（常見於美白用牙膏），在每次刷牙完畢後請以肥皂及清水徹底清潔牙刷頭。這樣可以防止塑膠裂開。請勿在廁所將手機或平板電腦充電。

電磁波 (EMF)

本飛利浦產品符合所有電磁波暴露的相關適用標準和法規。

使用前準備

安裝更換式面板

Sonicare For Kids 隨附 1 個更換面板。

- 1 拆除面板的自黏式背板。
- 2 將面板裝上握柄（圖 2）正面的白色部分。

注意：面板上剪掉的區域必須對應至握柄正面的按鈕。

- 3 將您愛的貼紙貼到面板上，如貼紙片（圖 3）上所示。

重新安裝已移除的面板

- 1 使用溫水清潔面板，也可以使用溫和清潔劑。
- 2 讓面板自然乾燥。
- 3 將面板重新裝上握柄正面的白色部分。

安裝刷頭

- 1 將刷頭對齊，使刷毛朝向握柄正面（圖 4）。
- 2 將刷頭用力下壓到金屬軸上，至到底為止。

注意：刷頭與握柄之間有小小的間隙。

將 Sonicare 充電

- 1 將充電器插上電源插座。

2 將握柄置於充電器（圖 5）上。

電源開/關的按鈕會開始閃爍，且握柄會響兩聲，表示牙刷正在充電。

電量不足

Sonicare 電池電力如果不足，在刷牙週期結束時會聽到 3 聲響聲，電池充電指示燈會快速閃爍 1 分鐘。

電池充滿電

Sonicare 充飽電力後，電池充電指示燈會停止閃爍，恆亮 10 秒鐘再熄滅。

若要讓電池隨時保持完全充電狀態，可在不用的時候，將 Sonicare 放在充電器上。產品充電至少需要 24 小時。

注意：若電池的電力完全耗盡，在刷牙階段結束後或新的刷牙階段即將開始前，握柄將會發出 2 至 5 次響聲。新的刷牙階段不會開始。綠色 LED 燈會快速閃爍，直到握柄進入休眠。

藍牙連線

開始連線程序前，請檢查您的行動裝置是否使用藍牙 4.0 以上的版本。

注意：關於裝置相容性的最新資訊，請參見 App Store 或 Google Play 商店。

建立牙刷連線

- 1 自 App Store 或 Google Play 商店下載飛利浦 Sonicare For Kids 應用程式。
- 2 在啟用應用程式之前，請確實開啟行動裝置的藍牙功能。檢查行動裝置的設定，開啟藍牙功能。
- 3 若要連接牙刷和應用程式，請按壓電源開/關按鈕或刷牙模式按鈕，啟動牙刷。啟動時，牙刷不可置於充電器上。
- 4 開啟飛利浦 Sonicare For Kids 應用程式。
- 5 請遵照行動裝置所顯示的應用程式說明。應用程式將自動與牙刷連接。如果牙刷沒有建立連線，請遵照應用程式所提供的故障排除步驟。
- 6 使用牙刷時，行動裝置請靠近牙刷。行動裝置應放在安全乾燥的地方。

使用本產品

刷牙方法

- 1 沾濕刷毛，擠上少量牙膏。
- 2 將刷毛置於牙齒表面，刷毛角度 (45 度) 稍微朝向牙齒到牙齦之間。這樣才能夠確實刷到（圖 6）整個牙齒表面。
- 3 按下電源開/關按鈕，開啟 Sonicare 電源。
- 4 稍微施力以充分發揮 Sonicare 的效果，將刷牙的工作交由 Sonicare 牙刷為您代勞。請勿用力刷（圖 7）。
- 5 持續稍施力，輕輕刷洗上下排牙齒裡外表面，並將牙刷維持在特定角度，使牙刷刷毛觸碰牙齒到牙齦之間。
- 6 上層後排及下層後排的牙齒，不容易刷到裡外表面。這些地方要多刷一點時間，稍微施力，保持牙刷刷毛碰觸牙齒（圖 8）。
- 7 刷上層及下層牙齒的全部咀嚼面。

- 8 將牙刷維持在特定角度，使牙刷刷毛觸碰牙齒到牙齦之間，刷頭以輕柔緩慢的小動作在齒縫表面來回移動。讓較長的刷毛能深入牙齒間隙。刷牙週期（圖 9）當中，請全程持續此動作。

注意：要讓孩子使用牙刷時能均衡清潔牙齒，請利用 KidPacer 功能將牙齒劃分為 4 個區域（請參閱「功能」單元）。

- 9 開始第一段的刷牙（上層牙齒外側）。一段短的音樂代表將移動至第 2 段（上層牙齒內側）。下一段音樂代表將移動至第 3 段（下層牙齒外側）。

下一段音樂代表將移動至第 4 段（下層牙齒內側）。在刷牙循環（圖 10）結束後，牙刷會自動關閉電源。

下列情形仍可安心使用 Sonicare 電動牙刷：

- 牙齒矯正器（如果裝有矯正器，牙刷刷毛較易磨損）
- 牙齒復形（填補、牙套、牙面鑲嵌）

刷牙模式

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

You and your child now own a Sonicare connected toothbrush. The Bluetooth connected toothbrush interacts with a fun brushing mobile device application to keep your child engaged while learning proper brushing techniques.

General description (Fig. 1)

- 1 Hygienic travel cap
- 2 Brush head
- 3 Handle with soft grip
- 4 Power on/off button with battery charge indicator
- 5 Removable panel with replaceable stickers
- 6 Brushing mode button with mode lights
- 7 Charger
- 8 Panel
- 9 Sticker

Important safety information

Read this important information carefully before you use the device and save it for future reference.

Danger

- Keep the charger away from water. Do not place or store it over or near water contained in a bathtub, washbasin, sink etc. Do not immerse the charger in water or any other liquid. After cleaning, make sure the charger is completely dry before you connect it to the mains.
- This appliance is not a toy. Check brush heads regularly for cracks. Cracked brush heads may present a choking hazard.

Warning

- The mains cord cannot be replaced. If the mains cord is damaged, discard the charger.
- Always have the charger replaced with one of the original type in order to avoid a hazard.
- Do not use the charger outdoors or near heated surfaces.
- If the appliance is damaged in any way (brush head, toothbrush handle or charger), stop using it. This appliance contains no serviceable parts. If the appliance is damaged, contact the Consumer Care Centre in your country (see chapter 'Guarantee and support').
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Do not clean the brush head, the handle or the charger in the dishwasher.
- If you have had oral or gum surgery in the previous 2 months, consult your dentist before you use the toothbrush.
- Consult your dentist if excessive bleeding occurs after using this toothbrush or if bleeding continues to occur after 1 week of use. Also consult your dentist if you experience discomfort or pain when you use the Philips Sonicare.
- The Philips Sonicare toothbrush complies with the safety standards for electromagnetic devices. If you have a pacemaker or other implanted device, contact your physician or the device manufacturer of the implanted device prior to use.
- If you have medical concerns, consult your doctor before you use the Philips Sonicare.
- This appliance has only been designed for cleaning teeth, gums and tongue. Do not use it for any other purpose. Stop using the appliance and contact your doctor if you experience any discomfort or pain.
- The Philips Sonicare toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- Stop using a brush head with crushed or bent bristles. Replace the brush head every 3 months or sooner if signs of wear appear. Do not use other brush heads than the ones recommended by the manufacturer.
- If your toothpaste contains peroxide, baking soda or bicarbonate (common in whitening toothpastes), thoroughly clean the brush head with soap and water after each use. This prevents possible cracking of the plastic.
- Do not charge your phone or tablet in the bathroom.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Preparing for use**Applying the replaceable panel**

The Sonicare For Kids comes with 1 replaceable panel.

- 1 Remove the adhesive backing from the panel.
- 2 Apply the panel to the white section on the front of the handle (Fig. 2).

Note: Make sure you line up the cut-out areas on the panel with the buttons on the front of the handle.

- 3 Apply your favorite sticker to the panel as shown on the sticker sheet (Fig. 3).

Reapplying a panel that has been removed

- 1 Rinse the panel in warm water; you may also use a mild detergent to clean it.
- 2 Let the panel air dry.
- 3 Reapply the panel to the white section on the front of the handle.

Attaching the brush head

- 1 Align the brush head so the bristles point in the same direction as the front of the handle (Fig. 4).
- 2 Firmly press the brush head down onto the metal shaft until it stops.

Note: There is a small gap between the brush head and the handle.

Charging your Sonicare

- 1 Plug the charger into an electrical outlet.
- 2 Place the handle on the charger (Fig. 5).

The battery charge indicator in the power on/off button flashes and the handle beeps twice to indicate that the toothbrush is charging.

Battery low

If the battery charge of your Sonicare is low, you hear three beeps and the battery charge indicator flashes rapidly for 1 minute after the brushing cycle.

Battery fully charged

When the Sonicare is fully charged, the battery charge indicator stops flashing and remains on for 10 seconds before it turns off. To keep the battery fully charged at all times, you may keep your Sonicare on the charger when not in use. It takes at least 24 hours to fully charge the battery.

Note: WHEN THE BATTERY CHARGE IS DEPLETED, THE HANDLE WILL EMIT 2 SETS OF 5 BEEPS AT THE END OF A BRUSHING SESSION OR WHEN A NEW BRUSHING SESSION IS ATTEMPTED. THE NEW BRUSHING SESSION DOES NOT BEGIN. THE GREEN LED WILL ALSO FLASH FAST UNTIL THE HANDLE GOES TO SLEEP.

Bluetooth connectivity

Before you start the connectivity procedure, make sure your mobile device runs on Bluetooth 4.0 or higher.

Note: For the latest information on device compatibility, please visit the App Store or Google Play.

Connecting your toothbrush

- 1 Download the Philips Sonicare For Kids app from the App Store or Google Play.
- 2 Confirm Bluetooth is switched on on your mobile device before you open the app. Check the settings on your mobile device to turn on Bluetooth.
- 3 To connect the toothbrush to the app, turn on the toothbrush by pressing either the power on/off button or the brushing mode button. Make sure the toothbrush is not on the charger when you turn it on.
- 4 Open the Philips Sonicare For Kids app.
- 5 Follow the app instructions displayed on your mobile device. The app automatically connects with the toothbrush. If the toothbrush does not connect, follow the troubleshooting steps provided in the app.
- 6 Keep your mobile device close to your toothbrush when you use your toothbrush. Make sure your mobile device is safe in a dry place.

Using the appliance**Brushing instructions**

- 1 Wet the bristles and apply a small amount of toothpaste.
- 2 Place the toothbrush bristles against the teeth at a slight angle (45 degrees), where the teeth and the gumline meet. This is to ensure that the whole tooth surface is brushed (Fig. 6).
- 3 Press the power on/off button to turn on the Sonicare.
- 4 Apply light pressure to maximize Sonicare's effectiveness and let the Sonicare toothbrush do the brushing for you. Do not scrub (Fig. 7).
- 5 Maintain light pressure and gently brush the outer and inner surfaces of all top and bottom teeth while you keep the toothbrush at an angle such that the toothbrush bristles touch the area where the teeth and the gumline meet.
- 6 The inner and outer surfaces of the upper and lower back teeth are hard to reach. Spend time brushing these areas, apply light pressure and maintain the angle of the toothbrush bristles to the gumline (Fig. 8).
- 7 Brush the chewing surfaces of all the upper and lower teeth.
- 8 While you maintain the angle of the bristles to the gumline, gently move the brush head slowly across the teeth in a small back and forth motion so the longer bristles reach between the teeth. Continue this motion throughout the brushing cycle (Fig. 9).

Note: To make sure your child brushes evenly throughout the mouth, divide the mouth into 4 sections using the KidPacer feature (see chapter 'Features').

- 9 Begin brushing in section 1 (outside top teeth). A short series of tunes indicate it is time to move to section 2 (inside top teeth). At the next series of tunes, move to section 3 (outside bottom teeth). The next series of tunes indicate it is time to move to section 4 (inside bottom teeth). The toothbrush will automatically turn off at end of the brushing cycle (Fig. 10).

Your Sonicare is safe to use on:

- Braces (brush heads wear out sooner when used on braces)
- Dental restorations (fillings, crowns, veneers)

Brushing modes

The Sonicare automatically starts in the default Gentle mode.

- 1 Press the brushing mode button to toggle between modes (Fig. 11). The green mode light indicates the selected mode.
- Gentle mode: Full power mode designed for older/independent brushers. When in Gentle mode, the brushing cycle is set at 2 minutes.
- Extra Gentle mode: Reduced power mode used for training and introducing younger children to the sonic experience. When in Extra Gentle mode, the brushing cycle is initially set at 1 minute and slowly progresses to 2 minutes over time to help young children reach the dentist recommended 2 minutes of brushing cycle.

To manually set the brushing cycle to 2 minutes in Extra Gentle mode, place the handle on the charger and hold down the mode button for 2 seconds. You hear a single beep to indicate the brushing cycle is set to 2 minutes.

To manually re-set the brushing cycle to 1 minute in Extra Gentle mode, place the handle on the charger and hold down the mode button for 2 seconds. You hear a double beep to indicate the brushing cycle is set to 1 minute.

Features**KidPacer**

The Sonicare For Kids uses a short series of tunes to alert the brusher to move to the next brushing quadrant of the mouth and concludes the brushing cycle with a congratulatory tune before it automatically turns off. This ensures that the child's teeth get a thorough, overall clean (see 'Brushing instructions').

Note: Instruct your child to brush until they hear the congratulatory tune and the toothbrush turns off.

Easy-start

The Easy-start feature gently increases the power over the first 14 brushings to help you get used to the brushing with the Philips Sonicare. The Sonicare For Kids comes with the Easy-start feature activated.

Note: Each of the first 14 brushings must be at least 1 minute in length to properly advance through the Easy-start ramp-up cycle.

Activating or deactivating the Easy-start feature

- 1 Place the handle on the charger.
- To activate Easy-start: Press and hold the power on/off button for 2 seconds. You hear 2 beeps to indicate that the Easy-start feature has been activated. To deactivate Easy-start: Press and hold the power on/off button for 2 seconds. You hear 1 beep to indicate that the Easy-start feature has been deactivated.

Note: Using the Easy-start feature beyond the initial ramp-up period is not recommended and reduces Philips Sonicare effectiveness in removing plaque.

Cleaning

Warning: Do not clean brush heads, handle, charger, charger cover or replaceable panel in the dishwasher.

Toothbrush handle

- 1 Remove the brush head and rinse the metal shaft area with warm water. Make sure you remove any residual toothpaste (Fig. 12).

Caution: Do not push on the rubber seal on the metal shaft with sharp objects, as this may cause damage.

- 2 Wipe the entire surface of the handle with a damp cloth.

Brush head

- 1 Rinse the brush head and bristles after each use (Fig. 13).
- 2 Remove the brush head from the handle and rinse the brush head connection with warm water at least once a week.

Charger

- 1 Unplug the charger before you clean it.
- 2 Wipe the surface of the charger with a damp cloth. Make sure you remove any toothpaste or other residue from the charger surfaces.

Storage

If you are not going to use the Sonicare for an extended period of time, unplug the charger from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.

Replacement**Brush head**

- Replace Sonicare brush heads every 3 months to achieve optimal results.
- Use only Sonicare For Kids replacement brush heads.

About product serial number

How do I find my Philips Sonicare for Kids handle serial number? To get your Philips Sonicare for Kids serial number, the handle has to be connected to the Philips Sonicare for Kids app. Once connected, each handle serial number can be found by going into the Sonicare for Kids app and visiting the About section found in the main menu. In the About section you find a list of each handle serial number that is currently associated with a profile in your Sonicare for Kids app. If you do not see your handle listed, reconnect the handle by initiating a new brushing session.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Removing the rechargeable battery

Warning: Only remove the rechargeable battery when you discard the appliance. Make sure the battery is completely empty when you remove it.

To remove the rechargeable battery, you need a flat-head (standard) screwdriver. Observe basic safety precautions when you follow the procedure outlined below. Be sure to protect your eyes, hands, fingers, and the surface on which you work.

- 1 To deplete the rechargeable battery of any charge, remove the handle from the charger, turn on the Philips Sonicare and let it run until it stops. Repeat this step until you can no longer turn on the Philips Sonicare.
- 2 Insert a screwdriver into the slot located in the bottom of the handle and turn counterclockwise until you see a gap between the bottom cap and the handle (Fig. 14).
- 3 Insert the screwdriver into the gap and pry the bottom cap out of the handle (Fig. 15).
- 4 Hold the handle upside down and push down on the shaft to release the internal components of the handle (Fig. 16).
- 5 Insert the screwdriver under the circuit board, next to the battery connections, and twist to break the connections. Remove the circuit board and pry the battery from the plastic carrier (Fig. 17).

The rechargeable battery can now be recycled or disposed of and the rest of the product discarded appropriately.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The terms of the international guarantee do not cover the following:

- Brush heads.
- Damage caused by use of unauthorised replacement parts.
- Damage caused by misuse, abuse, neglect, alterations or unauthorised repair.
- Normal wear and tear, including chips, scratches, abrasions, discolouration or fading.
- Replaceable stickers
- Replaceable panels

简体中文**介绍**

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

我们为您和您的宝宝提供了一款 Sonicare 连接声波震动牙刷。这款蓝牙连接牙刷与一个有趣的刷牙移动设备应用程序配合使用，有助于吸引宝宝的注意力，同时教会宝宝正确的刷牙技巧。

基本说明 (图 1)

- 1 旅行用卫生保护盖
- 2 牙刷头
- 3 软质牙刷柄
- 4 带电池充电指示灯的电源开关按钮
- 5 带可更换贴纸的可拆卸面板
- 6 带模式指示灯的刷牙模式按钮
- 7 充电器
- 8 面板
- 9 贴纸

重要安全信息

使用设备之前，请仔细阅读此重要信息，并妥善保管以供日后参考。

危险

- 使充电器远离水源。切勿将它放置或存放在任何有水的容器的上方或附近，如：浴盆、脸盆、水池等。切勿将充电器浸入水或任何其他液体中。清洁后，确保充电器完全干燥，再将其连接至电源。
- 该产品不是玩具。定期检查牙刷头是否有裂纹。牙刷头出现裂纹可能引发窒息危险。

警告

- 不得更换电源线。如果电源线损坏，请丢弃充电器。
- 应始终使用原装型号的充电器进行更换，以免发生危险。

- 切勿在户外或高温表面附近使用充电器。

- 如果本产品受到任何损坏（牙刷头、牙刷柄或充电器），请勿再使用。本产品不包含任何可维修零部件。如果本产品已损坏，请联系您所在国家/地区的客户服务（请参阅“保修和支持”一章）。

- 产品不建议由有肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与产品使用有关