





Sensiflex replacement brushes

Sonicare toothbrush replacement head

Sensiflex replacement brushes. Replace the brush head of your Philips Sonicare electric toothbrush every 6 months for optimal performance.

Double Cleaning Action

- · Cleans visible teeth surfaces
- · Naturally whiter teeth

Gentle on gums, tough on plaque

Gum Protection system

Sonicare Brush heads HX2014/30

Specifications

Cleaning performance

Brush heads: 4

© 2020 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2020-09-06 Version: 8.2.1

12 NC: 0000 000 00000

www.philips.com

