

RI7915 /00  
RI7915 /01  
RI7920 /90  
RI7920 /91



# User manual

**PHILIPS**  
**WALITA**

**CIC** Centro de Informações  
ao Consumidor  
Grande SP: (11) 2121 0203  
Demais localidades: 0800 701 0203











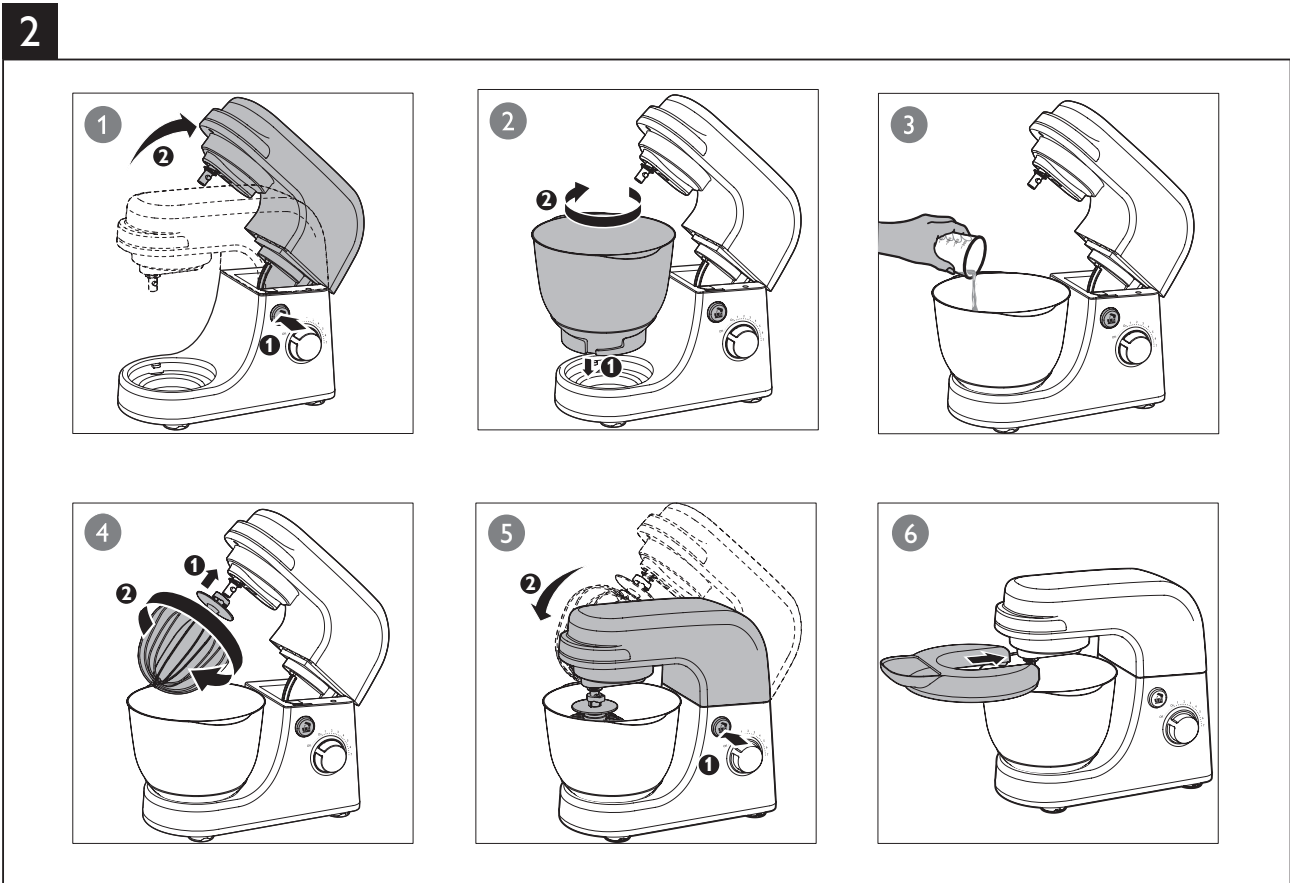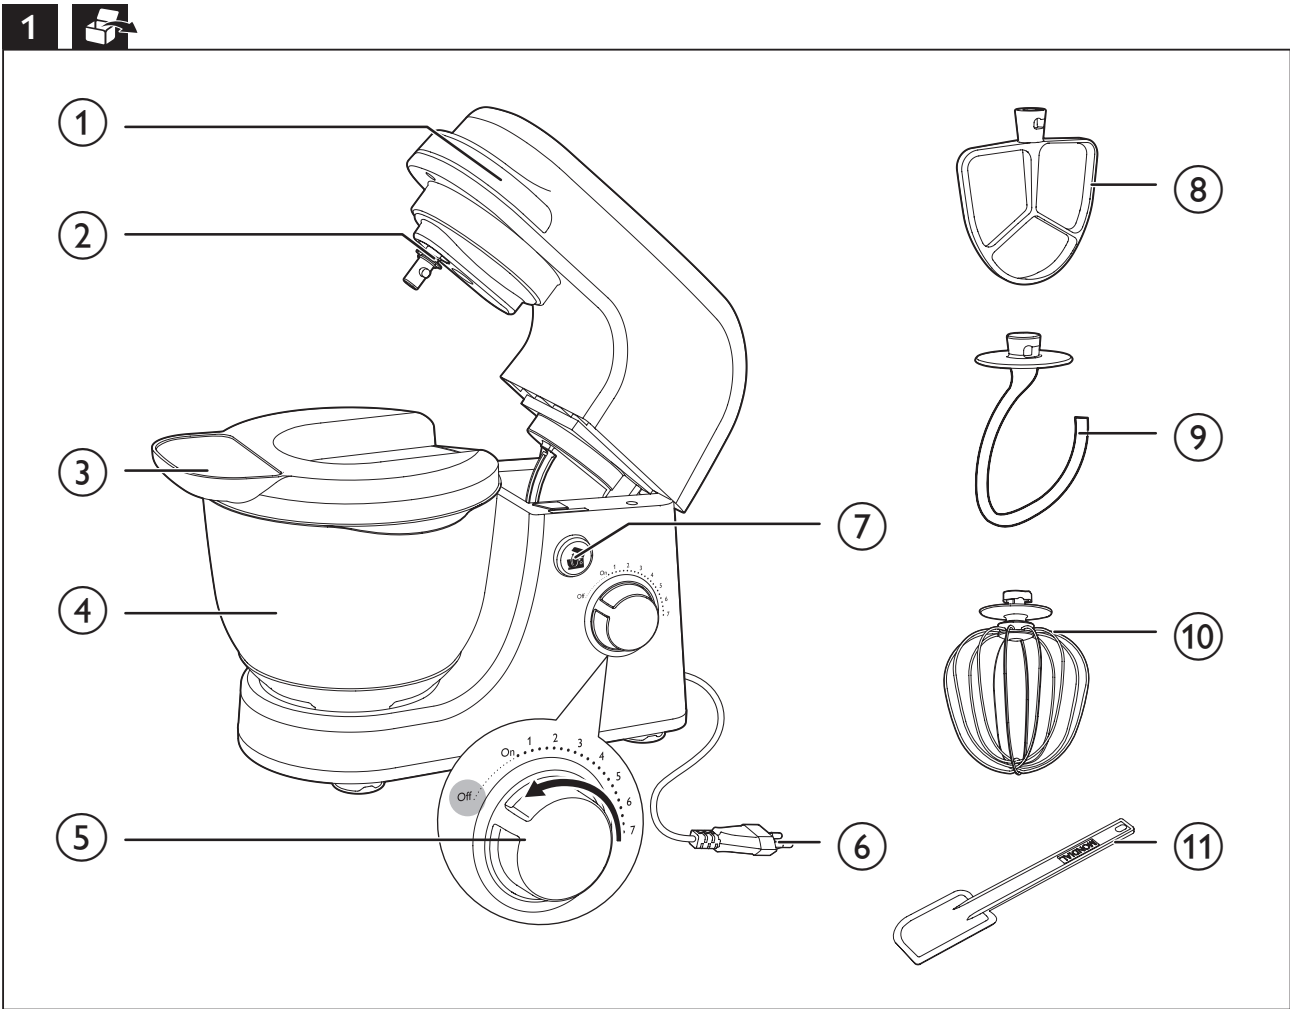


 
Specifications are subject to change without notice  
© 2012 Koninklijke Philips Electronics N.V.  
All rights reserved.

















 



RI7915\_RI7920\_UM\_v1.0



3140 035 31841



3				
		X	X	✓
		✓	✓	✓
		✓	✓	✓
		✓	✓	✓
		✓	✓	✓
		✓	✓	✓
		✓	✓	✓

4				
		750 ml	<5 min	
		QX12	<5 min	
		750 g	3 min	
		750 g	3 min	
		750 g	3 min	
		750 g	3 min	
		750 g	5 min	

## English

### 1 Important

Read this user manual carefully before you use the appliance, and save the user manual for future reference.

#### Warning

- Do not immerse the motor unit in water nor rinse it under the tap.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- If the power cord, the plug, or other parts are damaged, do not use the appliance .
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch the beater, hook or whisk, especially when the appliance is plugged in.
- If the beaters get stuck, switch off the the appliance and unplug it. Then use the spatula to remove the ingredients that block the beaters.
- Before you connect the kitchen machine to the mains, insert the beater, kneading hook, or whisk into the kitchen machine.
- Before you switch on the kitchen machine, lower the beaters, kneading hooks, or whisk into the ingredients.
- Switch off the appliance and disconnect it from the mains if you leave it unattended and before you assemble, disassemble and clean it.

#### Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- This appliance is intended for household use only.
- Do not exceed the quantities and processing time indicated in the user manual.
- Do not exceed maximum running time of 5 minutes to avoid overheating the appliance.
- A minimum of 20 minutes rest time must be maintained between two consecutive cycles.
- Do not use aggressive cleaning agents or abrasive cleaning materials, such as scouring pads.

#### Note

- Noise level = 85 dB [A]

### Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

### Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

### 2 Your kitchen machine

① Motor head

② Beater shaft

③ Protective splash cover

④ Mixing bowl

- Metal bowl (HR7920 & RI7920 only)
- Plastic bowl (HR7915 & RI7915 only)

⑤ Speed selector

⑥ Mains plug

⑦ Tilt switch

⑧ Flat beater

⑨ Dough hook

⑩ Whisk

⑪ Spatula

### 3 Application



#### Warning

- Do not stick knife, metal spoons, fork and so on into bowl when operating.
- The speed selector must be at "OFF" position after use.
- Unplug the power cord before pulling out the beater, dough hook or whisk.



#### Note

- Clean all parts of the Kitchen Machine thoroughly before using it for the first time.
- Make sure unplugged the power cord from the power outlet and turn the speed selector to the "OFF" position before assembling the mixer.
- Make sure the beater or dough hook or whisk is fully inserted into the socket and locked firmly.

1 Put the mains plug into the wall socket.

- Ensure that the speed selector is at the "OFF" position.

2 Add ingredients to mix.

3 Turn the speed selector to the mixing speed you want.

4 Turn the speed selector to "OFF" position and unplug the cord from wall socket when mixing is completed.

5 Press the tilt button.

6 Scrape the excess food particles from the beaters or dough hooks by plastic spatula.

- Use a spatula to aid the mixing by scraping the ingredients from the bowl's wall.

### CERTIFICADO DE GARANTIA

#### ATENÇÃO

Este certificado é uma vantagem adicional oferecida ao consumidor; porém, para que o mesmo tenha validade é imprescindível que seja apresentada a competente NOTA FISCAL de compra do produto.

Com este produto, a Philips tem como objetivo atender plenamente o consumidor, proporcionando a garantia na forma aqui estabelecida.

- Esta garantia é complementar à legal e estipula que todas as partes e componentes, ficam garantidos integralmente contra eventuais defeitos de peças ou de fabricação que venham a ocorrer no prazo de 2 (dois) anos a partir da data de entrega do produto ao consumidor, conforme expresso na nota fiscal de compra.
- Se o consumidor vier a transferir a propriedade deste produto, a garantia ficará automaticamente transferida, respeitando o prazo de validade, contado a partir da 1ª aquisição.
- Constatado o eventual defeito de fabricação, o consumidor deverá entrar em contato com a Assistência Técnica Autorizada mais próxima.
- Nas demais localidades onde não exista Assistência Técnica Autorizada as despesas de transportes do produto correm por conta do consumidor.
- No prazo de garantia as partes, peças e componentes eventualmente defeituosos, serão trocados gratuitamente, assim como a mão de obra aplicada.
- Esta garantia fica extinta se ocorrer uma das hipóteses a seguir:
  - Se o defeito for ocasionado pelo uso não domiciliar ou mau uso e em desacordo com as recomendações do manual de instruções do produto,
  - Se o produto foi examinado, alterado, adulterado, fraudado, ajustado ou consertado por oficina ou pessoa não autorizada pelo fabricante,
  - Se qualquer peça, parte ou componente agregado ao produto, se caracterizar como não original,
  - Se ocorrer a ligação deste produto em tensão diversa da indicada no produto,
  - Se o número de série que identifica o produto, estiver de alguma forma adulterado ou rasurado,
  - Por casos fortuitos ou de força maior; bem como aqueles causados por agentes da natureza.
- Não está coberta por esta garantia a mudança ou alteração de tensão do produto.

IMPORTADO POR PHILIPS DO BRASIL LTDA.  
AV. OTTO SALGADO, 250 - DISTR. INDUSTRIAL CLÁUDIO GALVÃO NOGUEIRA  
VARGINHA - MINAS GERAIS - CEP 37066-440 - CX. POSTAL 311 - CNPJ(MF) 61 086 336/0144-06  
FEITO NA CHINA