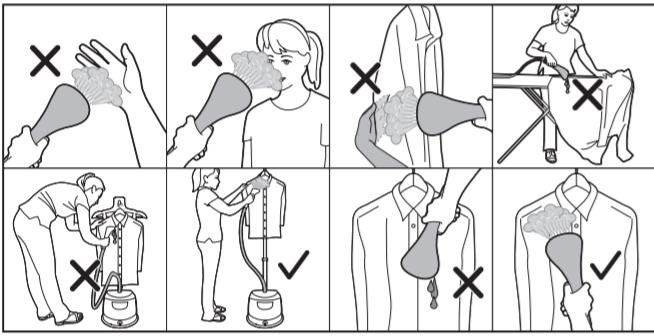


ID

Gambaran umum

① Kepala penyembur uap	⑩ Gantungan
② Selang pasukan uap	⑪ Kait gantungan
③ Tombol uap	⑫ Penahan kepala penyembur uap
④ Alas	⑬ Pembuat lipatan dan sikat
⑤ Kenop de-calc	(GC518, GC524)
⑥ Tangki air	⑭ Sarung tangan
⑦ Tiang	⑮ Papan (GC524)
⑧ Klip kunci tiang	⑯ Penutup papan (GC524)
⑨ Jepit celana	
(GC518, GC524)	

ID Perting

- ID** Jangan menggunakan tangan kosong sebagai alas saat menguapi.
Jangan gunakan alat di meja setrika pada posisi rendah sehingga selang membentuk lekukan U, atau menahan kepala penyembur uap terbalik. Jika tidak, pengembangan pada selang tidak dapat mengalir kembali ke tangki air. Hal ini dapat menyebabkan tidak teraturnya uap, tetesan air dari kepala penyembur uap dan/atau suara mangua.

Indonesia

Pendahuluan
Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di www.philips.com/welcome.

Penting

Bacalah brosur informasi penting terpisah dan petunjuk pengguna dengan saksama sebelum Anda menggunakan alat. Simpan kedua dokumen untuk referensi di masa mendatang.

Alat ini dirancang hanya untuk pemakaian rumah tangga. Pemakaian komersial, pemakaian yang tidak tepat, atau gagal mematuhi petunjuk pemakaian, maka produsen tidak bertanggung jawab dan garansi akan tidak berlaku.

Bahaya

- Jangan selalu diizinkan alat di dalam air atau cairan apapun, jangan pula membilasnya di bawah keran.

Peringatan

- Periksa apakah tegangan listrik yang tertera pada pelat sesuai dengan tegangan listrik setempat sebelum Anda menghubungkan alat ini.

- Hanya colokkan steker ke stopkontak listrik yang memiliki karakter teknis yang sama dengan steker.

- Jangan menggunakan alat jika steker, kabel listrik, selang pasukan uap atau alat menunjukkan kerusakan yang dapat dilihat, atau jika alat pernah terjatuh atau bocor.

- Jika kabel listrik atau selang pasukan uap rusak, maka harus diganti oleh Philips, pusat layanan resmi Philips, atau orang dengan keahlian serupa agar terhindar dari bahaya.

- Alat harus selalu diwasi jika sedang terhubung ke sumber listrik.

- Alat ini dapat digunakan oleh anak-anak usia 8 tahun ke atas dan oleh mereka yang berkelelahan fisik, berkelelahan emosional atau kecakapan mental, atau mereka yang kurang pengalaman dan pengetahuan, bila mereka diberi pengawasan atau petunjuk mengenai cara penggunaan alat yang aman dan mengerti bahayanya.

- Anak-anak dilarang memanaskan alat ini.

- Pembersihan dan perawatan tidak boleh dilakukan oleh anak-anak tanpa pengawasan.

- Jauhkan alat dan kabelnya dari jangkauan anak berusia kurang dari 8 tahun jika alat sedang menyala atau dingin.

- Jangan sampai kabel listrik dan selang pasukan uap mengenai kepala penyembur uap yang panas.

- Alat harus digunakan dan diletakkan di permukaan yang rata, stabil, dan tahan panas.

- Uap bisa merusak atau menyebabkan perubahan warna pada dinding, pelapis pintu atau perabot.

- Berhati-hatilah saat menggunakan alat karena terdapat emisi uap.

- Alat menghasilkan uap yang dapat menyebabkan luka bakar. Gunakan penguap dengan hati-hati. Jangan menggarap uap ke orang atau hewan.

- Jangan menggunakan tangan kosong sebagai landasan pendukung saat menguapi. Tarik si bahan untuk merentangkanannya.

- Jika memiliki salurkuat udara panas, alat dapat menjadi sangat panas dan dapat menyebabkan luka bakar saat disentuh.

PERHATIAN: Permukaan panas

- Permukaan bisa menjadi panas selama pemakaian (untuk penguap dengan simbol 'hot' pada alat).

Perhatian

- Alat ini hanya untuk keperluan rumah tangga.

- Alat hanya boleh dihubungkan ke stopkontak dinding yang telah dibumikan.

- Periksalah kabel listrik dan selang pasukan secara teratur, kalaupun ada kerusakan.

- Ulurkan sepenuhnya kabel listrik sebelum Anda memasang steker ke stopkontak dinding.

- Jangan gunakan alat bila tangki air sedang kosong.

- Jangan tambahkan air berparfum, air dari pengering pakaian, cuka, kanji, zat pembersih kerak, bahan pelembut, bahan kimia pembersih kerak atau bahan kimia lainnya karena dapat menyebabkan kebocoran air, noda cokelat, atau kerusakan pada alat.

- Jangan meletakkan alat penyembur uap di atas meja atau kursi tetapi letakkan alas penyembur uap di lantai selama durasi pemakaian. Jika selang membentuk huruf U, uap akan mengembang di dalam selang. Hal ini menyebabkan uap yang tidak beraturan atau tetesan air keluar dari kepala penyembur uap.

- Cabut steker alat selama mengisi dan membersihkan.

- Setelah selesai menguapi, bersihkan alat isi atau kosongkan tangki air, bersihkan alat dan bilas, pasang atau lepas sikat, atau diamkan alat sebentar, matikan alat dan cabut kabelnya dari stopkontak.

- Pastikan steker penyembur uap sudah dicabut minimal 1 jam dan telah mendingin seluruhnya sebelum Anda menggunakan fungsi De-Calc (jika fungsi ini tersedia).

- Jangan tuangkan air cuka, zat pembersih kerak, atau bahan kimia lain ke dalam bukaan fungsi De-Calc jika fungsi ini tersedia.

Medan elektromagnet (EMF)

Alat Philips ini mematuhi semua standar dan peraturan yang berlaku terkait paparan terhadap medan elektromagnet.

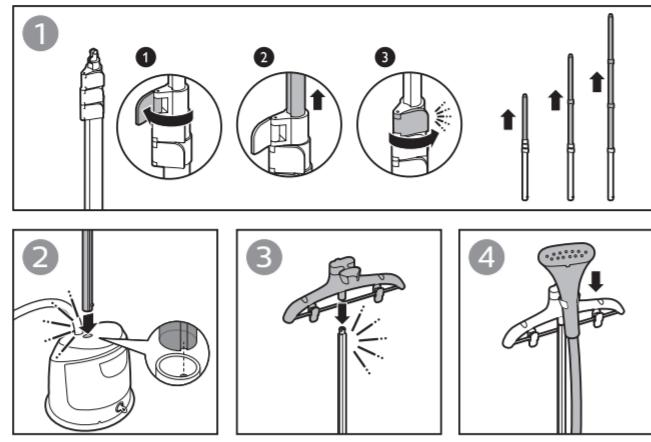
Mendaur ulang

- Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkan ke titik pengumpulan resmi untuk didaur ulang. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.

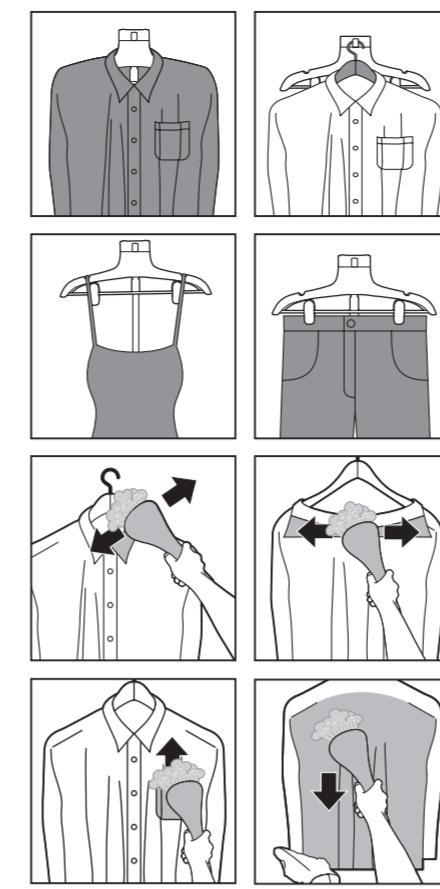
- Patuh peraturan mengenai pengumpulan produk-produk elektrik dan elektronik di negara Anda. Pembuangan produk secara benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

Garansi dan dukungan

Jika Anda membutuhkan informasi atau dukungan, harap kunjungi www.philips.com/support atau baca pamflet garansi internasional terpisah.

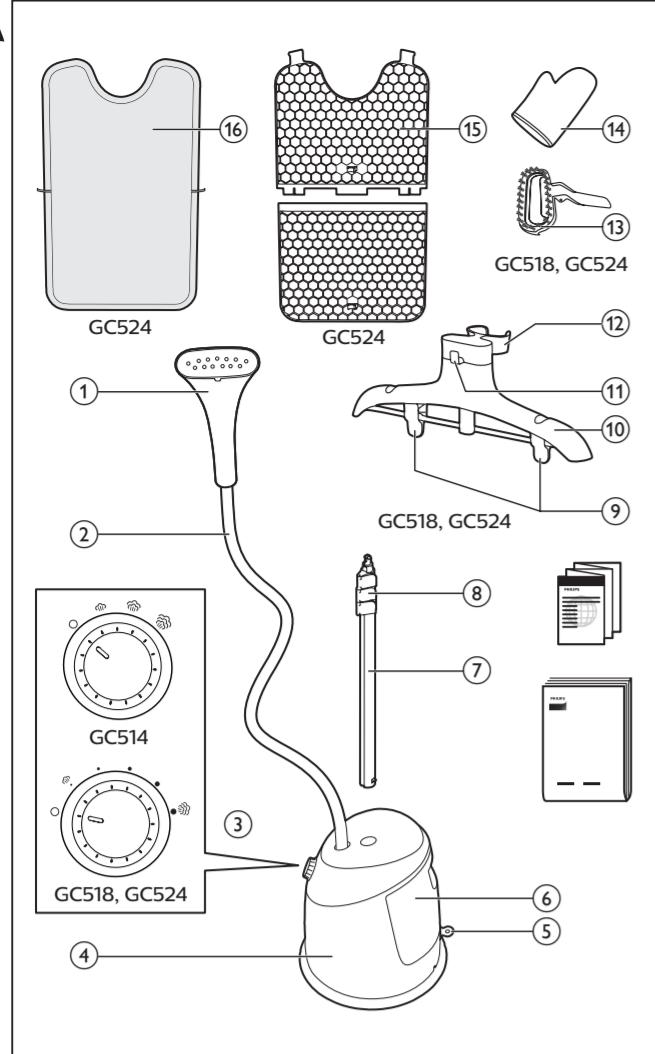
ID Perakitan

ID Buka klip kunci tiang untuk memperpanjang tiang. Masukkan tiang ke alas sampai Anda mendengar bunyi 'klik' yang menandakan tiang sudah terpasang dengan aman pada alas. Tinggi tiang dapat diubah. Pasang gantungan atas ke tiang dan kepala penyembur uap dapat diletakkan ke penahannya.

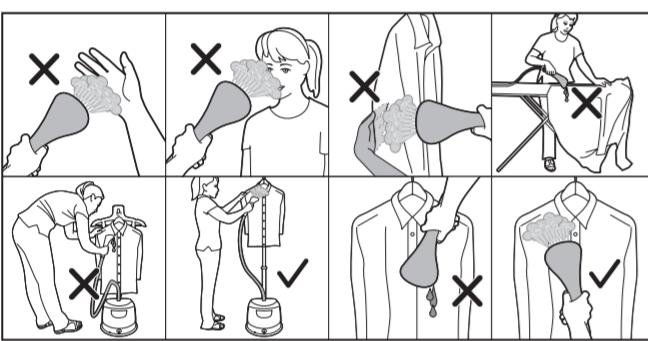
**ID Menguapi pakaian**

PHILIPS

GC514, GC518
GC524

**EN****General description**

- | | |
|-----------------------------|--|
| ① Steamer head | ⑩ Hanger |
| ② Steam supply hose | ⑪ Hanger hook |
| ③ Steam dial | ⑫ Steamer head holder |
| ④ Base | ⑬ Pleat maker and brush (GC518, GC524) |
| ⑤ De-calc knob | ⑭ Glove |
| ⑥ Water tank | ⑮ Board (GC524) |
| ⑦ Pole | ⑯ Board cover (GC524) |
| ⑧ Pole lock clip | |
| ⑨ Pants clip (GC518, GC524) | |

EN Important

- EN** Do not use your bare hand as a supporting surface when you steam.
Do not use the appliance on an ironing board at a low position where the hose forms a U-shape, or do not hold the steamer head upside down. Otherwise, condensation in the hose cannot flow back into the water tank. This may cause irregular steam, water dripping from the steamer head and/or a croaking sound.

English**Introduction**

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference.
This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.
- Warning**
Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.
- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage or if the appliance has been dropped or leaks.
- If the mains cord or the steam supply hose is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance must not be left unattended while it is connected to the supply mains.
- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years of age when the appliance is switched on or cooling down.
- Do not let the mains cord and steam supply hose come into contact with the hot steamer head.
- The appliance must be used and placed on a flat, stable, heat resistant surface.
- Steam may damage or cause discolouration of certain wall, door finishes or furniture.
- Care should be taken when using the appliance due to the emission of steam.
- Your appliance gives off steam which can cause burns. Handle your steamer carefully. Never direct the steam towards persons or animals.
- Do not use your bare hand as a supporting surface when you steam. Pull the sides of the garment to stretch it.
- If the appliance has a hot air outlet, it can be extremely hot and may cause burns when touched.

CAUTION: Hot surface

- Surfaces are liable to get hot during use (for steamer with hot symbol marked on the appliance).
- Caution**
This appliance is intended for household use only.
- Only connect the appliance to an earthed wall socket.
- Check the mains cord and the supply hose regularly for possible damage.
- Fully unwind the mains cord before you plug it in the wall socket.
- Do not use the appliance when the water tank is empty.
- Do not add perfumed water, water from the tumble dryer, vinegar, starch, descaling agents, ironing aids, chemically descaled water or other chemicals as they may cause water leakage, brown staining or damage to your appliance.
- Do not place the steamer base on top of table or chair but rather keep the steamer base on the floor during usage duration. If the hose forms a U shape, steam condenses in the hose. This causes irregular steam or water droplets to come out of the steamer head.
- Unplug the appliance during filling and cleaning.
- When you have finished steaming, clean the appliance, fill or empty the water tank, perform cleaning and rinsing, attach or detach the brush attachment, or leave the appliance even for a short while, switch off the appliance and remove the mains plug from the wall socket.
- Make sure that the steamer has been unplugged for at least 1 hour and has completely cooled down before you use De-Calc function (if the function is available).
- Do not pour water, vinegar, descaling agents or other chemicals into the opening of the De-Calc function (if the function is available).

Electromagnetic fields (EMF)

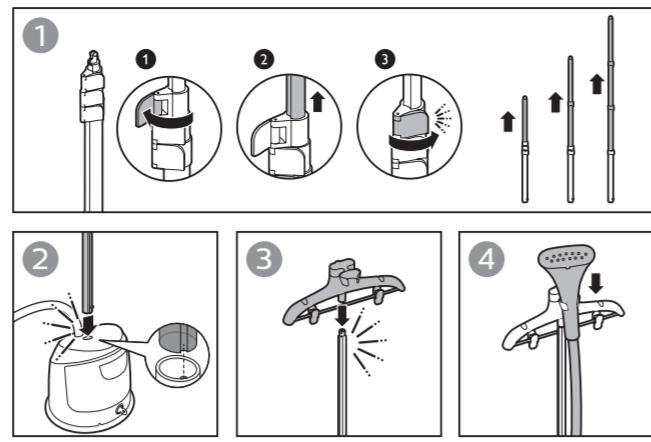
This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

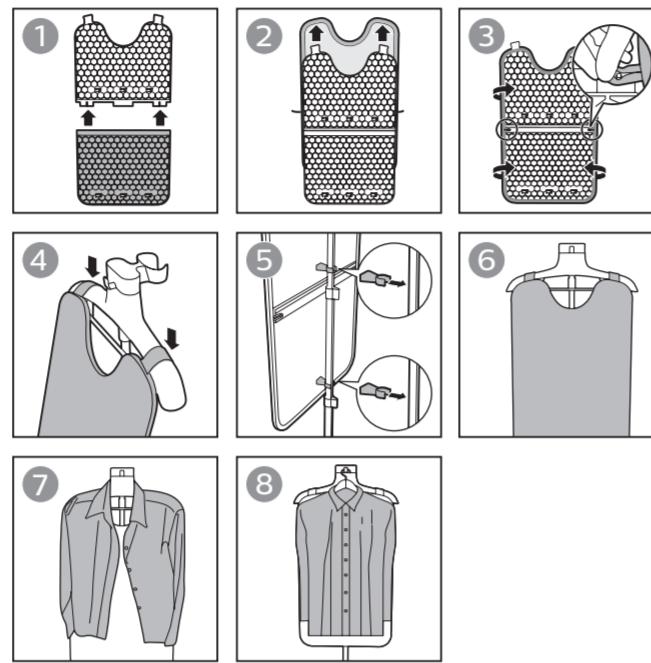
- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

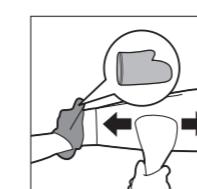
EN Assembly

- EN** Open the pole lock clip to extend the pole. Insert the pole to the base until you hear a 'click' sound to indicate pole is securely locked to its base. Pole height can be adjusted accordingly. Dock the hanger top to the pole and the steamer head can be docked to its holder.

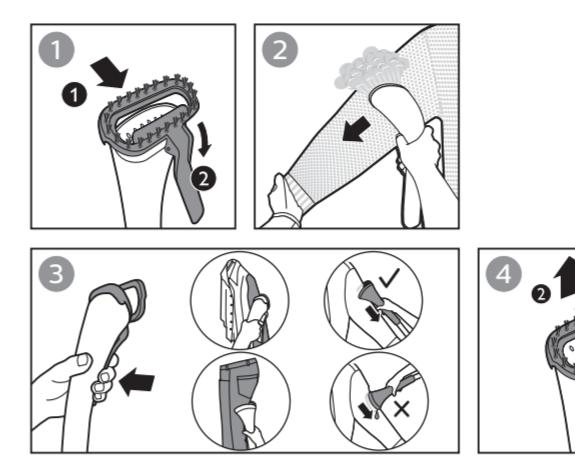
EN Accessory - Board (GC524)

- EN** The board provides backing support to enhance the steaming performance. Wear the board cover onto the board. Tighten the board cover by hooking the side elastic band to the nearest guide provided. Place the board onto the hanger and fit it to the pole.

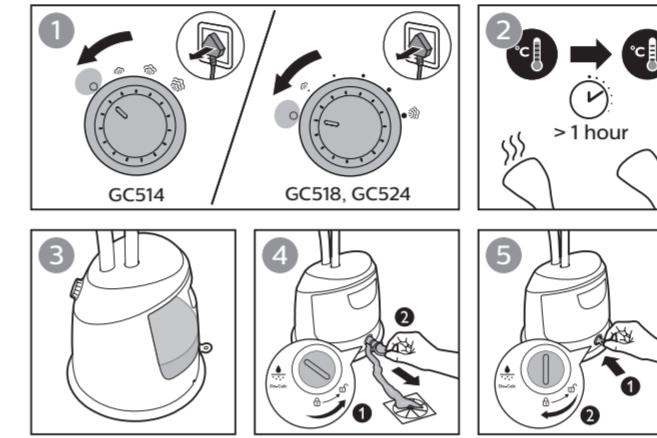
Note: Do not wash the board cover as it may damage the foam material.

EN Accessory - Glove

- EN** Put the glove on the hand you are using to hold a garment. The glove protects your hand against the steam from the steamer head.

**GC518
GC524**

- EN** **Caution:** Do not attach or detach the brush/pleat maker while the steam is on or the steamer head is hot.

EN Cleaning and maintenance

- EN** To maintain optimal steam performance and prolong the lifetime of the appliance, it is important to remove scales and impurities inside the appliance regularly. Therefore, it is recommended to perform the de-calc process at least once a month.

Before you start de-calc process, make sure there is some water in the water tank.

Unplug the appliance and let it cool down. Remove De-Calc knob to drain the water out. Tighten De-Calc knob back to its place once completed.

?

EN	Problem	Possible cause	Solution
	The appliance produces no steam or irregular steam.	The steamer has not heated up sufficiently.	Let the appliance heat up for approximately 45 seconds.
	Steam has condensed in the hose.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.	
	Low water level in the tank or the tank is not inserted properly.	Refill the water tank and insert it properly.	
	Too much scale has built up in the appliance.	Perform calc-clean process. Refer to 4 section.	
	Water droplets drip from the steamer head or the appliance produces a croaking sound.	You have left the steamer head or the steam supply hose in horizontal position for a long time.	Lift the steamer head to straighten the hose vertically. This allows any condensation to flow back.
	An excessive amount of water drops out of the steamer head when the appliance is heating up.	The water in the appliance is dirty or has been left inside the appliance for a long time.	Perform calc-clean process. Refer to 4 section.
	Water leaks out from the steamer base.	You have not closed the water tank cap or de-calc knob securely.	Close the water tank cap or de-calc knob securely.
	The water tank is not inserted properly.	The water tank is not inserted properly.	Insert the tank properly.

SETRIKA UAP VERTIKAL

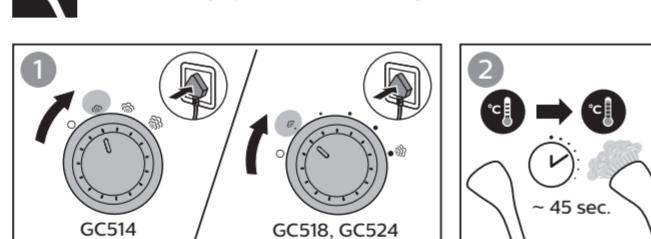
Model: GC518, GC524

Tegangan: 220-240V; 50-60Hz; 1350-1600W

Negara Pembuat: Cina

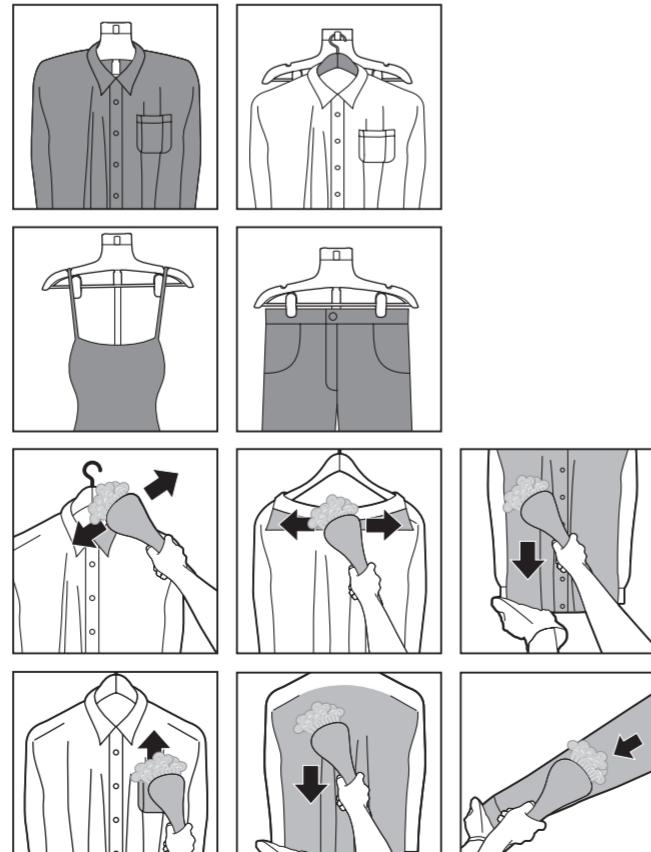
Diimpor oleh: PT Philips Indonesia Commercial
Jl. Buncit Raya kav 99,
Jakarta 12510, Indonesia

Reg. No: I.38.PIC2.01215.0517

EN Heating up and steam setting

- EN** Multi steam settings are provided to save water and energy. You can increase the steam setting for more steam power at any point of time. The appliance is safe to use on all fabrics at any setting.

Note: The steam supply hose becomes warm during steaming. This is normal.

EN Steaming clothes

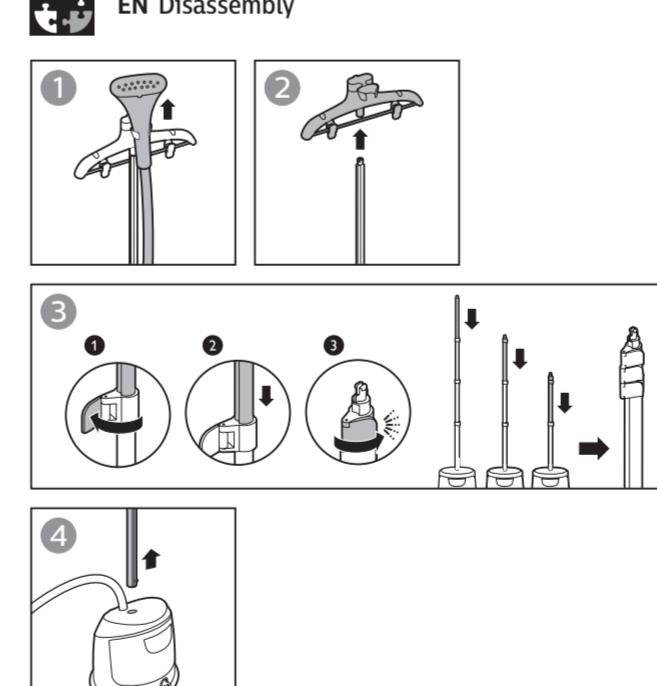
- EN** You can either wear over the garment onto the hanger or directly hang a garment on a hanger onto the hook provided.

When you are steaming, press the steamer head against the garment, and pull the sides of the garment with your other hand to stretch it.

Move the steamer head horizontally along the collar.

For shirt pockets, move the steamer head upwards against the fabric.

To steam sleeves, start from the shoulder area and move the steamer head downwards. Steam while you pull the sleeve diagonally down with the other hand.

EN Disassembly

- EN** Remove the steamer head from its docking and pull out the hanger top. Open the pole lock clip and press the pole down in each segment. Close the pole lock clip back to its place. Remove the pole from its base.

Note: Ensure that pole is closely collapsed without any gap in between pole lock clips to remove the pole from its base.