**PHILIPS**

产品：飞利浦加热破壁料理机
型号：HR2087
额定电压：220 V ~
额定频率：50 Hz
电机功率：1000 W
加热功率：800 W
生产日期：请见产品本体
产地：中国广东中山

飞利浦（中国）投资有限公司
中国上海市静安区灵石路 718 号 A1 框
全国客户服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.19-2008, GB4706.30-2008 制造



© 2019 Koninklijke Philips N.V.
All rights reserved.

发布日期：2019-05-09

保留备用

3000 025 76994

English**1 Important**

Read this important information carefully before you use the appliance and save it for future reference.

Warning

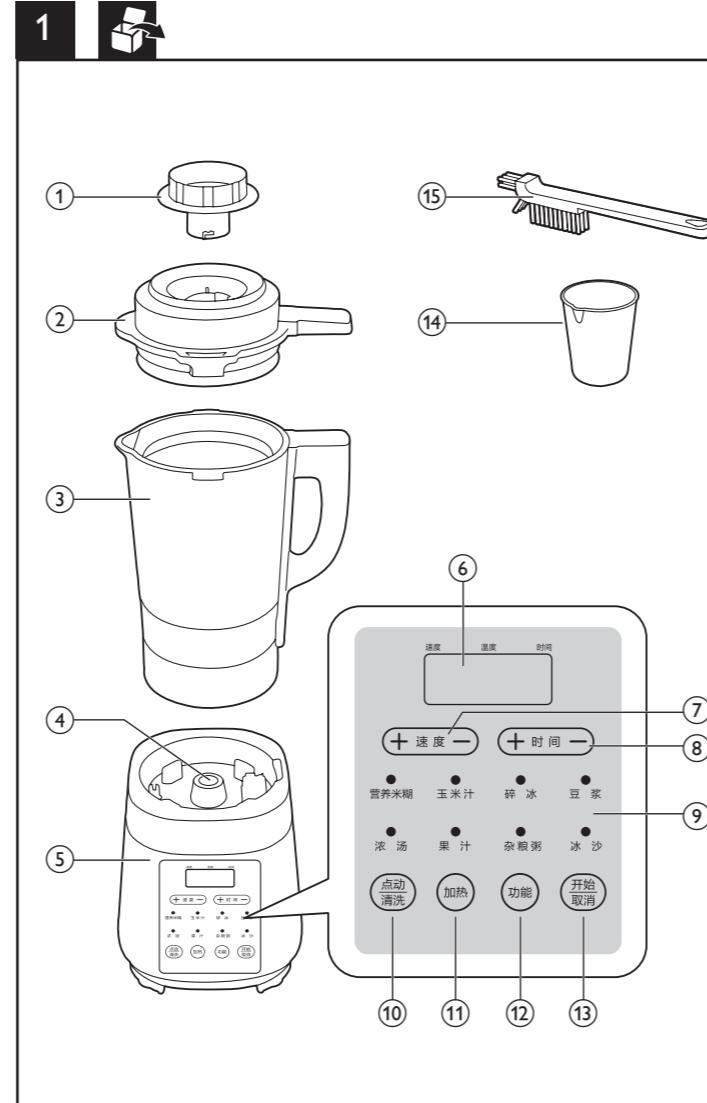
- Do not misuse the appliance to avoid potential injury.
- This appliance is intended to be used in household only.
- Do not touch the sharp blades when the appliance is plugged in. If the blades get stuck, unplug the appliance before you remove the ingredients. Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Switch off and unplug the appliance from the power supply before:
 - Removing it from the stand, changing accessories or approaching parts that move in use.
 - Assembling, disassembling or cleaning it.
 - It is left unattended.
- Do not immerse the appliance in water or any other liquid.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord, housing, lid or blender jar are damaged or has visible cracks. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Make sure the lid is properly assembled to the blender jar before you use the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Be careful if hot liquid is poured into the blender jar as it can be ejected out of the appliance due to a sudden steaming.
- Never assemble or disassemble the blender jar to the motor base while the power is on.
- Read the cleaning procedure from "User Manual" before use.
- Be careful that the heating element surface is subject to residual heat after use.

Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid. Only connect the appliance to an earthed wall socket.
- Do not exceed the maximum indication on the blender jar.
- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Never fill the blender jar with ingredients hotter than ambient temperature. Avoid to pour cold water into the blade unit and blender jar immediately after use. Wait until it has been fully cooled.
- The appliance can only be switched on if the blender jar is assembled on the motor base correctly.
- Do not touch the heating element and blade after use. Let it cool down for approx. 30 minutes before cleaning or disassembly.

Cooking**Warning**

- Do not overfill the blender jar, boiling water may be ejected.
- Do not remove the lid while the water is boiling.

**English****1 Overview (Fig. 1)****Main unit**

① Exhaust lid	④ Driving shaft head
---------------	----------------------

② Blender lid	⑤ Motor base
---------------	--------------

Control panel

⑥ LED display: displays speed, temperature and time.
--

⑦ Speed button (-/+)	⑧ Timer button (-/+)
----------------------	----------------------

Preset program

Nutritious congee	Soup
-------------------	------

Corn juice	Fruit juice
------------	-------------

Crushed ice	Grain congee
-------------	--------------

Soy milk	Smoothie
----------	----------

⑩ Pulse/Clean button	⑬ Start/cancel button
----------------------	-----------------------

⑪ Heating button	⑭ Measuring cup
------------------	-----------------

⑫ Preset program button	⑮ Brush
-------------------------	---------

简体中文**1 概览(图1)****主机**

① 排气盖	④ 驱动头
-------	-------

② 杯盖	⑤ 主机底座
------	--------

控制面板

⑥ 数码屏幕：显示加工速度，温度和时间

⑦ 速度按钮 (-/+) ⑧ 时间按钮 (-/+)

预设程序

营养米糊	浓汤
------	----

玉米汁	果汁
-----	----

碎冰	杂粮粥
----	-----

豆浆	冰沙
----	----

⑩ 点动 / 清洗按钮	⑬ 开始/取消按钮
-------------	-----------

⑪ 加热按钮	⑭ 量杯
--------	------

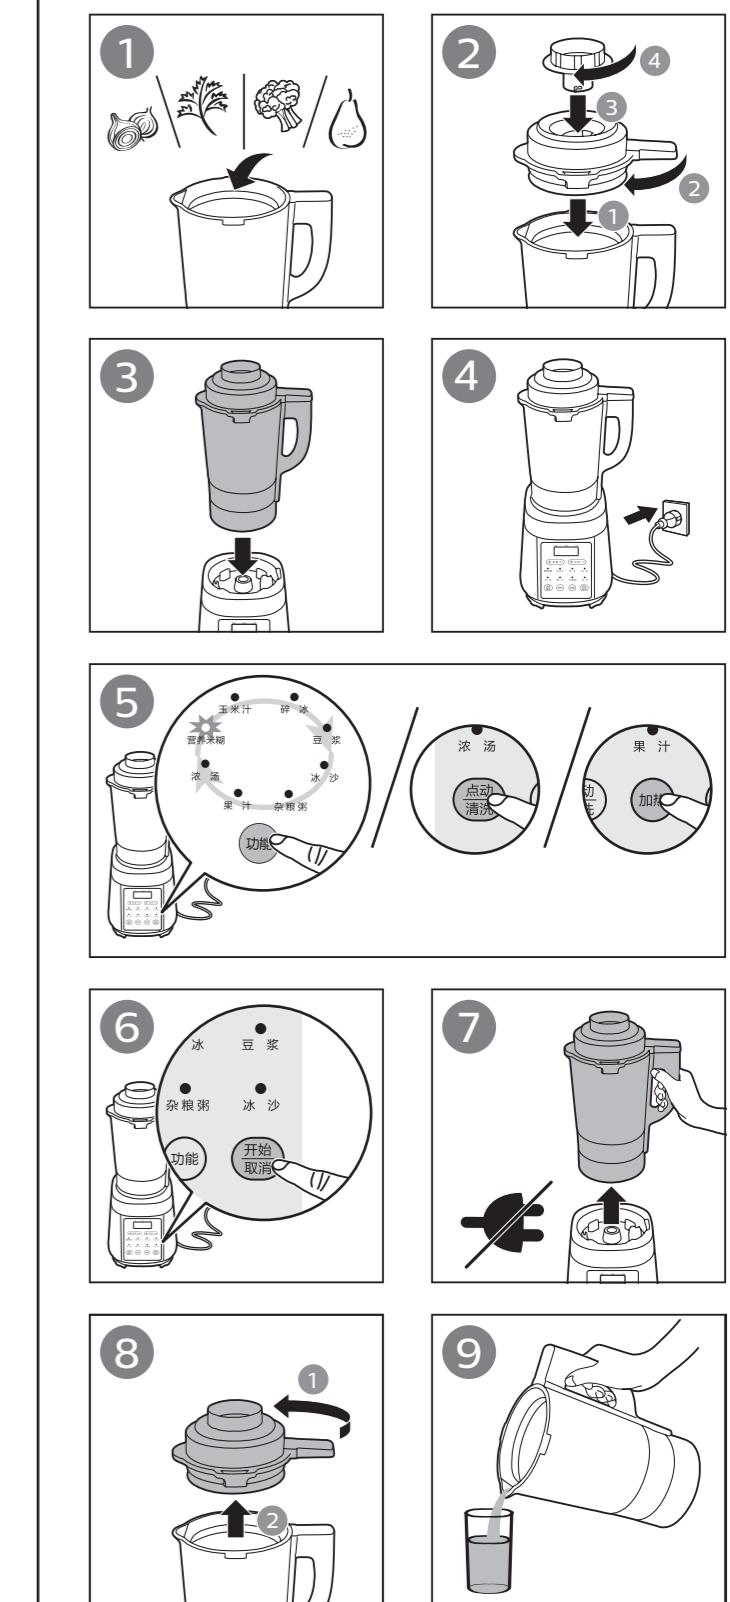
⑫ 预设功能按钮	⑮ 毛刷
----------	------

2 ***English****Before first use**

Thoroughly clean the parts that will come in contact with food before you use the appliance for the first time (see "Cleaning" in Fig. 5).

简体中文**首次使用之前**

首次使用产品之前，请彻底清洗与食品接触的部件（参见图5中的“清洁”一章）。

3 功能 加热 点动 清洗**English****Preset cooking mode (Fig. 3)**

- Add ingredients to the blender jar.
- Assemble the exhaust lid and blender lid.
- Fix the blender jar to the motor base.
- Plug in the appliance.**
 - You will hear a beep and the appliance is ready to use.
- Press preset program button to toggle through preset programs.
 - When a preset program is selected, the LED of this program will light up.
- Press start/cancel button to start cooking.
 - The blender starts processing.
 - To stop processing, press the start/cancel button again.
 - When cooking is completed, you will hear a few beeps. "End" is shown on the LED display.

简体中文**1 重要事项**

使用产品之前, 请仔细阅读本重要信息, 并妥善保管以供日后参考。

警告

- 请勿错误地使用本产品, 以免潜在的人身伤害。
- 本产品仅限于家用。
- 产品通电时切勿触摸锋利的刀片。如果刀片被卡住, 请先拔下电源插头再清除原料。清空搅拌杯和清洁时要非常小心。
- 执行以下操作之前请关闭产品并拔出电源插头:
 - 将其从底座中取下、更换附件或接触在使用时会活动的部件。
 - 安装、拆卸或清洁。
 - 产品处于无人看管状态。
 - 不要将本产品浸入水中或任何其它液体中。
 - 在将产品连接电源之前, 请先检查产品所标电压与当地的供电电压是否相符。
 - 如果插头、电源线、外壳、盖子或搅拌杯损坏或有明显破裂, 请勿使用产品。如果电源线损坏, 为了避免危险, 必须由飞利浦、飞利浦特约维修中心或有同等维修资格的专业人员来进行更换。
 - 使用产品之前, 确保杯盖已盖好。
 - 儿童不得使用本产品。应将产品及其线缆置于儿童触不到的地方。

内置安全锁

此功能可确保只有将搅拌杯正确安装在马达装置上, 才可以开启产品电源。如果搅拌杯和杯盖安装正确, 则内置安全锁将解锁。如果杯盖未安装到位, 显示屏将显示EO1(故障提示)。

安全功能

本料理机配备了一项安全功能, 可以防过载。如果发生过载, 料理机将自动激活保护并停止工作。如果出现这种情况, 拔掉产品插头并使其冷却 15 分钟。在开始操作前, 请取出原料并清洁搅拌杯。

防干烧保护

本产品具有防干烧保护功能: 如果产品中没有液体或液体不足, 而您意外打开了产品, 则本产品将自动关闭, 并在显示屏上显示过热。让产品冷却 15 分钟, 然后拔出其插头, 产品即可再次使用。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

弃置产品时, 请不要将它与一般生活垃圾一同丢弃, 应将其交给官方指定的回收中心。这样做有利于环保。请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

2 保修与服务

如果您需要服务或信息, 或者有任何疑问, 请访问飞利浦网站: www.philips.com。您也可与您所在国家/地区的飞利浦客户服务联系 (可从全球保修卡中找到其电话号码)。如果您所在的国家/地区没有飞利浦客户服务中心, 请向当地的飞利浦经销商求助。

