

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the appliance in water.
- Do not insert oversized foods and metal foil packages into the toaster, as this may cause fire or electric shock.

Warning

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let the appliance operate unattended.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Do not operate the appliance under or near curtains or other flammable materials or under wall cabinets, as this may cause fire.
- Do not place the dust cover (specific types only) or any other object on top of the toaster when the appliance is switched on or when it is still hot, as this can cause damage or fire.
- To avoid the risk of fire, frequently remove crumbs from the crumb tray. Make sure the crumb tray is correctly placed.
- Immediately unplug the toaster if fire or smoke is observed.
- Keep the mains cord away from hot surfaces.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance is only intended for toasting bread. Do not put any other ingredients in the appliance, as this may lead to a hazardous situation.

Caution

- Do not let the mains cord hang over the edge of the table or worktop on which the appliance stands.
- Avoid touching the metal parts of the toaster as they become very hot during toasting. Only touch the controls and lift the appliance by its plastic body.
- Do not place the toaster on a hot surface.
- Only connect the appliance to an earthed wall socket.
- Always unplug the appliance after use.
- The toaster is intended for household use only and may only be used indoors. It is not intended for commercial or industrial use.
- If a slice of bread gets stuck inside the toaster, unplug the appliance and let it cool down before you try to remove the bread. Do not use a knife or a sharp tool, as these may cause damage to the heating elements.
- The warming rack is only intended for warming up rolls or croissants. Do not put any other ingredients on the warming rack, as this may lead to a hazardous situation.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

General description (Fig. 1)

- A** Warming rack lever
- B** Crumb tray
- C** Warming rack
- D** Toasting slots
- E** Stop button
- F** Toasting lever
- G** Warming button
- H** Defrost button
- I** Reheat button
- J** + and - buttons to select browning setting
- K** Browning setting lights
- L** Cord storage brackets


Getting started

- 1 Remove any stickers and wipe the body of the toaster with a damp cloth.
- 2 Before you use the appliance for the first time, we advise you to let the appliance complete a few toasting cycles without slices of bread on the highest browning setting in a properly ventilated room.

This burns off any dust that may have accumulated on the heating elements and prevents unpleasant smells during toasting.

Using the toaster

- 1 To adjust the length of the cord, wind part of it round the brackets in the base of the appliance (Fig. 2).
- 2 Put the appliance on a stable and flat surface, away from curtains and other combustible materials.

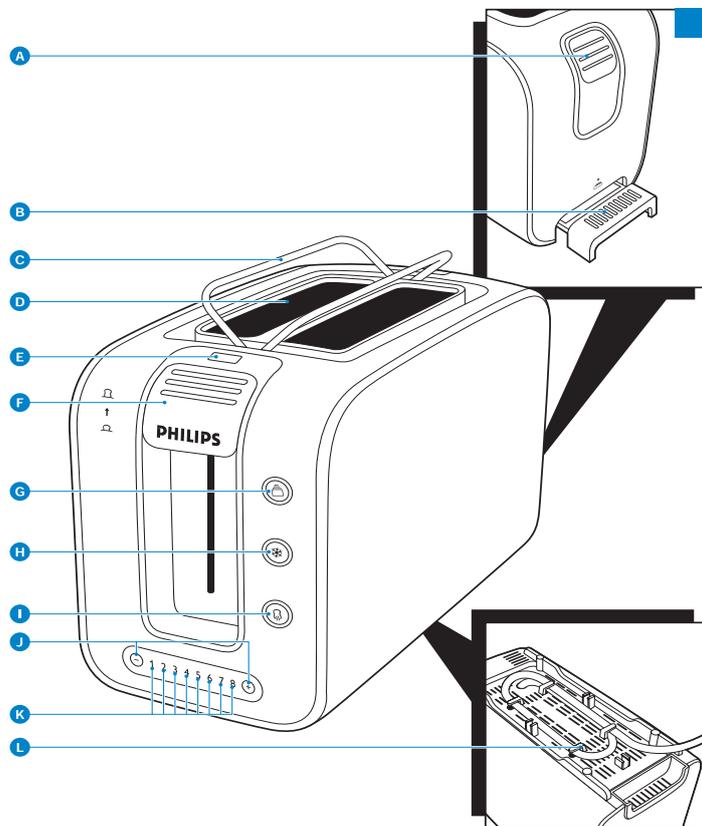

3 Put the plug in the wall socket.

- ▶ The browning setting lights light up quickly from left to right and back a few times until the fourth browning setting light lights up continuously. This is the default browning setting.
- ▶ If the toaster has not been used for 10 minutes, it goes into sleep mode. In this case, all indication lights go off. To reactivate the toaster, press any button. The light of the last selected browning setting then lights up again.

Toasting bread

Never let the toaster operate unattended.

- 1 Put one or two slices of bread in the toaster (Fig. 3). For the best toasting results, always put the slices in the centre of the slots.
- 2 Press the + or - button to select the desired browning setting. (Fig. 4)
 - Select a low setting (1-2) for lightly toasted bread and a high setting (5-8) for darkly toasted bread.
 - To select a lower browning setting for lighter toast, press the - button one or more times
 - To select a higher browning setting for darker toast, press the + button one or more times.
- ▶ The light of the selected browning setting lights up.
- 3 Push down the toasting lever to switch on the appliance. (Fig. 5) The toasting lever only stays down when the appliance is connected to the mains.
 - ▶ The stop button lights up.
 - ▶ When the toast is ready, it pops up and the toaster switches off automatically.

The metal parts of the toaster become hot during toasting. Do not touch them.

Note: You can stop the toasting process and pop up the bread at any time by pressing the stop button on top of the toaster (Fig. 6).

- 4 To adjust the browning setting during toasting, press the + button for darker toast or the - button for lighter toast.
 - ▶ The light of the selected browning setting lights up.

- 5 To remove smaller items, move the toasting lever upwards a little further when the bread pops up.

If bread gets stuck inside the toaster, remove the plug from the wall socket and let the appliance cool down completely. Then carefully remove the bread from the toaster. Do not use a knife or another sharp metal tool to do this and do not touch the metal parts inside the toaster.

Toasting frozen bread

- 1 Put one or two slices of frozen bread in the toaster.
- 2 Select the desired browning setting (see section 'Toasting bread').
- 3 Push down the toasting lever.
- 4 Press the defrost button (Fig. 7).
 - ▶ The defrost button lights up.

Note: Toasting frozen bread takes longer than toasting defrosted bread.

Reheating toasted bread

The toaster has an automatic reheat function that reheats toast without making it browner.

- 1 Put the toasted bread back into the toaster.
- 2 Push down the toasting lever.
- 3 Press the reheat button (Fig. 8).
- ▶ The reheat button lights up.

Note: When you use the reheat function, you cannot change the browning setting.

Warming up rolls and croissants

- 1 Push down the warming rack lever to unfold the warming rack (Fig. 9).

Never put the items to be heated up directly on top of the toaster. Always put them on the warming rack to prevent damage to the toaster.

- 2 Put the rolls or croissants on the warming rack.

Do not heat up more than 2 items at a time.

- 3 Push down the toasting lever.

- 4 Press the warming button (Fig. 10).

▶ The warming button lights up.

If you want to warm up the rolls or croissants on both sides, turn them after the toaster has switched itself off. Then switch on the toaster again by pushing down the toasting lever and pressing the warming button.

Note: When you use the warming function, you cannot change the browning setting.

Note: Before every new warming cycle, you have to push down the toasting lever and press the warming button again.

Cleaning

Never immerse the appliance in water.

- 1 Unplug the appliance and let it cool down.

- 2 Clean the appliance with a damp cloth.

Do not use abrasive cleaning agents or materials.

- 3 Slide the crumb tray out of the appliance and empty it to remove crumbs from the appliance (Fig. 11).

Do not hold the appliance upside down and do not shake it to remove the crumbs.

Disposal

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 12).

Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Troubleshooting

If a problem occurs and you are unable to solve it with the information below, contact the Customer Care Centre in your country (see chapter 'Guarantee and service').

Problem	Solution
The toaster does not work.	Make sure the plug is properly inserted into the wall socket. If the toaster still does not work, take it to a service centre authorised by Philips for examination.
Bread gets stuck in the appliance.	Unplug the appliance and let it cool down. Carefully remove the slice or slices from the toaster. Take care not to damage the heating elements while you remove the slice or slices of bread. Never use a metal object for this purpose.
The toast is too dark/too light.	You have selected a too high or too low browning setting. Select a lower setting next time if your toast is too dark and a higher setting if your toast is too light.
Smoke comes out of the toaster.	You have selected a too high browning setting for the type of bread inserted. Press the stop button to stop the toasting process.
The mains cord is damaged.	If the mains cord of this appliance is damaged, you must always have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

I cannot change the browning setting when I use the warming function. This is normal, because the toaster has a fixed temperature setting for warming up rolls and croissants, which guarantees a perfect end result.

Register your product and get support at
www.philips.com/welcome

HD2686



PHILIPS




100% recycled paper
100% papier recyclé



www.philips.com

4222.200.0128.2

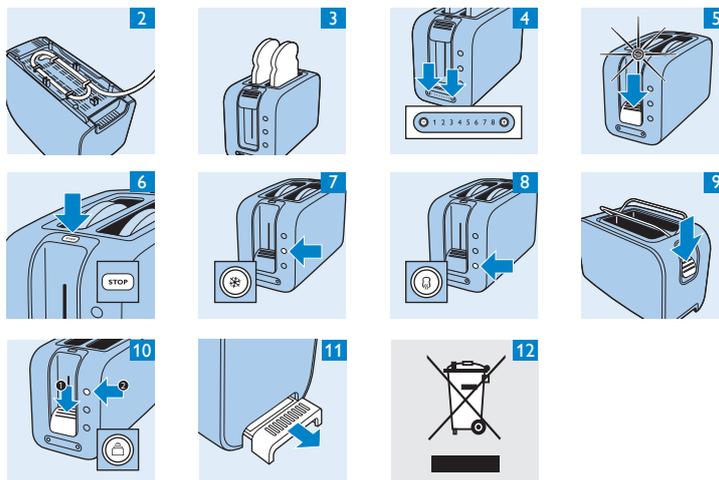

Problem	Solution
Only one side of my roll or croissant is warm.	Turn your roll or croissant over and warm it up again. Follow the instructions in section 'Warming up rolls and croissants'.
I cannot change the browning setting when I use the reheat function.	This is normal, because the toaster has an automatic reheat function that reheats toast without making it browner. However, if you reheat the toasted bread right after it has popped up, it will become slightly browner.
The bread pops up almost immediately without having been toasted.	Make sure you push the toasting lever down all the way. If the bread still does not stay down, take the appliance to a service centre authorised by Philips for examination.