 
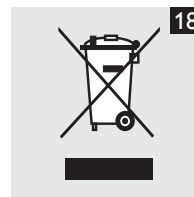 
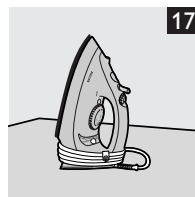 
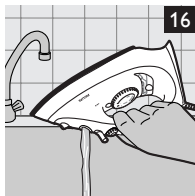 
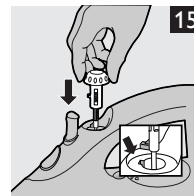 
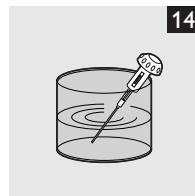 
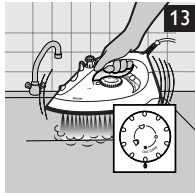 
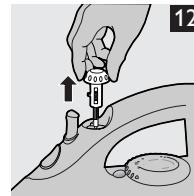 
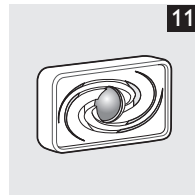 
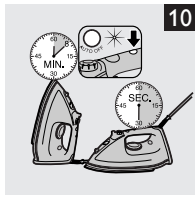 
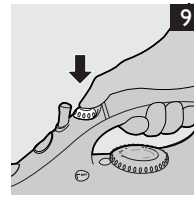 
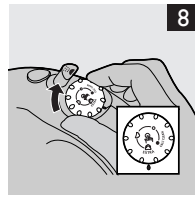 
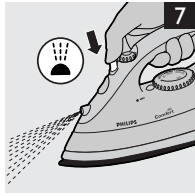 
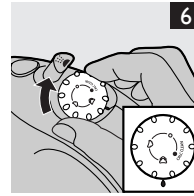 
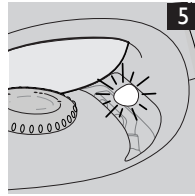 
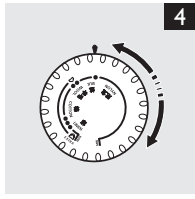 
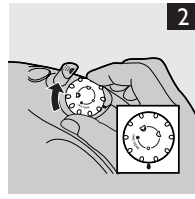 


Comfort LongLife

GC1630, GC1621, GC1620,
GC1615, GC1610

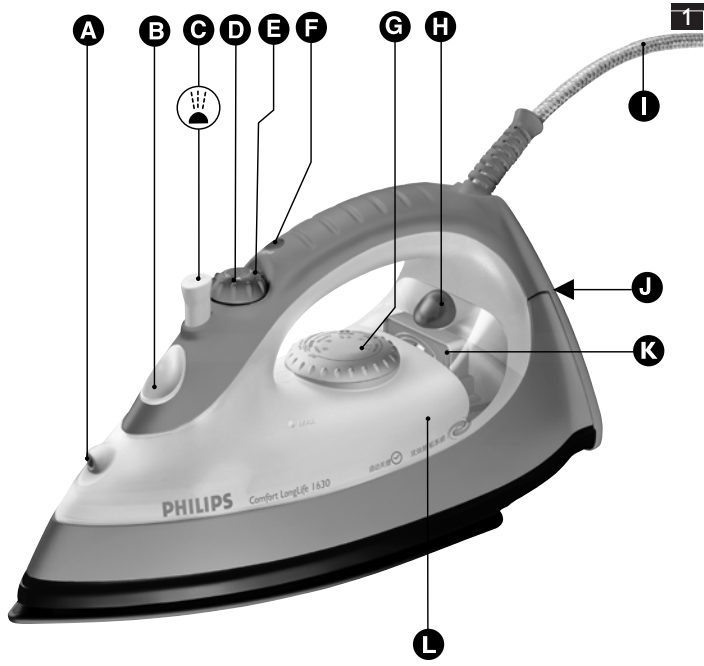

PHILIPS

General description (Fig. 1)

- A** Spray nozzle
- B** Filling opening
- C** Spray button
- D** Steam control
 - ○ = no steam
 - △ = moderate steam
 - ⊕ = maximum steam
 - • = Calc-Clean function
- E** Extra-steam function (GC1630/GC1621/GC1620)
- F** Electronic safety shut-off function (GC1630 only)
- G** Temperature dial
- H** Temperature light
- I** Mains cord
- J** Type plate
- K** Anti-calc tablet
- L** Water tank

Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- ▶ Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- ▶ If the appliance is provided with an earthed plug, it must be plugged into an earthed wall socket.
- ▶ Do not use the appliance if the plug, the cord or the appliance itself shows visible damage, or if the appliance has been dropped or is leaking.
- ▶ Check the cord regularly for possible damage.
- ▶ If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- ▶ Never leave the appliance unattended when it is connected to the mains.
- ▶ Never immerse the iron and the stand, if provided, in water.
- ▶ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ▶ Children should be supervised to ensure that they do not play with the appliance.
- ▶ The soleplate of the iron can become extremely hot and may cause burns if touched.
- ▶ Do not allow the cord to come into contact with the soleplate when it is hot.
- ▶ When you have finished ironing, when you clean the appliance, when you fill or empty the water tank and also when you leave the iron even for a short while: set the steam control to position ○, put the iron on its heel and remove the mains plug from the wall socket.
- ▶ Always place and use the iron and the stand, if provided, on a stable, level and horizontal surface.
- ▶ Do not put perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.
- ▶ This appliance is intended for household use only.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this

user manual, the appliance is safe to use based on scientific evidence available today.

Before first use

- 1** Remove any sticker or protective foil from the soleplate.
- 2** Let the iron heat up to maximum temperature and pass the iron over a piece of damp cloth for several minutes to remove any residues from the soleplate.

Note: The iron may give off some smoke when you use it for the first time. This will cease after a short while.

Preparing for use

Filling the water tank

Never immerse the iron in water.

- 1** Make sure the appliance is unplugged.
- 2** Set the steam control to position ○ (= no steam) (Fig. 2).
- 3** Tilt the iron backwards.
- 4** Fill the water tank with tap water up to the maximum level. (Fig. 3)

Do not fill the tank beyond the MAX indication.

- ▶ If the tap water in your area is very hard, we advise you to mix it with an equal amount of distilled water or to use distilled water only.

Do not put perfume, vinegar, starch, descaling agents, ironing additives, chemically descaled water or other chemicals in the water tank.

Setting the temperature

- 1** Put the iron on its heel.
- 2** Set the required ironing temperature by turning the temperature dial to the appropriate position (Fig. 4).
Check the laundry care label for the required ironing temperature:
 - ● Synthetic fabrics (e.g. acrylic, nylon, polyamide, polyester)
 - ● Silk
 - ●● Wool
 - ●●● Cotton, linen
 If you do not know what kind(s) of fabric(s) an article is made of, determine the right ironing temperature by ironing a part that will not be visible when you wear or use the article. Silk, woollen and synthetic materials: iron the reverse side of the fabric to prevent shiny patches. Avoid using the spray function to prevent stains. Start ironing the articles that require the lowest ironing temperature, such as those made of synthetic fibres.

- 3** Put the mains plug in an earthed wall socket.
- 4** When the temperature light has gone out, wait a while before you start ironing (Fig. 5).
The temperature light will go on from time to time during ironing.

Using the appliance

Steam ironing

- 1** Make sure that there is enough water in the water tank.
- 2** Select the recommended ironing temperature (see chapter 'Preparing for use', section 'Setting the temperature').
- 3** After the temperature light has gone out, set the steam control to the appropriate steam position. Make sure that the steam setting you

select is suitable for the ironing temperature selected: (Fig. 6)

- △ for moderate steam (temperature settings ●● to MAX)
- ⊕ for maximum steam (temperature settings ●●● to MAX)

Note: The iron will start steaming as soon as the set temperature has been reached.

Ironing without steam

- 1** Set the steam control to position ○ (= no steam).
- 2** Select the recommended ironing temperature (see chapter 'Preparing for use', section 'Setting the temperature').

Features

Spray function

You can use the spray function to remove stubborn creases at any temperature.

- 1** Make sure that there is enough water in the water tank.
- 2** Press the spray button several times to moisten the article to be ironed (Fig. 7).

Extra steam (GC1630/GC1621/GC1620)

This function provides extra steam to remove very stubborn creases.

- ▶ The extra-steam function only works at temperature settings between ●●● and MAX.

- 1** Set the steam control to position ⊕ (= maximum steam). (Fig. 8)
- 2** Press and hold the steam control for a maximum of 5 seconds (Fig. 9).
- 3** Release the steam control and wait at least 1 minute before using this function again to prevent water from dripping out of the soleplate.

Electronic safety shut-off function (GC1630 only)

The electronic safety shut-off function automatically switches off the iron if it has not been moved for a while.

- ▶ The auto-off light starts blinking to indicate that the iron has been switched off by the safety shut-off function (Fig. 10).
 - In horizontal position, this will happen after 30 seconds.
 - In vertical position, this will happen after 8 minutes.
- ▶ To let the iron heat up again:
 - Pick up the iron or move it slightly.
 - The auto-off light goes out and the temperature light goes on.
 - When the temperature light has gone out and goes on again, the iron is ready for use.

Cleaning and maintenance

After ironing

- 1** Remove the mains plug from the wall socket and let the iron cool down.
- 2** Wipe scale and any other deposits off the soleplate with a damp cloth and a non-abrasive (liquid) cleaning agent.

To keep the soleplate smooth, you should avoid hard contact with metal objects. Never use a scouring pad, vinegar or other chemicals to clean the soleplate.

- 3** Clean the upper part of the iron with a damp cloth.

- Regularly rinse the water tank with water. Empty the water tank after cleaning.

Double-Active Calc System

- The anti-calc tablet prevents scale from clogging the steam vents (Fig. 11).
- The anti-calc tablet is constantly active and does not need replacement.

- The Calc-Clean function removes the scale particles (Fig. 12).

Calc-Clean function

Use the Calc-Clean function once every two weeks. If the water in your area is very hard (i.e. when flakes come out of the soleplate during ironing), you should use the Calc-Clean function more frequently.

- Set the steam control to position O.

- Set the temperature dial to MAX.

- Fill the water tank to the maximum level.

Do not pour vinegar or other descaling agents into the water tank.

- Put the plug in the wall socket.

- Unplug the iron when the temperature light has gone out.

- Hold the iron over the sink and set the steam control to the Calc-Clean position * (Fig. 13)

- Pull the steam control slightly upwards and gently shake the iron until all water in the tank has been used up.

Steam and boiling water will come out of the soleplate. Scale (if any) will be flushed out.

- After having used the Calc-Clean function, press the steam control back to its original position and set it to position O.

Repeat the Calc-Clean process if the water coming out of the iron still contains scale particles.

After the Calc-Clean process

- Connect the iron to the mains to let the soleplate dry.

- Unplug the iron when the light has gone out.

- Move the iron gently over a piece of used cloth to remove any water stains that may have formed on the soleplate.

- Let the iron cool down before you store it.

Cleaning the steam control needle

- Pull the steam control out of the appliance. (Fig. 12)

- Use vinegar to remove scale, if any, from the needle (Fig. 14).

Do not bend or damage the steam control needle.

- Reinsert the steam control needle by placing the point of the needle exactly in the centre of the hole and by fitting the small projection on the side of the needle into the slot (Fig. 15).

- Set the steam control to position O.

Storage

- Make sure the appliance is unplugged and set the steam control to position O.

- Empty the water tank (Fig. 16).

- Wind the mains cord round the cord storage facility.

- Store the iron on its heel in a safe and dry place (Fig. 17).

Environment

- Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment (Fig. 18).

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

This chapter summarises the most common problems you could encounter with your iron. Please read the different sections for more details. If you are unable to solve the problem, contact the Customer Care Centre in your country.

Problem	Cause	Solution
---------	-------	----------

The iron is plugged in but the soleplate is cold.	There is a connection problem.	Check the mains cord, the plug and the wall socket.
---	--------------------------------	---

	The temperature dial has been set to MIN.	Set the temperature dial to the required temperature.
--	---	---

The iron does not produce any steam.	There is not enough water in the water tank.	Fill the water tank (see chapter 'Preparing for use').
--------------------------------------	--	--

	The steam control has been set to position O.	Set the steam control to position Δ or B (see chapter 'Using the appliance').
--	---	---

	The safety shut-off function has switched the iron off.	Move the iron slightly to deactivate the safety shut-off function. The iron will start heating up again.
--	---	--

	The iron is not hot enough.	Set the temperature dial to a temperature suitable for steam ironing (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
--	-----------------------------	--

The extra-steam function does not work (GC1630/GC1621/GC1620).	The steam control has not been pressed long enough.	Press and hold the steam control for a maximum of 5 seconds.
--	---	--

Problem	Cause	Solution
	The extra-steam function has been used too often in a short period.	Wait at least 1 minute before using the extra-steam function again.

	The iron is not hot enough.	Set the temperature control dial to a temperature between ●●● and MAX. Put the iron on its heel and wait until the temperature light has gone out.
--	-----------------------------	--

	There is not enough water in the water tank.	Fill the water tank (see chapter 'Preparing for use').
--	--	--

Water leaks from the soleplate when the extra-steam function (GC1630/GC1621/GC1620) is being used.	The iron is not hot enough.	Set the temperature dial to a temperature between ●●● and MAX. Put the iron on its heel and wait until the temperature light has gone out.
--	-----------------------------	--

	The extra-steam function has been used too often in a short period.	Wait at least 1 minute before using the extra-steam function again (see chapter 'Features').
--	---	--

The spray function does not work.	There is not enough water in the water tank.	Fill the water tank (see chapter 'Preparing for use').
-----------------------------------	--	--

Flakes and impurities come out of the soleplate during ironing.	You have been using hard water, which has caused scale flakes to develop inside the soleplate.	Use the Calc-Clean function one or more times (see chapter 'Cleaning and maintenance').
---	--	---

Water leaks from the soleplate during ironing.	The iron is not hot enough.	Set the temperature dial to a temperature suitable for steam ironing (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
--	-----------------------------	--

	The iron has been put in horizontal position while there is still water in the water tank.	Empty the water tank and set the steam control to position O before storing the iron (see chapter 'Storage'). Place the iron on its heel.
--	--	---

	The iron is not hot enough.	Set the temperature dial to a temperature suitable for steam ironing (●● to MAX). Put the iron on its heel and wait until the temperature light has gone out before you start ironing.
--	-----------------------------	--

Water leaks from the soleplate while the iron is cooling down or after it has been stored.	The iron has been put in horizontal position while there is still water in the water tank.	Empty the water tank and set the steam control to position O before storing the iron (see chapter 'Storage'). Place the iron on its heel.
--	--	---

一般说明 (图 1)

- A** 喷雾嘴
- B** 加水口
- C** 喷雾按钮
- D** 蒸汽控制
 - ○ = 无蒸汽
 - △ = 中等蒸汽量
 - △ = 最大蒸汽量
 - • = 除水垢功能
- E** 加强蒸汽功能 (GC1630/GC1621/GC1620)
- F** 电子安全关熄功能 (仅限 GC1630)
- G** 温度旋钮
- H** 温度指示灯
- I** 电源线
- J** 型号牌
- K** 防水垢片
- L** 水箱

注意事项

使用本产品前，请仔细阅读本使用说明书，并妥善保管以备日后参考。

- ▶ 连接产品电源前，请检查型号铭牌所标示的电压与当地电源电压是否一致。
- ▶ 如果产品附带的是接地插头，则必须将其插至接地线的插座。
- ▶ 如果插头、电源线或产品本身已经明显损坏，或产品曾坠落或出现渗漏，请勿再使用。
- ▶ 定期检查电源线是否损坏。
- ▶ 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。
- ▶ 在熨斗接通电源期间，使用者不得离开。
- ▶ 切勿将熨斗或熨斗座（如有提供）浸入水中。
- ▶ 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产品进行监督或指导。应照看好儿童，确保他们不玩弄本产品。
- ▶ 应照看好儿童，确保他们不会玩弄本产品。
- ▶ 熨斗的底板会变得非常烫，如触摸底板，可能会导致烫伤。
- ▶ 不要让电源线触及高温熨斗底板。
- ▶ 当完成熨烫、清洁产品、注水或倒空水箱以及短时间离开熨斗时：请将蒸汽控制旋钮调至位置 ○，竖放熨斗，并从插座中拔下电源插头。
- ▶ 一定要在稳固、平整且水平的表面上放置和使用熨斗及熨斗座（如有提供）。
- ▶ 不要将香水、醋、淀粉、除垢剂、烫衣剂或其它化学品放入水箱。
- ▶ 本产品仅限于家用。

电磁场 (EMF)

这款飞利浦产品符合关于电磁场 (EMF) 的相关标准。据目前的科学证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

初次使用之前

- 1 从熨斗底板上取下任何标签或保护膜。
- 2 将熨斗升温至最高温度，用熨斗在一块湿布上熨烫几分钟，以除去底板上的任何残留物。

注：首次使用时，熨斗可能冒烟。过一会就会停止。

使用准备

给水箱注水

切勿将熨斗浸入水中。

- 1 确保熨斗的插头已经拔掉。

- 2 将蒸汽控制旋钮调至位置 ○ (=无蒸汽)。(图 2)

- 3 将熨斗向后倾斜。

- 4 将自来水加注到水箱的最高标志。(图 3) 切勿超过 MAX 最高水位标志。

- ▶ 如果您所在地区的自来水硬度很高，我们建议您将自来水与等量的蒸馏水混合后再使用，或仅使用蒸馏水。

不要将香水、醋、淀粉、除垢剂、烫衣剂或其他化学品放入水箱。

设定温度

- 1 将熨斗竖立。

- 2 将温度转盘转到适当位置以设定所需熨烫温度。(图 4)

检查衣服标签以了解所需熨烫温度：

- ● 合成纤维（如聚丙烯、尼龙、聚酯胺、聚脂）
- ● 丝绸
- ●● 羊毛
- ●●● 棉，亚麻

如果您不知衣物是由何种纤维组成，找一处穿着或使用看不见的地方熨，试试何种温度最合适。

真丝织品，羊毛及合成纤维：要翻到内面熨烫以防发亮。避免使用喷雾功能，以免产生斑迹。

从需要最低熨烫温度的布料开始熨烫，如合成纤维织物。

- 3 将插头插入有接地的电源插座。

- 4 如果温度指示灯亮着，应等一会再开始熨烫。(图 5)

在熨烫期间，温度指示灯会熄灭。

使用本产品

蒸汽电熨斗

- 1 确保水箱中有足够的水。

- 2 选择推荐的熨烫温度（见“使用准备”一章中的“设定温度”一节）。

- 3 温度指示灯熄灭之后，将蒸汽控制旋钮设定到适当位置。确保您所选定的熨烫温度适合所选温度：(图 6)

- △ 表示中等蒸汽量（温度设定从 ●● 到最大 (MAX)）
- △ 表示最大蒸汽量（温度设定从 ●●● 到最大 (MAX)）

注：只要达到设定的温度，就立即开始喷出蒸汽。

无蒸汽熨烫

- 1 将蒸汽控制旋钮调至位置 ○ (=无蒸汽)。

- 2 选择推荐的熨烫温度（见“使用准备”一章中的“设定温度”一节）。

功能

喷雾装置

您可在任何温度下使用喷雾功能去除顽固褶皱。

- 1 确保水箱中有足够的水。

- 2 按几次喷雾按钮，把要熨烫的布料弄湿。(图 7)

加强蒸汽 (GC1630/GC1621/GC1620)

此功能可产生加强蒸汽以去除顽固褶皱。

- ▶ 加强蒸汽功能只能在温度设定 ●●● 到最高温度 (MAX) 之间工作。

- 1 将蒸汽控制旋钮设定到 △ 位置 (=最大蒸汽)。(图 8)

- 2 按住蒸汽控制旋钮长达 5 秒钟。(图 9)

- 3 放开蒸汽控制按钮，至少等 1 分钟后，才能再次使用本功能，以防从底板滴出。

电子安全关熄功能 (仅限 GC1630)

如果熨斗在一段时间内没有移动，电子自动安全关熄功能将自动切断熨斗电源。

- ▶ 自动关熄指示灯开始闪烁，指示熨斗的电源已经被电子安全关熄功能关闭。(图 10)
- 在水平状态时，30 秒后会自动关熄。
- 在垂直状态时，8 分钟后会自动关熄。
- ▶ 让熨斗再次加热：
 - 将熨斗拿起或稍微动一下。
 - 自动关熄指示灯熄灭，温度指示灯亮起。
 - 当温度指示灯熄灭再次亮起后，熨斗即可使用。

清洁和保养

熨烫后

- 1 从插座中拔下电源插头，让熨斗充分冷却。

- 2 用湿布和非腐蚀性（液体）清洁剂抹去底板上的水垢和其它沉积物。

为了保持底板光滑，应避免底板与金属物体碰撞。切勿使用磨砂布、醋或其他化学品清洁底板。

- 3 用湿布清洁熨斗的上部。

- 4 定期用水冲洗水箱。清洗之后将水箱中的水全部倒出。

双效除垢系统

- 1 防水垢片防止水垢堵塞蒸汽管。(图 11)
- ▶ 防水垢片持续有效，无须更换。

- 2 除垢功能可除去水垢颗粒。(图 12)

除水垢功能

建议两周使用一次自动除垢功能。如果您所在地区的水质很硬（即在熨烫过程中底板出现水垢薄片时），则应增加使用自动除垢功能的次数。

- 1 将蒸汽控制旋钮设定到位置 ○。

- 2 将温度转盘调至最大 (MAX)。

- 3 将水箱注满至最高水位 (MAX)。

请勿将醋或其它除垢剂注入水箱。

- 4 将插头插入插座。

- 5 当温度指示灯熄灭时，拔下熨斗的电源插头。

- 6 在水池上方手持熨斗，并将蒸汽控制旋钮设定到除水垢位置 •。(图 13)

- 7 将蒸汽控制旋钮轻轻地向上拉，然后柔和地摇动熨斗，直到所有的水耗尽。

蒸汽和沸水会从底板冲出。水垢（如果有的话）也一并冲出。

- 8 使用完除水垢功能后，将蒸汽控制旋钮按回原来的位置，并设定到 ○ 位置。

如果从熨斗中冲出的水仍有水垢颗粒，则应再次使用除水垢功能。

完成除水垢过程后

- 1 插上熨斗的插头，让底板变干。

- 2 当指示灯熄灭后，将熨斗的插头拔下。

- 3 将熨斗放在一块用过的布上轻轻地前后移动，以除去留在底板上的水渍。

- 4 让熨斗冷却，然后存放好。

清洁蒸汽控制杆

- 1 将蒸汽控制旋钮从熨斗中拉出。(图 12)

2 如果针上有水垢，请使用醋将其除去。(图 14)

不要弄弯或损坏蒸汽控制针。

3 重新插入蒸汽控制针，方法是：将蒸汽控制针的针尖对准孔的中央，让针侧面的凸缘插入槽内。(图 15)

4 将蒸汽控制旋钮设定到位置 O。

存放

1 确保产品的插头已经拔掉，且蒸汽控制旋钮已设定到位置 O。

2 倒空水箱。(图 16)

3 将电源线绕在存线装置上。

4 请将熨斗竖放在安全干燥的地方。(图 17)

环保

弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收中心。这样做有利于环保。(图 18)

保修与服务

如果您需要详细信息或有任何问题，请浏览飞利浦网站，地址为 www.philips.com。您也可以与贵国的飞利浦顾客服务中心联系（您可以从全球保修卡中找到电话号码）。如果贵国没有飞利浦顾客服务中心，请与当地的飞利浦经销商或与飞利浦家庭小电器的维修中心联系。

故障种类和处理方法

本章归纳了您的熨斗在使用时最常遇到的问题。有关详细说明，请参阅相关章节。如果您还不能解决问题，请与贵国的飞利浦客户服务中心联系。

问题	原因	解决方法
熨斗已经插好插头，但底板仍是凉的。	接触不良。	检查电源线、插头和电源插座。
	温度转盘设在 MIN。	将温度转盘设定到所需温度。
熨斗没有蒸汽。	水箱中水不足。	将水箱注满水（见“使用准备”一章）。
	蒸汽控制设在 O 位置。	将蒸汽控制旋钮设定到 Δ 或 ∇ 位置（见“使用产品”一章）。
	安全关熄功能将熨斗断电。	轻轻移动熨斗，以便解除安全关熄功能。熨斗将再次开始加热。
	熨斗不够热。	将温度转盘设定在一个适合蒸汽熨烫的温度（●●到最大）。将熨斗竖立，直到温度指示灯熄灭后再开始熨烫。
加强蒸汽功能不能工作 (GC1630/GC1621/GC1620)。	蒸汽控制旋钮按下的时间不够长。	按住蒸汽控制旋钮长达 5 秒钟。
	加强蒸汽功能在短时间内使用过于频繁。	再次使用加强蒸汽功能之前，至少等 1 分钟。

问题	原因	解决方法
	熨斗不够热。	将温度控制旋钮调至 ●●● 和最大 (MAX) 之间的某个温度。将熨斗竖立直至温度指示灯熄灭后再开始熨烫。
	水箱中水不足。	将水箱注满水（见“使用准备”一章）。
当使用加强蒸汽功能 (GC1630/GC1621/GC1620) 时，有水从底板漏出。	熨斗不够热。	将温度转盘在 ●●● 与最大 (MAX) 之间设定一温度。将熨斗竖立，直到温度指示灯熄灭。
	加强蒸汽功能在短时间内使用过于频繁。	再次使用加强蒸汽功能之前，至少等 1 分钟（见“功能”一章）。
喷雾功能不能工作。	水箱中水不足。	将水箱注满水（见“使用准备”一章）。
在熨烫过程中底板内冒出水垢和杂质。	硬水在底板内形成水垢。	使用一次或多次除垢功能（见“清洁和保养”一章）。
熨烫时水从底板漏出。	熨斗不够热。	将温度转盘设定在一个适合蒸汽熨烫的温度（●●到最大）。将熨斗竖立，直到温度指示灯熄灭后再开始熨烫。
当熨斗冷却或存放后，水从底板漏出。	熨斗水平放置时水箱中还有水。	存放熨斗之前，先将水箱倒空，然后将蒸汽控制设定到 O 位置（见“存放”一章）。将熨斗竖放。

PHILIPS

产品：飞利浦蒸汽电熨斗

型号：GC1630, GC1621, GC1620, GC1615, GC1610

额定电压：220V~

额定频率：50Hz

额定输入功率：1200 W

生产日期：请见产品底部

产地：中国

飞利浦家电（苏州）有限公司

中国苏州新区玉山路

邮政编码：215011

电话：0512-68253516

全国顾客服务热线：4008 800 008

本产品根据 GB4706.1-1998, GB4706.2-2003, GB4343.1-2003 及 GB17625.1-2003 制造

请妥善保管本使用说明书
 发行日期：2006/12/19