 










Quick start guide AC4012/AC4014

Kurzanleitung
Guide de mise en route
Краткое руководство

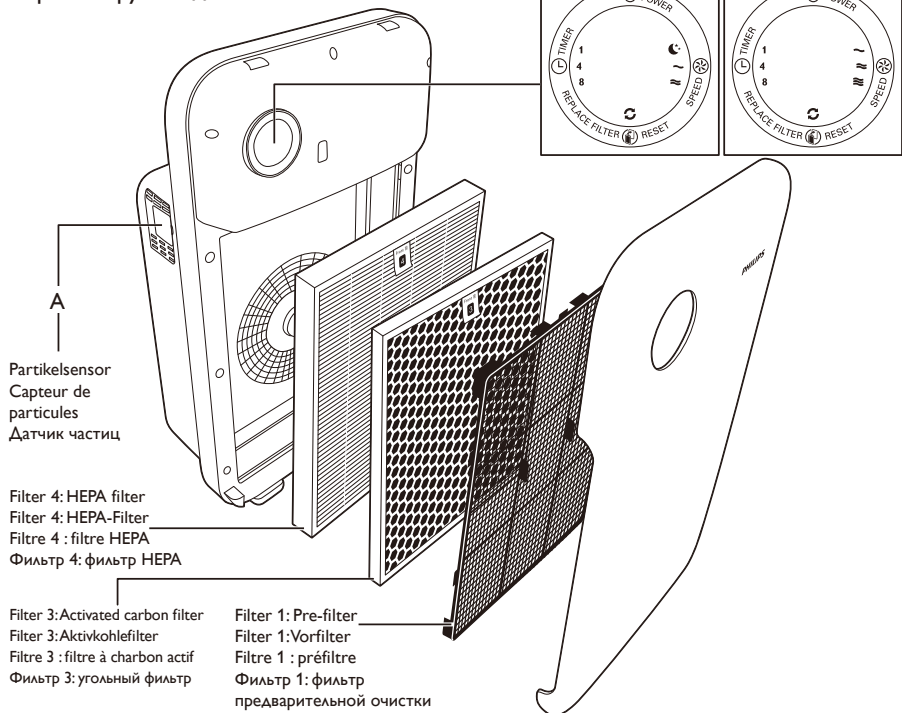





First use
Première utilisation

        Erste Verwendung
Первое использование

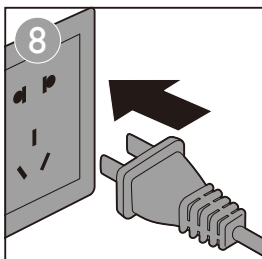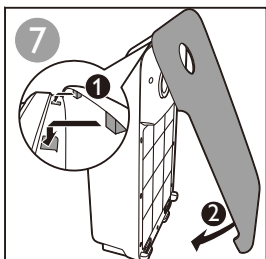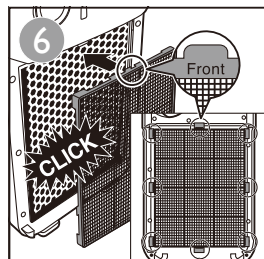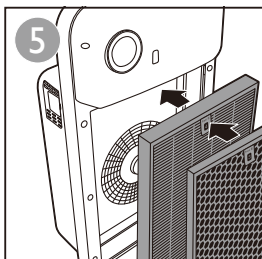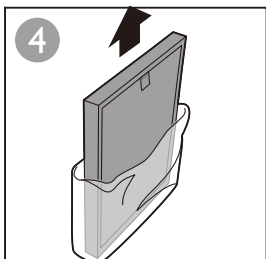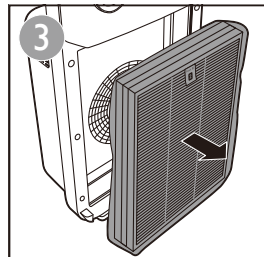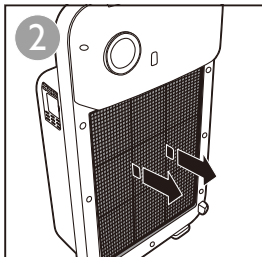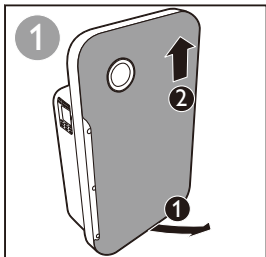

Using the appliance
Utilisation de l'appareil

    Verwenden des Geräts
Использование прибора

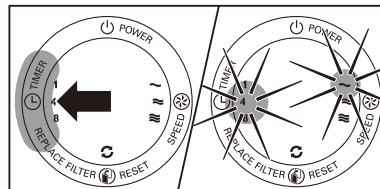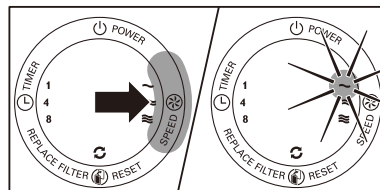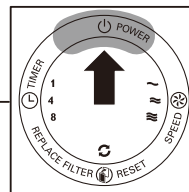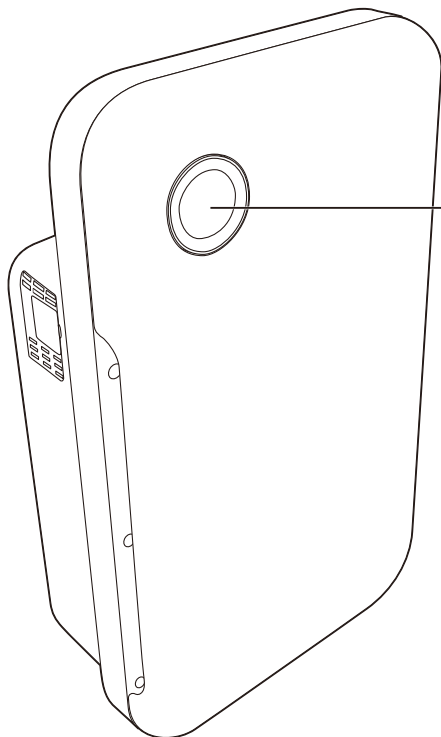

Filter 1 cleaning alert

Alerte de nettoyage du filtre 1

Reinigungswarnung für Filter 1

 
 
 
 
 
 
 
 
 
Предупреждение о необходимости очистки фильтра 1

Clean filter 1 every 2 weeks

Nettoyage du filtre 1 toutes les 2 semaines

Reinigen Sie Filter 1 alle 2 Wochen

Очищайте фильтр 1 каждые 2 недели

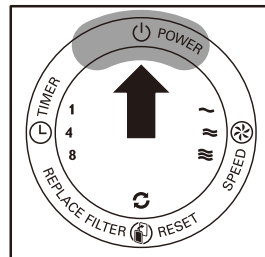
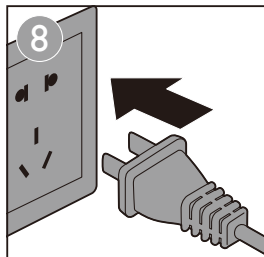
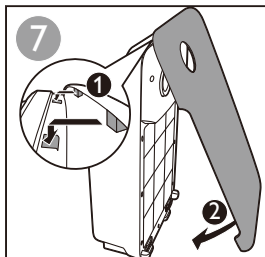
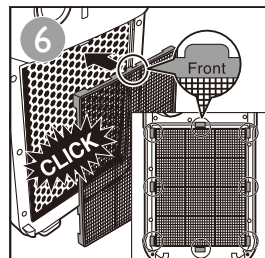
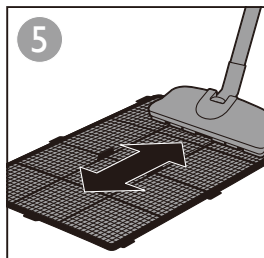
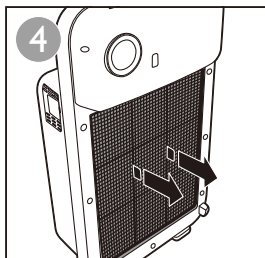
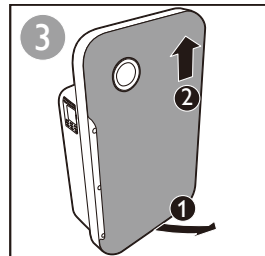
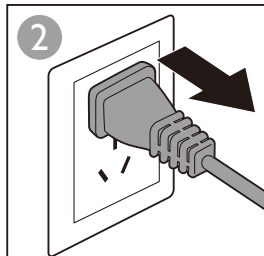
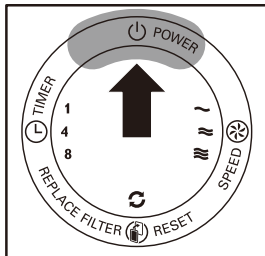


Filter 3/4 replacement alert

Austauschwarnung für Filter 3/4




Alerte de remplacement des filtres 3/4

         Предупреждение о необходимости замены фильтра 3/4

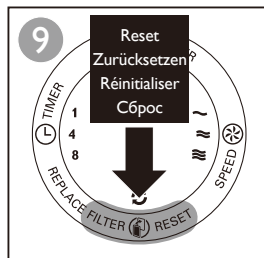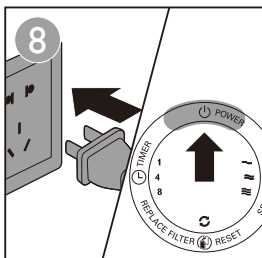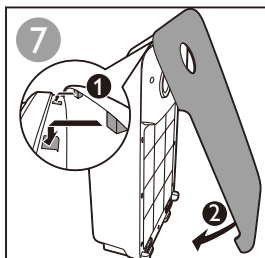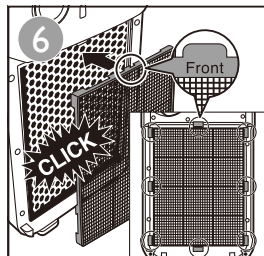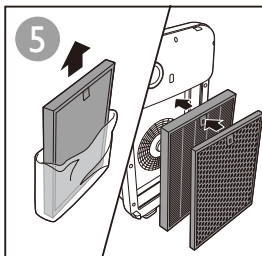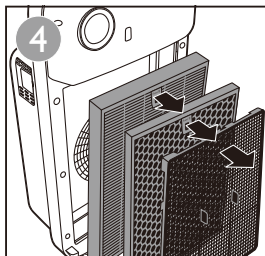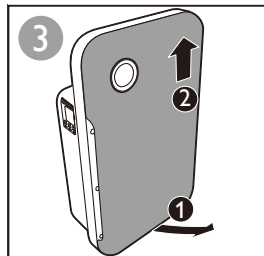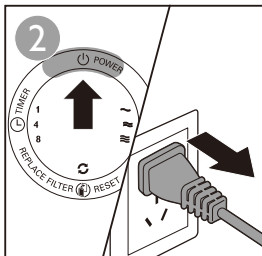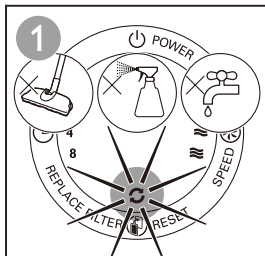


Cleaning Sensor (A)
Nettoyage du capteur (A)

   Reinigen des Sensors (A)
Датчик очистки (A)

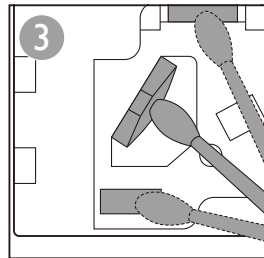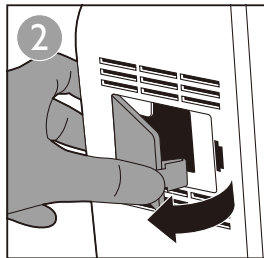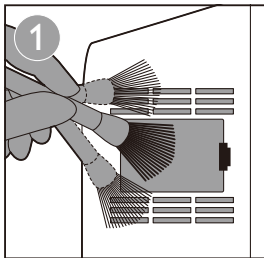

More Info
Plus d'infos

 Weitere Informationen
Дополнительные сведения

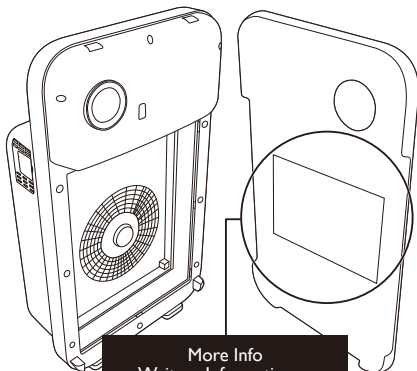

More Info
Weitere Informationen
Plus d'infos
Дополнительные сведения

AC4012_AC4014_QSG_1.0_120629

424121070271