



Delicious hot food easily

30-minute timer

A toaster oven designed to help you make delicious food and snacks every time. Toasts and warms, and has a lot of features that make it easy to get good food. Includes 30-minute timer, crumb tray and baking tray.

Delicious food

- · Toasts or warms food and snacks
- · 30-minute timer shuts off the oven once ready

Easy to experience

- Large square baking tray (230 x 230 mm)
- · Removable crumb tray for easy cleaning
- · Ready bell sounds when food is ready
- · Detachable grid

Safe to use

· On/off light

Highlights

Function

Toasts or warms food and snacks.

30-minute timer



30-minute timer shuts off the oven once ready.

Removable crumb tray



Is easy to clean thanks to its removable crumb tray.

Ready bell

Ready bell sounds when food is ready.

Specifications

General specifications

Non slip feet

Technical specifications

Capacity: 9 L

Effective capacity: 5.7 L Power: 900 W

Cord length: 1.0 m

Heating elements: Quartz (2x)

Voltage: 220-240 V Frequency: 50-60 Hz

Design specifications

Materials: Metal housing, plastic

knobs/handles (PBT)

Available color(s): Pearl white/grey/blue /08

Accessories included

Baking tray: 230 x 230 mm

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-03-12 Version: 2.1.1

12 NC: 0000 000 00000

www.philips.com

