 


PHILIPS

HD4932

HD4953

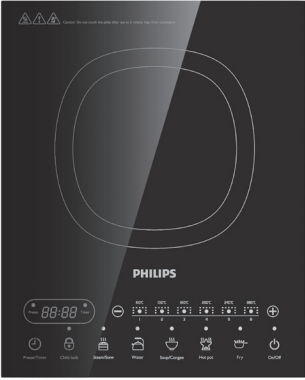

EN User manual

ID Buku Petunjuk Pengguna

MS Manual pengguna

 
VI Hướng dẫn sử dụng

ZH-T 使用手冊


PHILIPS
PEMASAK INDUKSI
Model: HD4932
Power: 2100W
Listrik: 220-240V ~ 50-60Hz
Negara Pembuatan: China
Diimpor oleh:
PT Philips Indonesia Commercial
JI Buncit Raya Kav 99 Jakarta 12510
Indonesia

Overview
Ikhtisar
Gambaran keseluruhan


Tổng quan
概覽

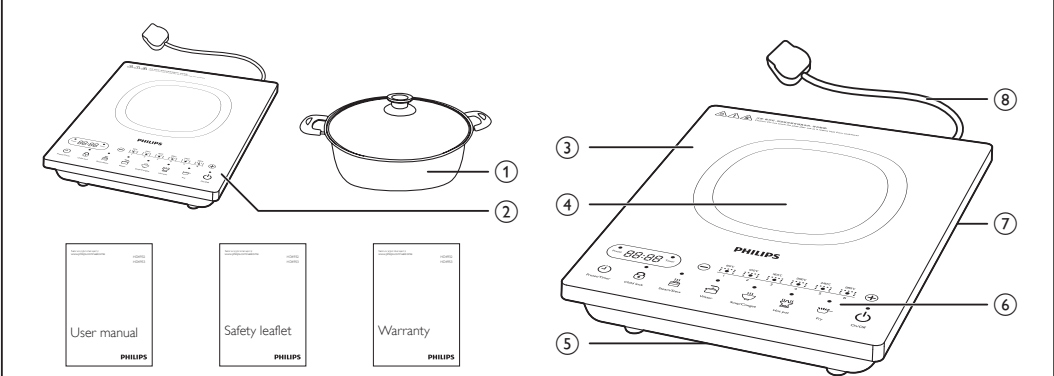

HD4932

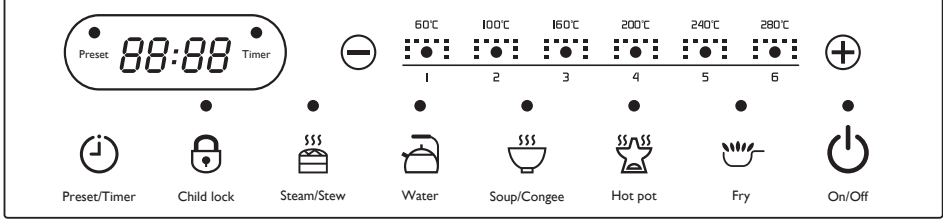 


HD4953

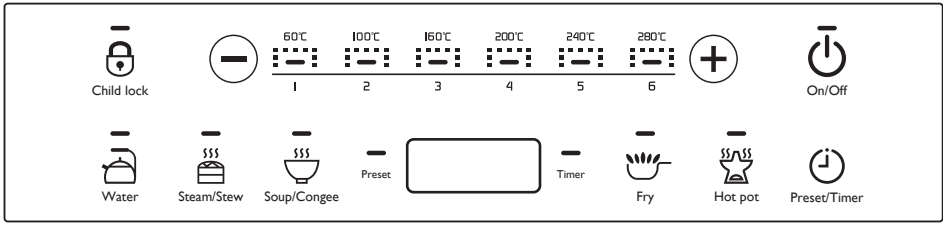 

Recommended types and sizes of cookware
Tipe dan ukuran peralatan memasak yang disarankan
Jenis dan saiz alat memasak yang disarankan

 Các loại và kích cỡ dụng cụ nấu khuyên dùng
建議的廚具種類和大小

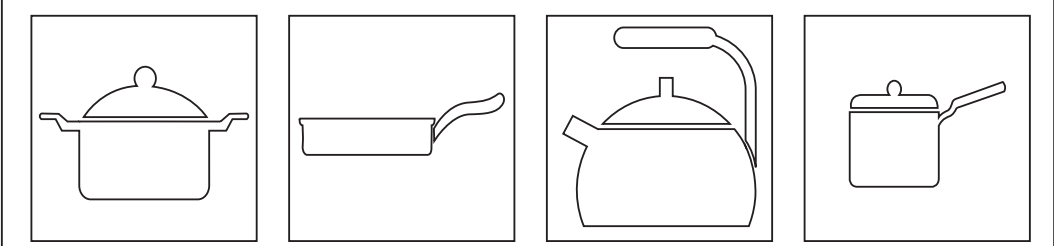

English

1 Your induction cooker

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 What's in the box

Induction cooker main unit Pot
Safety leaflet User manual
Warranty card

Overview

① Pot	⑤ Air inlet
② Induction cooker main unit	⑥ Control panel
③ Crystalite cooking plate	⑦ Air outlets
④ Cooking zone	⑧ Power cord

Controls overview

	Fry mode		Decrease button
	Hot pot mode		Timer function
	Water mode		Preset/Timer button
	Steam/Stew mode		Preset function
	Soup/Congee		Increase button
	On/Off button		Child lock
			Display
			Cooking temperatures
			Power levels

3 Before first use

Remove all packaging material from the induction cooker.

Preparing for use

- Place the appliance on a dry, stable and level surface.
- Make sure there is at least 10cm free space around the appliance to prevent overheating.
- Always place the cookware on the cooking zone during cooking.
- Make sure you use cookware of the correct types and sizes (see the table below).

Recommended types and sizes of cookware

Material	Cookware with a bottom made of iron or magnetic stainless steel
Shape	Cookware with a flat bottom
Size	Cookware with a bottom diameter of 10-23cm, depending on the cooking mode
Weight	Cookware with a weight of up to 15kg (including contents)

4 Using the induction cooker

There are five preset cooking modes: Fry (), Hot pot (), Water (), Steam/Stew (), and Soup/Congee ().

 
- Follow the steps in "Preparing for use".
- Press the On/Off button (), the On/Off indicator lights up. The induction cooker enters standby mode.
- Press the desired cooking button. The corresponding indicator lights up and the induction cooker starts working.
- Default cooking time, power, and power level are displayed on the screen.
- When the cooking is finished, press the On/Off button () to turn off the appliance.
- Unplug the induction cooker after the fan stops working.

Note

- During cooking, you can change the power level from 1 to 6 by pressing the Increase () or Decrease () button.
- At Water mode, the induction cooker automatically turns off after the water is boiled for 3 minutes.
- At Steam/Stew and Soup/Congee modes, the induction cooker automatically adjusts the cooking temperature for better cooking result.

Preparing for use
Persiapan penggunaan
Bersedia untuk menggunakan


Chuẩn bị sử dụng máy

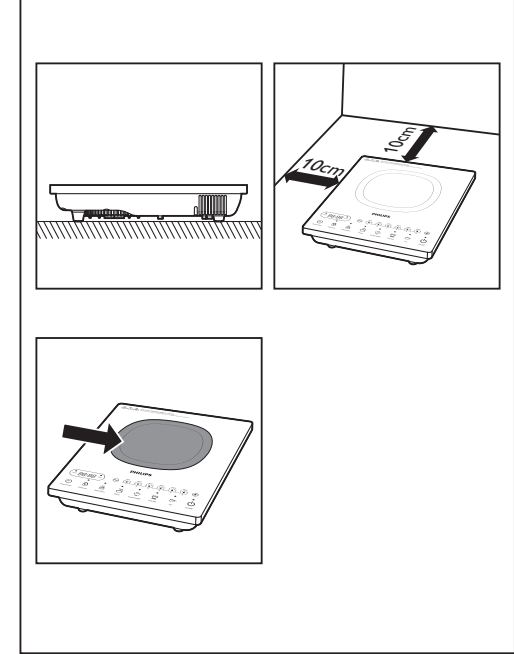

Cleaning
Membersihkan
Pembersihan

Vệ sinh máy

 
清潔

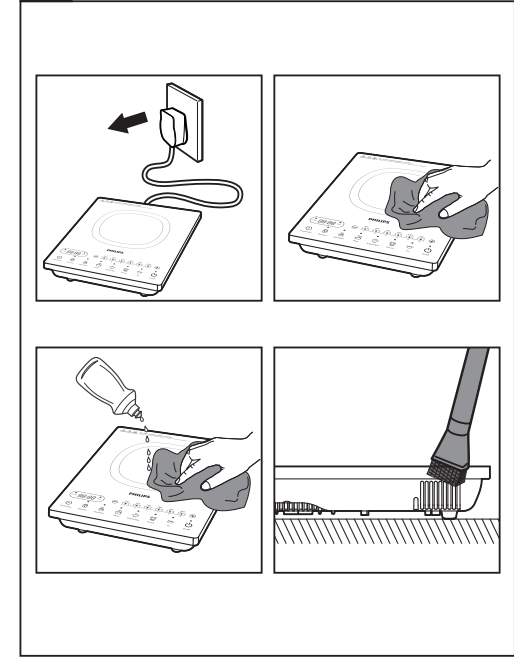

Using the induction cooker
Menggunakan kompor listrik
Menggunakan perku aruhan

Sử dụng bếp từ

 
使用電磁爐

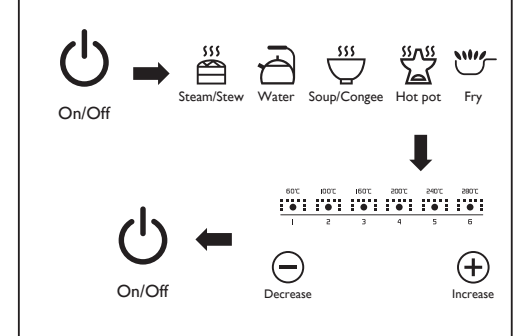

Using the timer
Waktu preset untuk memasak yang ditunda
Menggunakan perku aruhan

Sử dụng chức năng hẹn giờ

 
使用定時功能

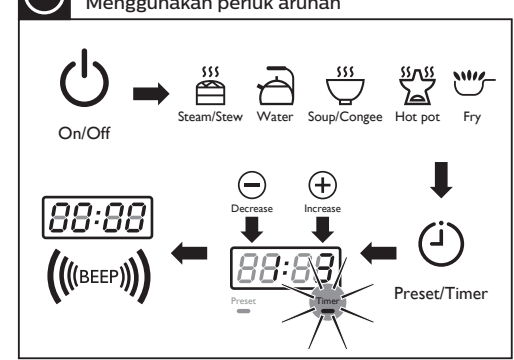

Preset time for delayed cooking
Waktu preset untuk memasak yang ditunda
Masa dipreset bagi masakan tertangguh

Menggunakan pemasa

 預設時間延時烹飪

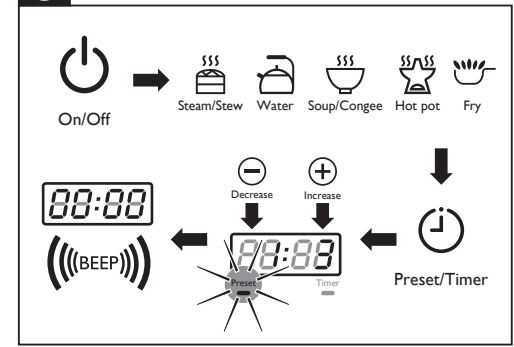

Menggunakan timer

Anda dapat menggunakan tombol Preset/Timer () untuk menentukan lama waktu yang Anda inginkan untuk mengoperasikan alat di berbagai mode memasak (tidak tersedia di mode Air).

- Ikuti langkah-langkah di "Persiapan penggunaan".
- Tekan tombol On/Off (), lampu indikator On/Off akan menyala. Kompor listrik memasuki mode siaga.
- Tekan tombol memasak yang diinginkan. Lampu indikatornya akan menyala dan kompor listrik mulai bekerja.
- Tekan tombol Preset/Timer (), hingga lampu indikator timer menyala.
- "0:00" akan berkedip pada layar tampilan. Tekan tombol Tambah () untuk menyetel menit dan tombol Kurang () untuk menyetel jam.
- Bila sampai waktunya, Anda akan mendengar bunyi bip beberapa kali dan kompor listrik akan mati secara otomatis.

Catatan

- Setelah Anda memilih waktu memasak, tunggu selama beberapa detik sebelum kompor listrik secara otomatis mengkonfirmasi.
- Setelah timer disetel, Anda dapat menekan tombol Preset/Timer () atau tombol memasak lainnya untuk membatalkan timer.
- Anda tidak akan dapat menyetel waktu preset memasak yang tertunda setelah timer disetel. Untuk melakukannya, Anda perlu membatalkan timer terlebih dahulu.

Waktu preset untuk memasak yang ditunda

Anda dapat menggunakan tombol Preset/Timer () untuk menyetel lama waktu yang Anda inginkan untuk mulai mengoperasikan alat pada mode Air, mode Sup/Bubur dan mode Kukus/Tanak.

- Ikuti langkah-langkah di "Persiapan penggunaan".
- Tekan tombol On/Off (), lampu indikator On/Off akan menyala. Kompor listrik memasuki mode siaga.
- Tekan tombol memasak yang diinginkan. Lampu indikatornya akan menyala dan kompor listrik mulai bekerja.
- Tekan tombol Preset/Timer () hingga lampu indikator preset menyala.
- Tekan tombol Tambah () untuk menyetel menit dan tombol Kurang () untuk menyetel jam.
- Bila sampai waktunya, Anda akan mendengar bunyi bip beberapa kali dan kompor listrik akan mulai bekerja secara otomatis.

Catatan

- Di mode Kukus/Tanak dan mode Sup/Bubur, kompor listrik secara otomatis masuk ke mode Timer setelah waktu preset dipilih. Anda nanti dapat menentukan lama waktu yang diinginkan untuk mengoperasikan kompor listrik bila sampai waktu preset. Lihat bab "Menggunakan timer" tentang cara menyetel waktu memasak.
- Setelah Anda memilih waktu preset, tunggu selama beberapa detik sebelum kompor listrik secara otomatis mengkonfirmasi.
- Bila kompor listrik di mode preset, Anda dapat menekan tombol Preset/Timer () atau tombol memasak lainnya untuk membatalkan waktu preset.

Menyetel kunci pengaman anak

Bila kompor listrik sedang bekerja, tekan tombol Pengaman anak () selama 3 detik untuk masuk mode pengaman anak.

Catatan

- Di mode pengaman anak, hanya tombol On/Off () dan tombol Pengaman anak () yang bereaksi.
- Untuk membuka kunci, tekan tombol Pengaman anak () selama 3 detik.

5 Membersihkan

Cabut alat dan biarkan mendingin. Bersihkan alat dengan kain lembap dan jika perlu, dengan sedikit bahan pembersih ringan.

6 Lingkungan

Jangan membuang alat bersama limbah rumah tangga biasa jika alat sudah tidak bisa dipakai lagi, tetapi serahkan ke tempat pengumpulan barang bekas yang resmi untuk didaur ulang. Dengan melakukan hal ini, Anda ikut membantu melestarikan lingkungan.

7 Garansi dan layanan

Jika Anda memerlukan servis atau informasi atau jika Anda mengalami masalah, harap kunjungi situs web Philips di www.philips.com atau hubungi Pusat Layanan Konsumen Philips di negara Anda (nomor teleponnya bisa Anda temukan di pamflet garansi internasional). Jika di negara Anda tidak terdapat Pusat Layanan Pelanggan, kunjungi dealer Philips setempat.

7 Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

8 Troubleshooting

If your induction cooker does not function properly or if the cooking quality is insufficient, consult the table below. If you are unable to solve the problem, contact a Philips service centre or the Consumer Care Centre in your country.

Problem	Solution
The On/Off button () does not respond	There is a connection problem. Check if the induction cooker is connected to the mains and if the plug is inserted firmly into the wall socket.
When I press one of the cooking mode buttons, the light of the selected mode does not go on.	The light is defective. Take the appliance to your Philips dealer or a service centre authorised by Philips.
E5 or E6 is displayed on the screen	Check if the voltage is too low or too high. Check if the power cord or power socket is too hot. Check if the too many appliances are plugged to the same connector.
E0, E1, E2, E3, E4, E8 or Ed is displayed on the screen.	The induction cooker has malfunctions. Take the appliance to a Philips dealer or a service centre authorised by Philips.
E7 displays on the screen.	Check if the appliance has been operating for 2 hours. Check if the air outlets are blocked. Check if the ambient temperature is too high.
The induction cooker stops working or turns off automatically.	When the error code displays on the screen, the appliance stops heating automatically. If the appliance resumes working after it drops to room temperature, the error code is caused by the overheating protection of the appliance. If the error persists and you cannot resolve it, do not repair or disassemble the appliance by yourself. Take the appliance to your Philips dealer or a service center authorised by Philips.

Indonesia

1 Kompor listrik Anda

Selamat atas pembelian Anda dan selamat datang di Philips! Untuk memanfaatkan sepenuhnya dukungan yang ditawarkan Philips, daftarkan produk Anda di www.philips.com/welcome.

2 Apa saja isi kemasannya

Unit utama kompor listrik Pot
Safety leaflet Petunjuk Pengguna
Kartu garansi

Ikhtisar

① Pot	⑤ Masukan udara
② Unit utama kompor listrik	⑥ Panel kontrol
③ Pelat masak kristalit	⑦ Keluaran udara
④ Area memasak	⑧ Kabel listrik

Setting up child lock

When the induction cooker is working, press the Child lock button () for 3 seconds to enter child lock mode.

Note

- At child lock mode, only the On/Off () and Child lock () buttons are responsive.
- To unlock, press the Child lock button () for 3 seconds.

5 Cleaning

Unplug the appliance and let it cool down. Clean the appliance with a damp cloth and, if necessary, with some mild cleaning agent.

6 Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

