www.philips.com/welcome

AC4025



User manual



Contents

1	Important Safety	4
2	Your air purifier What's in the box	5 5
3	Get started Install filters	6
4	Use the air purifier Understand the healthy air protect alert Switch on or off Change the fan speed Sleep mode Set the Timer	8 8 8 9 9
5	Clean your air purifier Clean the air purifier Clean the activated carbon filter	11 11 11
6	Replace the filters Replace the activated carbon filter and the HEPA filter Reset the filter lifetime counter	13 13 15
7	Troubleshooting	16
8	Guarantee and service Order parts or accessories	17 17
9	Notices Electomagnetic fields (EMF) Compliance with EMF Recycling	18 18 18 18

1 Important

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

4

Danger

- Do not let water or any other liquid or flammable detergent enter the appliance to avoid electric shock and/or a fire hazard.
- Do not clean the appliance with water, any other liquid, or a (flammable) detergent to avoid electric shock and/or a fire hazard.



Warning

- Check if the voltage indicated on the bottom or indicated at the rear of the appliance corresponds to the local power voltage before you connect the appliance.
- If the power cord is damaged, you must have it replaced by Philips, a service center authorized by Philips, or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord, or the appliance itself is damaged.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet.

1

Caution

- This appliance is not a substitute for proper ventilation, regular vacuum cleaning, or use of an extractor hood or fan while cooking.
- If the power socket used to power the appliance has poor connections, the plug of the appliance becomes hot. Make sure that you plug the appliance into a properly connected power socket.
- Always place and use the appliance on a dry, stable, level, and horizontal surface.
- Leave at least 20cm free space behind and on both sides of the appliance and leave at least 30cm free space above the appliance.
- Do not place anything on top of the appliance and do not sit on the appliance.
- Do not place the appliance directly below an air conditioner to prevent condensation from dripping onto the appliance.
- Make sure all filters are properly installed before you switch on the appliance.
- Only use the original Philips filters specially intended for this appliance. Do not use any other filters.
- Avoid knocking against the appliance (the air inlet and outlet in particular) with hard objects.
- Always lift or move the appliance by the handle at the back of the appliance.
- Do not insert your fingers or objects into the air outlet.
- Do not use this appliance when you have used indoor smoke-type insect repellents or in places with oily residues, burning incense, or chemical fumes.
- Do not use the appliance near gas appliances, heating devices or fireplaces.
- Always unplue the appliance after use and before you clean it.
- Do not use the appliance in a room with major temperature changes, as this may cause condensation inside the appliance.
- To prevent interference, place the appliance at least 2m away from electrical appliances that use airborne radio waves such as TVs, radios, and radio-controlled clocks.
- The appliance is only intended for household use under normal operating conditions.
- Do not use the appliance in wet surroundings or in surroundings with high ambient temperatures, such as the bathroom, toilet, or kitchen.
- The appliance does not remove carbon monoxide (CO) or radon (Rn). It cannot be used a a safety device in case of accidents with combustion processes and hazardous chemicals.

2 Your air purifier


Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

Read this user manual carefully before you install and use the unit. Save it for future reference.

What's in the box

Check and identify the contents of your package:

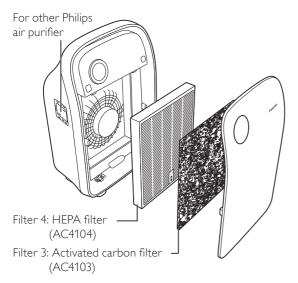

Filter 1 and 2 are for other Philips air purifier.



3 Get started

Install filters

The air purifier comes with all filters fitted inside, but you have to remove the packaging of the filters before you can use the appliance. Remove all filters, unpack them, and place them back into the air purifier as described below.




Tip

• When you remove or insert filters, place the air purifier against a wall for more stability.




Note


- Insert the filters in the correct position.
- Place your fingers at the top panel and gently pull the top part of the front panel towards you. (1)
- 2 Lift the panel out of the hooks at the bottom of the purifier. (2)

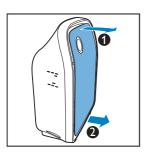


3 Remove all the filters from the purifier.

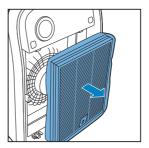

4 Remove all packaging material from the filters.

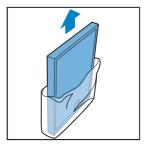


5 Put the filters back into the purifier.

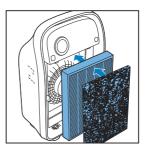



Vote

 Make sure that the side with the tag is pointing towards you, and the tag is at the bottom end of the filter. 6 To reattach the front panel, insert the bottom hooks into the bottom of the purifier first (1). Then, push the panel against the body of the purifier (2).

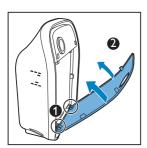

4 Use the air purifier

Understand the healthy air protect alert

This purifier is equipped with the Healthy air protect alert to make sure that the filters are in optimal condition when the purifier is operating.

The filter replacement light (\mathbf{S}) indicates the filter have to be replaced.

Healthy air protect	Follow this	
alert		
Filter replacement	You still have 2 weeks	
light S flashes. This	time to replace the	
lasts approximately	activated carbon filter	
for 2 weeks.	and the HEPA filter.	
Filter replacement	Replace the activated	
light S is on	carbon filter and	
continuously.	the HEPA filter	
	immediately.	


Switch on or off

Plug the air purifier into the power supply.
 → All lights go on twice. Then, the lights go out again.


Control panel



- **2** Press the Φ button to switch on the purifier.
 - → The power-on light [] on the control panel goes on.

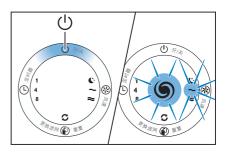

3 Press the Φ button to switch off the purifier.

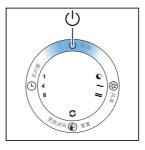


Change the fan speed

You can select the desired fan speed.




Note

- When you select a fan speed, you can also use the timer function (see 'Set the timer'). In this case, one of the ⊗ lights (, , , and ≈) and the one of the ⊙ lights (1, 4, or 8) are on.
- 1 Press the Φ button to switch on the purifier.

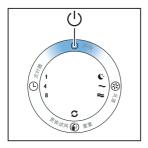


Press the ® button once or more times to select the desired fan speed (€, ~, or ≈).

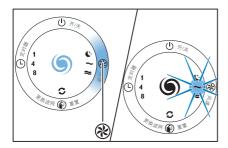


Sleep mode

In sleep mode, the air purifier operates very quietly for your undisturbed sleep.

1 Press the Φ button to switch on the air purifier.

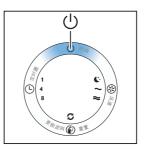

Press the ® button to select sleep mode.
 → The ♥ light goes on while the ¶ goes off.

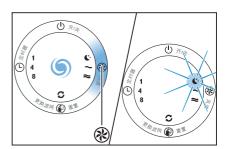

To change to another fan speed, press the $\ensuremath{\mathfrak{G}}$ button.


Set the Timer

With the timer function, you can let the purifier operate for a set number of hours. When the set time has elapsed, the purifier automatically switches off.


You can use the timer function in the following situation:

Situation	You will see	
Choose a fan	One of the \circledast lights ($oldsymbol{\mathfrak{C}}$, $oldsymbol{\sim}$	
speed manually	, or $pprox$) and one of the $^{ ext{@}}$	
(see 'Manual')	lights (1, 4 , or 8) are on.	

1 Press the O button to switch on the purifier.

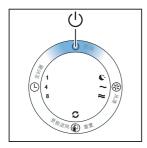

2 Press the [®] button to activate the timer.→ The [®] light (1, 4, or 8) goes on.

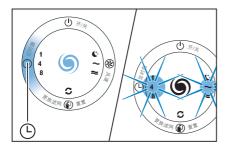

Press the [®] button repeatedly to choose the number of hours you want the purifier to operate. The corresponding [®] light (1, 4, or 8) goes on.

To deactivate the timer function, press the $^{\textcircled{0}}$ button repeatedly until the $^{\textcircled{0}}$ light (1, 4, or 8) is out.

5 Clean your air purifier



Note

- · Always unplug the purifier before you clean it.
- Never immerse the purifier in water or any other liquid.
- Never use abrasive, aggressive, or flammable cleaning agents such as bleach or alcohol to clean any part of the purifier.
- The air purifier filters are NOT washable.

Clean the air purifier

Regularly clean the inside and outside of the purifier body to prevent dust from collecting.

- 1 Wipe away dust with a soft dry cloth from the body of the purifier.
- 2 Clean the air inlet and the air outlet with a soft dry cloth.

Clean the activated carbon filter


This activated carbon filter catches large airborne particles like lint, dust, human hair, and pet hair. It also helps remove odors.



Note

- The activated carbon filter is not washable nor vacuum cleanable.
- Clean the activated carbon filter for every two weeks to ensure optimal functioning of the purifier.


1 Switch off the purifier and unplug it.

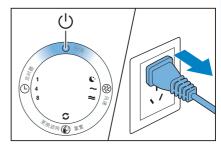


Place your fingers at the top panel and gently pull the top part of the front panel towards you (1). Lift the panel out of the hooks at the bottom of the purifier (2).



3 Remove the activated carbon filter.

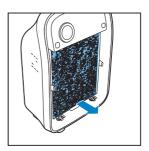


4 Clean the activated carbon filter with soft brush to remove dust.

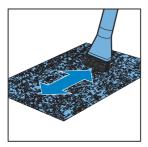

5 Put the activated carbon filter back into the purifier.



6 To reattach the front panel, insert the bottom hooks into the bottom of the purifier first (1). Then, push the panel against the body of the purifier (2).

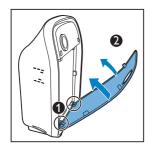

6 Replace the filters

The filter replacement light (**3**) indicate the filter have to be replaced.

Replace the activated carbon filter and the HEPA filter



Note

 The activated carbon filter and the HEPA filter are neither washable nor vacuum cleanable.

Replace both the activated carbon filter and HEPA filter when the **3** light starts to flash. This will last for approximately 2 weeks. When you do not replace the filter in time: The **3** lights up continuously.



In sleep mode, when the **3** light starts to flash but dim, replace both the activated carbon filter and HEPA filter. This will last for approximately 2 weeks.

When you do not replace the filter in time:

→ The **5** lights up but dim continuously.




Tip

 When you remove or insert filters, place the purifier against a wall for more stability.



Note


- · Insert the filters in the correct position.
- Make sure you place the filters in the order of HEPA filter and activated carbon filter.
- Make sure that the side with the tag is pointing towards you, and the tag is at the bottom end of the filter.
- 1 Switch off the purifier and unplug it.

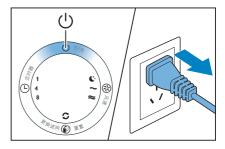


- 2 Place your fingers at the top panel and gently pull the top part of the front panel towards you (1).
- 3 Lift the panel out of the hooks at the bottom of the purifier (2).




4 Remove all the filters from the purifier.

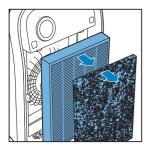

Remove all packaging material from the new filters.

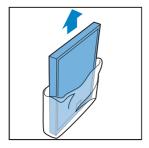

6 Place the new HEPA filter in the purifier first.

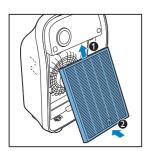

7 Place the new activated carbon filter in the purifier.



8 To reattach the front panel, insert the bottom hooks into the bottom of the purifier first (1). Then, push the panel against the body of the purifier(2).




Reset the activated carbon filter and the HEPA filter lifetime (see 'Reset the filter lifetime counter).

Reset the filter lifetime counter


When you replace the filters, it is important that you also reset the filter lifetime counter afterwards. This allows the purifier to be in sync with the filter lifetime.

After you have replaced the filter, reset the filter time:


1 Switch off the purifier and unplug it.

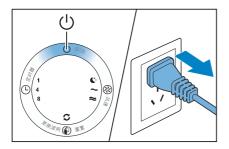

- 2 Replace the air purifier filter (see 'Replace the filters').
- Put the plug in the power socket and switch on the purifier again.

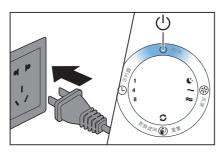

4 Press and hold the © button for 2 seconds.

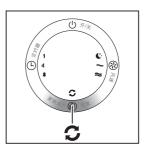



Note

- Reset the purifier when it is plugged in and switched
 on
- Only replace the filters when you see the **3** light start flashing.

7 Troubleshooting

This chapter summarizes the most common problems you could encounter with the purifier. If you are unable to solve the problem with the information below, contact the Consumer Care Center in your country.

Problem	Possible solution		
The S light	The filter is full. Replace the		
has been flashing.	filter and reset the purifier.		
No air comes out of the air outlet.	The purifier is not connected to the power supply. Plug the purifier into the power supply and switch on.		
The airflow that comes out of the air outlet is significantly weaker than before.	You have not removed all packaging material from the filters. Make sure that you have removed all packaging material.		
The air quality does not improve, even though the purifier has been operating for a long time.	One of the filters has not been placed in the purifier. Make sure that all filters are properly installed in the following order, starting with the innermost filter: 1) HEPA filter, 2) activated carbon filter.		
The purifier is extra loud.	You have not removed all packaging material from the filters. Make sure that you have removed all packaging material. You can change the fan speed to lower fan speed.		
The purifier still indicates that I need to replace a filter, but I already did.	Perhaps you did not press the filter reset button properly. Plug in the purifier, press the \circlearrowleft button. Then, press and hold the \textcircled{e} button for 2 seonds.		

8 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Consumer Care Center in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

Order parts or accessories

If you have to replace a part or want to purchase an additional part, go to your Philips dealer or visit www.philips.com/support.

If you have problems obtaining the parts, please contact the Philips Consumer Care Center in your country (you find its phone number in the worldwide guarantee leaflet).

9 Notices

Electomagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

