

注册您的产品并在以下网站链接中了解详情  
www.philips.com/welcome

HR2084

EN	Important information leaflet
IN	Pamflet informasi penting
KO	중요 정보 책자
MS-MY	Risalah maklumat penting
TH	ເອກສານຂໍ້ມູນສໍາຄັນ
VI	Tờ rơi về thông tin quan trọng
ZH-CN	重要信息手册
ZH-TW	重要資訊手冊

PHILIPS



技术规格如有变更，恕不另行通知  
© 2012 Koninklijke Philips Electronics N.V.  
保留所有权利



3140 035 32271

## English

### 1 Important

Read this Important Information leaflet carefully before you use the blender and save it for future reference.

#### Safety

##### Danger

Never immerse the motor unit in water or any other liquid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.

##### Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Do not use the appliance if the plug, the power cord or other parts are damaged.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.
- Make sure the blade unit is securely fastened to the blender jar before you assemble the blender jar onto the motor unit.
- Never reach into the blender jar with your fingers or an object while the appliance is running.
- Never use the blender jar to switch the appliance on and off.
- Never let the appliance run unattended.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never use the blender beaker, chopper beaker or mill beaker to switch the appliance on and off.
- To avoid a hazardous situation due to inadvertent resetting of the thermal cut-out, never connect this appliance to a timer switch.

##### Caution

- Always unplug the appliance before you assemble, disassemble or make adjustments to any of the parts.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum indication on the blender jar, the mill (specific types only) beaker and the chopper bowl (specific types only).
- Do not exceed the maximum quantities and processing times indicated in the relevant table.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.
- Never fill the blender jar with ingredients hotter than 80°C/175°F.
- Unplug the appliance before you clean it.
- Avoid touching the cutting edges of the blade units when you clean them. They are very sharp and you could easily cut fingers on them.
- This appliance is intended for household use only.
- Noise level: Lc = 86 dB(A)

#### Filter

##### Caution

- Never use the filter to process ingredients hotter than 80°C.
- Never overload the filter. Do not fill the filter beyond its metal part.
- Always make sure the lid of the blender jar is assembled properly and the measuring cup is inserted properly in the lid before you switch on the appliance.
- Cut fruit into smaller pieces before you put it in the filter.
- Soak dried ingredients, such as soy beans, before you put them in the filter.

#### Built-in safety lock

This feature ensures that you can only switch on the appliance if the blender jar, the mill or chopper beaker is assembled on the motor unit properly. If the blender jar, the mill or chopper beaker is correctly assembled, the built-in safety lock will be unlocked.

#### Thermal cut-out

The appliance is equipped with a thermal cut-out that automatically cuts off the power supply to the appliance if it overheats. If the appliance suddenly stops running:

- 1 Unplug the appliance.
- 2 Let the appliance cool down for 30 minutes.
- 3 Put the plug in the wall socket.
- 4 Switch on the appliance again.

Note: Contact your Philips dealer or an authorised Philips service centre if the thermal cut-out is activated too often.

#### Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

#### Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

## 2 Guarantee & service

If you need service or information or if you have a problem, please visit the Philips website at [www.philips.com](http://www.philips.com) or contact the Philips Consumer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## Indonesia

### 1 Penting

Baca bulet Informatif Penting ini dengan cermat sebelum menggunakan blender dan simpanlah untuk referensi nanti.

#### Keselamatan

##### Bahaya

Jangan sekali-kali merendam unit motor di dalam air atau cairan lain apa pun, jangan pula menyiramnya di bawah keran air. Gunakan hanya kain yang lembab untuk membersihkan unit motor.

##### Peringatan

- Periksalah apakah voltase pada alat sesuai dengan voltase listrik di rumah Anda, sebelum menghubungkan alat.
- Jika kabel listrik rusak, maka harus diganti oleh Philips, pusat layanan resmi Philips atau orang yang mempunyai keahlian sejenis agar terhindar dari bahaya.
- Jangan menggunakan alat jika steker, kabel listrik atau komponen lain ada yang rusak.
- Jangan sentuh bilah, terutama ketika alat terhubung ke stopkontak. Pisau sangat tajam.
- Pastikan unit pisau telah terpasang dengan kencang pada tabung blender sebelum memasang tabung blender pada unit motor.
- Jangan sekali-kali memasukkan jari atau benda lainnya ke dalam tabung blender sewaktu alat sedang bekerja.
- Jangan sekali-kali menggunakan tabung blender untuk menghidupkan dan mematikan alat.
- Jangan sekali-kali meninggalkan alat yang sedang bekerja tanpa ditunggu.
- Alat ini tidak dimaksudkan untuk digunakan oleh orang dengan cacat fisik (termasuk anak-anak), indera atau kecacatan mental yang kurang, atau kurang pengalaman dan pengetahuan, kecuali jika mereka diberikan pengawasan atau petunjuk mengenai penggunaan alat oleh orang yang bertanggung jawab bagi keselamatan mereka.
- Anak kecil harus diawasi untuk memastikan mereka tidak bermain-main dengan alat ini.
- Jangan sekali-kali menggunakan gelas blender, gelas perajang atau gelas gilingan untuk menghidupkan dan mematikan alat.
- Untuk mencegah bahan akibat kecerobohan dalam melakukan reset pengaman termal, jangan sekali-kali menghubungkan alat ini ke saklar berwaktu.

##### Perhatian

- Cabut selalu steker alat dari listrik sebelum Anda merakit, membongkar atau menyeuaikan komponennya.
- Jangan sekali-kali menggunakan aksesoris atau komponen apa pun dari produsen lain atau yang tidak secara khusus direkomendasikan oleh Philips. Jika Anda menggunakan aksesoris atau komponen tersebut, garansi Anda menjadi batas.
- Jangan melampaui tanda maksimum pada tabung blender: gelas gilingan (hanya tipe tertentu) dan mangkuk perajang (hanya tipe tertentu).
- Jangan melampaui takaran maksimum dan waktu pengolahan yang ditunjukkan dalam tabel bersangkutan.
- Jika makanan lengket ke dinding tabung blender, matikan alat dan cabut stekernya. Kemudian gunakan spatula untuk membersihkan makanan dari dinding tabung.
- Pastikan selalu tutup tabung blender terpasang dengan benar dan gelas ukurnya dimasukkan dengan benar dalam tutupnya sebelum Anda menghidupkan alat.
- Jangan sekali-kali mengisi tabung blender dengan bahan makanan yang lebih panas dari 80 °C/175 °F.
- Selalu cabut kabel listrik alat sebelum Anda membersihkannya.
- Hindari menyentuh tipe pemotong pada unit pisau saat membersihkannya. Pisau ini sangat tajam dan dapat dengan mudah melukai jari Anda.
- Alat ini hanya ditujukan untuk keperluan rumah tangga.
- Tingkat kebisinan: Lc = 86 dB (A)

#### Filter

##### Caution

- Never use the filter to process ingredients hotter than 80°C.
- Never overload the filter. Do not fill the filter beyond its metal part.
- Always make sure the lid of the blender jar is assembled properly and the measuring cup is inserted properly in the lid before you switch on the appliance.
- Cut fruit into smaller pieces before you put it in the filter.
- Soak dried ingredients, such as soy beans, before you put them in the filter.

#### Built-in safety lock

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

##### Filter

##### Caution

##### Perhatian

##### Thermal cut-out

