



# Delicious hot food easily

## 30-minute timer

A toaster oven designed to help you make delicious food and snacks every time. Toasts and warms, and has a lot of features that make it easy to get good food. Includes 30-minute timer, crumb tray and baking tray.

### **Delicious food**

- · Toasts or warms food and snacks
- · 30-minute timer shuts off the oven once ready

#### Easy to experience

- · Large square baking tray (230 x 230 mm)
- · Removable crumb tray for easy cleaning
- · Ready bell sounds when food is ready
- · Detachable grid

#### Safe to use

· On/off light

# Highlights

#### **Function**

Toasts or warms food and snacks.

#### 30-minute timer



30-minute timer shuts off the oven once ready.

#### Removable crumb tray



Is easy to clean thanks to its removable crumb tray.

#### Ready bell

Ready bell sounds when food is ready.

# Specifications

#### **General specifications**

Non slip feet

### **Technical specifications**

Capacity: 9 l

Effective capacity: 5.7 l Power: 900 W

Cord length: 1.0 m

Heating elements: Quartz (2x)

Voltage: 220-240 V Frequency: 50-60 Hz

#### **Design specifications**

Materials: Metal housing, plastic

knobs/handles (PBT)

Available color(s): Pearl white/grey/blue /08

### Accessories included

Baking tray: 230 x 230 mm

© 2019 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2019-03-07 Version: 2.1.1

12 NC: 0000 000 00000

www.philips.com

