

Important information

To enjoy the most out of your new steam generator, please read carefully.

For further information on usage and troubleshooting, please read the user manual.

1. Usage of right water type



DO NOT USE:

Perfumed water, vinegar, descaling agents, ironing aids etc.

Recommended to use: Demineralised water if you

live in hard water area

OR

Tap water

2. Steam control

Steam will enhance your ironing performance. Control the steam while ironing by using the steam trigger.



Press and hold the steam trigger for steam during ironing.



Any questions?

Don't go back to store, Philips is here to help. Contact us directly.



0207 949 0240



015245443

www.philips.com/support

Please turn over for descaling

3. Light reminder for descaling



Perform descaling once the **EASY DE-CALC** light starts to flash.

Performing the descaling procedure regularly helps to prolong the lifetime of the appliance and optimise the ironing performance.

4. Performing Descaling

 $oldsymbol{\Lambda}$ Ensure that the steam generator has cooled down before performing the descaling procedure.



Place the steam generator at the edge of a table or sink and hold a cup under the EASY DE-CALC knob.



Remove the EASY DE-CALC knob and let the water with scale particles flow into the cup.



When no more water comes out, reinsert the EASY DE-CALC knob and turn it clockwise to tighten it.

