

PHILIPS

Pusher

Aluminium
Collection

Plastic

CP9164



to replace your current pusher

Find matching products on the specifications tab

The pusher is the tube on top of the lid of your food processor, through which you can put the ingredients. It's easily removable, so it's easy to clean!

Ease of using Philips spare parts

- Easily renew your product with original Philips parts

Highlights

Easy replacement of product parts

From time to time your product needs a facelift, and with Philips consumer replacement parts to renew your product, it's never been so easy! All this with guaranteed Philips quality.

Specifications

Replaceable part

Fits product types: HR1861/00, HR1861/01, HR1861/03

