



ENGLISH

Introduction

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

Danger

- Never vacuum up water or any other liquid. Never vacuum up flammable substances and do not vacuum up ashes until they are cold.
- Never immerse the appliance or the adapter in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not use the appliance or the adapter if it is damaged.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Do not open the appliance to replace the rechargeable battery.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of the reach of children.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

Caution

- Only charge the appliance with the adapter supplied. During charging, the adapter feels warm to the touch. This is normal.
- Do not plug in, unplug or operate the appliance with wet hands.
- Do not unplug the appliance by pulling at the cord. Always unplug by pulling the small plug (Fig. 1) out of the appliance and the adapter out of the wall socket (Fig. 2).
- Always switch off the appliance after use and when you charge it.
- Never block the exhaust air openings during vacuuming.
- Always use the vacuum cleaner with the filter unit assembled.
- Make sure that the appliance is installed with the wall fixture mounted to the wall, according to the instructions in the user manual.
- Be careful when you drill holes in the wall to attach the wall fixture, to avoid the risk of electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Troubleshooting

 
This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

| Problem | Possible cause | Solution |
|---|--|---|
| The appliance does not work when I push the button. | The battery light flashes fast because the batteries are low. | To charge the batteries, insert the small plug into the socket on the appliance and insert the adapter into a wall socket. |
| | You cannot use the appliance because the appliance is still charging. | You have to remove the small plug from the socket on the appliance before you can switch on the appliance. |
| | You have to press two buttons. | First press the on/off button to switch on the appliance. Then press the MAX button to get maximum suction power. |
| The appliance has a lower suction power than usual. | The filter and the cyclone are dirty. | Clean the filter and the cyclone. |
| | You have not connected the dust bucket, the dust separator and the cyclone properly. Incorrect assembly of these parts causes air leakage, which leads to loss of suction power. | Connect the dust bucket, the dust separator and the cyclone properly. |
| Dust escapes from the appliance. | The filter is dirty. | Clean the filter. |
| The brush does not turn anymore. | The brush encounters too much resistance. | Clean the brush with a pair of scissors or by hand. If you clean the roller brush by hand, pull the hairs or threads from the widest side to the narrowest side of the roller brush (see user manual). |
| | You switched on the appliance by pressing the on button on the handheld vacuum cleaner. | Switch off the appliance by pressing the on button on the handheld vacuum cleaner again. Then switch it on again by pressing the on button on the stick. |
| FC6172, FC6169: The mini turbo brush does not function properly. | The roller brush is blocked. | Remove hairs from the brush with a pair of scissors (see user manual). |
| | The roller brush is blocked by fabric or surfaces during cleaning. | Keep the mini turbo brush aligned with the surface and do not push the turbo brush into soft surfaces. |
| | The mini turbo brush is not fully closed. | Make sure that the top and bottom parts of the mini turbo brush are properly connected and there is no gap between the two parts. Check if the locking ring is in closed position (see user manual). |
| | The connector between the mini turbo brush and the appliance is not placed properly. | Make sure that the connector is pushed into the mini turbo brush as far as it goes. |
| FC6172, FC6169: I cannot connect the mini turbo brush to the appliance. | The connector between the mini turbo brush and the appliance is not present. | You can remove the connector from the mini turbo brush, for instance for thorough cleaning, but you cannot connect the mini turbo brush directly to the appliance without the connector. To reassemble the mini turbo brush, first push the connector into the mini turbo brush as far as it goes and then push the connector into the nozzle of the handheld vacuum cleaner. |

PHILIPS

PHILIPS

产品：飞利浦立式/手持二合一充电式吸尘器
 型号：FC6168
 额定电压：220V ~
 额定频率：50Hz
 额定输入电流：0.35A
 生产日期：请见产品本体
 产地：中国



制造商：飞利浦电子香港有限公司
 香港新界沙田香港科学园科技道东五号

经销单位：飞利浦(中国)投资有限公司
 上海市天目西路218号1602-1605
 全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,
 GB4706.7-2014, GB4343.1-2009及
 GB17625.1-2012制造

保留备用

发行日期：28/07/2016



>75% recycled paper
 >75% 循环再造纸

介绍

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

重要安全信息

使用产品之前，请仔细阅读本重要信息，并妥善保管以供日后参考。

危险

- 切勿吸入水或其他任何液体。切勿吸入易燃物质，也不要吸入未冷却的灰烬。
- 切勿将本产品或适配器浸入水或其他任何液体中，也不要将它们放在水龙头下冲洗。

警告

- 在将本产品连接电源前，务必检查当地的电压是否与电源适配器所标电压一致。
- 使用前，请务必检查产品。请勿使用损坏的产品，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。
- 如果产品或适配器受损，请停止使用。
- 如果适配器已损坏，则务必更换原装型号适配器，以免发生危险。
- 切勿拆开本产品更换充电电池。
- 适配器中包含一个变压器。请勿剪下适配器更换其他插头，否则将导致严重后果。
- 产品不打算由有肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与产品使用有关的监督或指导。
- 请照顾好儿童，本产品不能用于玩耍。
- 将产品及其线缆放在儿童接触不到的地方。
- 清洁或维护产品之前，必须先从插座拔掉插头。

警告

- 只能用随附的适配器为本产品充电。充电期间，适配器会有微热。这是正常的。
- 切勿用湿手插入、拔下或操作本产品。
- 切勿通过拉动线缆拔下产品插头。要拔下电源插头，请务必将充电插头(图 1)拔出本产品，并将适配器拔出电源插座(图 2)。
- 使用后和充电时，请务必关闭产品。
- 吸尘时切勿阻塞排气口。
- 使用吸尘器时，请确保装上过滤部件。
- 请确保按照用户手册中的说明，用壁装装置将产品安装到墙上。
- 请注意，在墙上钻孔安装壁装装置时，请避免触电风险。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

订购配件

要购买附件或备件，请访问 www.shop.philips.com/service 或联系您的飞利浦经销商。您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅全球保修卡了解详细联系信息）。

保修和支持

如果您需要信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

回收


- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

| 问题 | 可能的原因 | 解决方法 |
|------------------------------|--|-----------------------------------|
| 按下按钮时，产品不工作。 | 由于电池电量低，电池指示灯快速闪烁。 | 要为电池充电，请将小插头插入产品的电源插孔，然后将适配器插入插座。 |
| | 您不能使用正在充电的产品。 | 您必须将小插头从产品的电源插孔拔出，然后才能开启产品。 |
| | 您必须按两个按钮。 | 首先按开/关按钮开启产品。然后按 MAX（最大）按钮获得最大吸力。 |
| 本产品的吸力比往常要小。 | 过滤网和旋风滤网不干净。 | 清洁过滤网和旋风滤网。 |
| 清洁过滤网和旋风滤网。 | 您没有正确连接集尘桶、灰尘分离器和旋风滤网。这些部件安装不正确会导致空气泄露，致使吸力损失。 | 正确连接集尘桶、灰尘分离器和旋风滤网。 |
| 灰尘从产品中溢出。 | 过滤网变脏。 | 清洁过滤网。 |
| FC6172, FC6169: 迷你涡轮刷无法正常工作。 | 滚刷阻塞。 | 用剪刀清除刷子上的毛发（请参见用户手册）。 |
| | 清洁过程中，滚刷被织物或表面阻塞。 | 保持迷你涡轮刷与表面对齐，且请勿将涡轮刷推入软质表面。 |

| 问题 | 可能的原因 | 解决方法 |
|---------------------------------|-----------------------|---|
| | 迷你涡轮刷未完全关闭。 | 确保迷你涡轮刷的顶部和底部正确连接，两个外壳部分之间没有间隙。检查闭锁环是否处于关闭位置（请参见用户手册）。 |
| | 迷你涡轮刷和本产品之间的连接器未正确放置。 | 确保连接器尽可能深地推入迷你涡轮刷。 |
| FC6172, FC6169: 无法将迷你涡轮刷连接到本产品。 | 迷你涡轮刷和本产品之间的连接器不存在。 | 可从迷你涡轮刷卸下连接器，例如为了彻底清洁，但是无法在没有连接器的情况下将迷你涡轮刷直接连接到本产品。要重新组装迷你涡轮刷，首先将连接器尽可能深地推入迷你涡轮刷，然后将连接器推入手持式吸尘器的吸嘴。 |

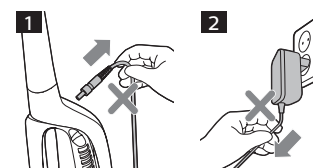

产品中有害物质的名称及含量

| 部件名称 | 有害物质 | | | | | |
|-------|--------|--------|--------|---------------|------------|--------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr (VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 电源适配器 | ○ | ○ | ○ | ○ | × | × |

本表格依据 SJ/T 11364 的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

