

Always there to help you  
Register your product and get support at  
www.philips.com/welcome

Question?  
Contact  
Philips

HD3060



EN User manual TW 使用手冊

PHILIPS



Specifications are subject to change without notice.  
© 2014 Koninklijke Philips N.V.  
All rights reserved.

HD3060\_UM\_TW\_V2.0



## English

### 1 Your rice cooker

Congratulations on your purchase, and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.Philips.com.tw/welcome](http://www.Philips.com.tw/welcome).

### 2 Important

Please read this safety leaflet carefully before you use the rice cooker and save it for future reference.

### Danger

- Do not immerse the rice cooker in water; nor rinse it under the tap.

### Warning

- This appliance shall not be used by children from 0 year to 8 years. This appliance can be used by children aged from 8 years and above if they are continuously supervised. This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children.
- Children shall not play with the appliance.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.
- Make sure that the damaged power cord is replaced by Philips, a service center authorized by Philips or similarly qualified persons in order to avoid a hazard.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the rice cooker corresponds to the local power voltage before you connect it.
- Only connect the rice cooker to a grounded power outlet. Always make sure that the plug is inserted firmly into the power outlet.
- Do not use the appliance if the plug, the power cord, the inner pot, the sealing ring, or the main body is damaged.
- Do not let the power cord hang over the edge of the table or worktop on which the rice cooker stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the rice cooker or press any of the buttons on the control panel with wet hands.

### Caution

- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the rice cooker to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the rice cooker to direct sunlight.
- Place the rice cooker on a stable, horizontal, and level surface.
- Always put the inner pot in the rice cooker before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the rice cooker is operating. Take extra caution when touching the rice cooker.
- Beware of hot steam coming out of the steam vent during cooking or out of the rice cooker when you open the lid. Keep hands and face away from the rice cooker to avoid the steam.
- The inner pot and steamer during and after cooking process, may be hot and heavy.
- Do not lift and move the rice cooker while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.

- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the rice cooker near a magnetic substance.
- Always let the rice cooker cool down before you clean or move it.
- Always clean the rice cooker after use. Do not clean the rice cooker in dishwasher.
- Always unplug the rice cooker if not used for a longer period.
- If the rice cooker is used improperly or for professional or semiprofessional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

### Power failure backup function

This appliance has a backup function that remembers the status before a power failure.

- If the power failure occurs during a cooking process, and the power supply is resumed within two hours, the countdown of the cooking time continues where it left off.
- If the power failure occurs when the appliance is at preset mode, and the power supply is resumed within two hours, the countdown of the preset time continues where it left off.

- If the power supply is resumed after two hours, the appliance will not resume the previous work, but be in standby mode.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### 3 What's in the box (fig. 1)

① Rice cooker main unit	⑤ Measuring cup
② Power cord	⑥ Warranty card
③ Rice scoop	⑦ User manual
④ Soup ladle	

### 4 Overview

#### Product overview (fig. 2)

⑧ Steam valve	⑬ Heating element
⑨ Lid release button	⑭ Cooker handle
⑩ Control panel	⑮ Water level indications
⑪ Main unit	⑯ Inner pot
⑫ Power socket	⑰ Detachable inner lid

#### Controls overview (fig. 3)

⑱ Display screen	⑳ Menu button
㉑ Preset button	㉒ Warm/Off button
㉓ Cooking time button	㉔ Start button
㉕ Reheat button	

#### Cooking time regulating range

Program	Default cooking time	Time regulation	Preset time
Rice	about 35 min	N/A	24 hr
Soup	2 hr	1-4 hr	24 hr
Congee	2 hr	1-4 hr	24 hr
Stew	2 hr	1-4 hr	24 hr
Yogurt	6 hr	4-12 hr	24 hr
Reheat	25 min	25-59 min	N/A
Claypot rice	about 1 hr 20 min	N/A	24 hr
Warm	12 hr	Activated automatically after cooking functions are finished (excluding yogurt)	

### 5 Using the rice cooker

#### Note

- If you press the keep-warm/off button (⏻) to cancel the current setting and the existing function, the rice cooker enters into the standby mode; if you press the keep-warm/off button (⏻) in the standby mode, the rice cooker automatically enters the keep-warm mode.
- To switch off, you need to unplug the appliance.
- The cooking time begins once the rice cooking function starts and ends when the rice cooker enters into the keep-warm mode.

#### Before first use

- Take out all the accessories from the inner pot. Remove all packaging materials of the inner pot.
- Clean the parts of the rice cooker thoroughly before using the rice cooker for the first time (see chapter "Cleaning").

#### Note

- Make sure all parts are completely dry before you start using the rice cooker.

#### Cooking rice (fig. 4 & 5)

- Measure the rice accurately by using the measuring cup provided; level the rice off at the top of the cup to maintain accuracy.
- Rinse the rice thoroughly.

#### Note

- The first rinse should be done quickly, swishing and stirring the rice by hand with plenty of water. Drain the water immediately afterwards. Then rinse the rice 2-3 times with fresh water to clean out the bran.

- Put the pre-washed rice in the inner pot.
- Add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used. Then smooth the rice surface.
  - For instance, if you cook 4 cups of rice, add water up to the 4-cup level indicated on the scale.

#### Note

- It is normal that rice overflows due to unstable voltage.
- The level marked inside the inner pot is just an indication; you can always adjust the water level for different types of rice and your own preference.
- Besides following the water level indications, you may also add rice and water at 1:1-1.2 ratio for rice cooking.
- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow and cause potential hazard.

- Press the lid release button to open the lid.
- Wipe the outside of the inner pot dry, then put it in the rice cooker. Check if the inner pot is in proper contact with the heating element.

#### Note

- Make sure that the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

- Close the lid of the rice cooker, and put the plug in the power socket.
- Press the menu button (⏻) until the rice cooking function is selected.
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep-warm mode automatically.
  - The keep-warm indicator (⏻) lights up.

#### Note

- After the cooking is finished, stir the rice and loosen it immediately to release excessive moisture for fluffy rice.
- Depending on the cooking conditions, the bottom portion of the rice may become slightly browned.

#### Making soup (fig. 6)

- Put ingredients and water into the inner pot.
- Follow steps 6 and 7 in "Cooking rice".
- Press the menu button (⏻) until the soup cooking function is selected.
  - To set a different cooking time, refer to chapter "Adjusting the cooking time".
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep-warm mode automatically.
  - The keep-warm indicator (⏻) lights up.

#### Cooking congee (fig. 6)

- Follow steps 1 to 7 in "Cooking rice".

#### Note

- Do not exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow.

#### Tip

- Besides following the water level indications, you may also add rice and water at 1:1 ratio for congee cooking.

- Press the menu button (⏻) until the congee cooking function is selected.
  - To set a different cooking time, refer to chapter "Adjusting the cooking time".
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep-warm mode automatically.
  - The keep-warm indicator (⏻) lights up.

#### Stewing (fig. 6)

- Put the food and ingredients in the inner pot.
- Follow steps 6 and 7 in "Cooking rice".
- Press the menu button (⏻) until the stewing function is selected.
  - To set a different cooking time, refer to chapter "Adjusting the cooking time".
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep-warm mode automatically.
  - The keep-warm indicator (⏻) lights up.

#### Making yogurt (fig. 7)

- Whisk the ingredients for the yogurt well and put them in the sealed containers.

#### Note




- Use sealed containers which are made of food-grade plastics or glass that can bear temperature more than 80°C.

- Put the containers in the inner pot. Make sure that containers sealed.
- Pour some water in the inner pot. Make sure that half of the containers are immersed in water.
- Follow steps 6 and 7 in "Cooking rice".
- Press the menu button (⏻) until the yogurt making function is selected.
  - To set a different cooking time, refer to chapter "Adjusting the cooking time".
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- When the cooking is finished, the rice cooker beeps and switches to stand by mode automatically.

#### Cooking claypot rice (fig. 8)

 
- Follow steps 1 to 7 in "Cooking rice".
- Press the menu button (⏻) until the claypot rice cooking function is selected.
- Press and hold the start button (⏻) for 3 seconds to start cooking.
- After the rice is cooked for some time, the rice cooker beeps for a while.
- Add the ingredients for the claypot rice by placing them on top of the rice. Close the lid to resume the cooking process.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep-warm mode automatically.
  - The keep-warm indicator (⏻) lights up.

## Reheating (fig. 9)

- Loosen the cooled rice and evenly distribute it in the inner pot.
- Pour some water onto the rice to prevent it from becoming too dry.The quantity of the water depends on the amount of rice.
- Follow steps 6 and 7 in "Cooking rice".
- Press the reheating button (  ).
  - To set a different cooking time, refer to chapter "Adjusting the cooking time".
- Press and hold the start button (  ) for 3 seconds to start cooking.
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The rice cooker will be in keep warm mode automatically.
  - The keep-warm indicator (  ) lights up.






### Adjusting the cooking time (fig. 10 & 11)

You can adjust the cooking time for reheat, yogurt, congee, soup and stew. Refer to the "Functions overview" table for the time regulation of each function. After you have selected the desired cooking function using the menu button, the default cooking time will be displayed on the screen.

- To set a different cooking time, press the cooking time button (  ), and the hour unit starts flashing on the display.
- Press the cooking time button repeatedly to set the hour unit.
- After the hour unit is set, wait for a few seconds before the hour unit is confirmed, and the minute unit starts flashing on the display.
- Press the cooking time button repeatedly to set the minute unit.

### Preset time for delayed cooking (fig. 12)

You can press the delayed cooking time in different cooking modes.

- Press the menu button (  ) until the desired cooking function is displayed on the screen.
- Press the preset time button (  ).
  - The preset time is displayed on the screen, and the hour unit starts flashing.
- Press the preset time button (  ) repeatedly to set the hour unit.
- When the hour unit is set, wait for a few seconds before the hour unit is confirmed, and the minute unit starts flashing on the display.
- Press the preset time button (  ) repeatedly to set the minute unit.
- After the minute unit is set, press and hold the start button (  ) for 3 seconds to confirm the preset timer.
  - The preset indicator lights up in yellow when the preset timer is activated. It turns blue when the preset time has elapsed.
- The cooking will be finished when the preset time has elapsed. The rice cooker beeps and switches to keep-warm or standby mode automatically.

## Note

 
 
- If the preset time is shorter than the cooking time, the rice cooker will start the cooking process immediately.
- When the room temperature is high in summer, set the time for delay cooking for the rice function within 12 hours to prevent the soaked rice from spoilage.

## Tip

- After the preset time is set, you can press the Warm/Off button to deactivate the preset function.

### Setting up child lock (fig. 13)

To protect your child from using the rice cooker, you can set up the child lock function.


 
- During the process, press and hold the cooking time button (  ) for 3 seconds to enter the child lock mode.
  - The child lock icon appears on the display screen.
- To unlock, press and hold the cooking time button (  ) for 3 seconds again.
  - The child lock icon disappears from the display screen.

### Keep-warm mode

The rice cooker provides you with easy control over the keep-warm function.

- To keep rice in the rice cooker for later consumption, use the keep-warm mode; otherwise, the rice may develop a foul odor or spoil.
- Do not use the keep-warm mode in the below situations:
  - Keeping rice warm for more than 12 hours.
  - Keeping rice warm with leftovers.
  - Reheating the cooled rice.
  - Keeping rice warm when it contains additional ingredients and seasonings.
  - Keeping food other than rice warm.
  - Keeping rice warm when rice scoop has been left in the inner pot.
- When keeping a small amount of rice warm, gather the rice towards the center of the inner pot to prevent drying.

## Note

- Except for yogurt, all other cooking functions will allow the product to go into the keep-warm mode.
- In keep-warm mode, you can press the keep-warm button (  ) to enter the keep-warm mode.
- In keep-warm mode, you can press the keep-warm button (  ) to enter the standby mode.
- When the keep-warm time is longer than 12 hours, the rice cooker will automatically switch to the standby mode.

## Cleaning and Maintenance

## Note

- Unplug the rice cooker before starting to clean it.
- Wait until the rice cooker has cooled down sufficiently before cleaning it.

### Interior

Inside of the outer lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the rice cooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth or toothpicks.

### Exterior

Outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control panel.

### Accessories

Rice scoop, soup ladle, inner pot, measuring cup, and detachable inner lid:

- Soak in hot water and clean with sponge.

## Environment



Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.

## Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at [www.philips.com.tw](http://www.philips.com.tw) or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

## Troubleshooting

If you encounter problems when using this rice cooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
	<p>If the rice cooker is positioned on an uneven or tilted surface, the texture of the cooked rice may be too hard or too soft as the amount of water becomes inconsistent.</p> <p>The texture of rice varies depending on the brand of rice, where it was harvested, and how long it was stored (new crop or old crop).</p> <p>The texture of rice varies depending on the room and water temperatures.</p> <p>Using the preset function may result in softer rice. This is normal.</p> <p>Check if the inner pot is deformed.</p> <p>There is not enough water. Add water according to the scale on the inside of the inner pot.</p> <p>You did not press and hold the start button (  ) for 3 seconds to start cooking.</p> <p>Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on.</p>
The rice is too soft, too hard, or not well cooked.	<p>Check if there are food residue on the heating plate or outside of the inner pot. Remove the food residue with a bamboo stick or a chopstick.</p> <p>You have not rinse the rice properly. Rinse the rice until the water runs clear.</p> <p>Check if the inner pot is deformed.</p>
Water spills out of the rice cooker during cooking.	<p>Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.</p> <p>Make sure the water does not exceed the maximum level on the scale, as this may cause the appliance to overflow during cooking.</p>
I cannot get to the desired cooking function.	<p>Press the menu button (  ) repeatedly to select the desired cooking function as shown by the display screen.</p> <p>Check if the keep-warm indicator is on. Deactivate keep-warm and try again.</p> <p>Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.</p>
Rice smells bad after cooking	<p>After cooking, make sure the steam vent cap, inner lid and inner pot are cleaned thoroughly. Clean the inner pot with some washing detergent and warm water.</p>
The light on the button does not go on or the display does not function.	<p>There is a connection problem. Check if the power cord is connected to the cooker properly and if the plug is inserted firmly into the power outlet.</p>

Error	Solution
Error message (E1, E2, E3, or E4) appears on the display.	There has been a power failure during cooking. Take the appliance to your Philips dealer or a service center authorized by Philips.
The cooker does not switch to keep warm mode automatically.	The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.

## 10 Specifications

Model Number	HD3060
Rated power output	330W
Rated capacity	2.0L

## 繁體中文

## 1 您的微電腦迷你電子鍋

感謝您購買本產品。歡迎來到飛利浦的世界！請至 [www.philips.com.tw/welcome](http://www.philips.com.tw/welcome) 登錄您的產品，以獲得飛利浦提供的完整支援。

## 2 重要事項

使用微電腦迷你電子鍋前，請先仔細閱讀此安全手冊，並保留說明以供日後參考。

### 危險

- 請勿將微電腦迷你電子鍋浸在水中或用水龍頭沖洗。

## 警告

- 0 至 8 歲的孩童不應使用本產品。在有旁人持續監督的情況下，8 歲以上的孩童可使用本產品。身體官能或心智能力退化者，或是經驗與使用知識缺乏者，可在有人從旁監督或適當指示如何安全使用本產品，以及瞭解潛在危險的狀況下使用本產品。產品和其電源線請放在 8 歲以下孩童無法取得之處。不應該孩童清潔與維護產品。
- 請勿讓兒童把玩本產品。
- 請平穩放置烹煮電器，並注意把手 (如果有) 的位置，避免熱燙液體溢漏。
- 本產品為居家用途設計，而類似的應用包含：
  - 店家的員工廚房、辦公室與其他工作場所；
- 農舍；
- 供住宿的飯店、汽車旅館與其他居住場所；
- 擺設床位與供應早餐的空間。
- 務請將損壞的電線交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師進行更換，以免發生危險。
- 本產品並非為透過外部定時器或獨立遙控系統進行操作而設計。
- 在您連接電源之前，請檢查本地的電源電壓是否與微電腦迷你電子鍋所示的電壓相符。
- 微電腦迷你電子鍋僅可與已接地的電源插座連接。務必確保插頭穩固插入電源插座中。
- 如果插頭、電源線、內鍋、密封環或主體有損壞，請勿使用產品。
- 請勿讓電源線懸掛在微電腦迷你電子鍋所在的餐桌或流理台邊緣。
- 請先確定加熱板、溫度感應器與內鍋外側是否清潔、乾燥，再將插頭插入電源插座。
- 連接微電腦迷你電子鍋電源或按壓控制面板上的按鈕時，請確保雙手乾燥。

## 注意

- 請勿使用其他製造商的任何配件或零件，或非由飛利浦建議之配件或零件。如果您使用此類配件或零件，保固可能失效。
- 請勿將微電腦迷你電子鍋暴露在高溫下，也請勿放置於正在使用 (或尚有餘溫) 的爐子或廚具上。
- 請勿將微電腦迷你電子鍋直接曝曬在陽光下。
- 請將微電腦迷你電子鍋放置在平穩的水平表面上。
- 請先將內鍋放在微電腦迷你電子鍋中，再將插頭插入插座，並開啟電源。
- 請勿直接將內鍋置於爐火上炊飯。

- 內鍋若變形請勿使用。
- 使用微電腦迷你電子鍋時，暴露在外表面可能會變熱。觸碰微電腦迷你電子鍋時，請格外謹慎。
- 在烹煮過程中，熱氣可能會從蒸氣通氣孔冒出；若您掀開鍋蓋，熱氣可能會從微電腦迷你電子鍋冒出。手和臉必須遠離微電腦迷你電子鍋以避免蒸氣。
- 在烹煮期間與結束後，內鍋及蒸爐可能溫度很高且重量很重。
- 請勿於微電腦迷你電子鍋運作期間加以抬起或移動。
- 請勿超過內鍋所指示的最高水位，以免水溢出，造成潛在危險。
- 烹調、保溫或熱飯時，請勿在內鍋中放廚具。
- 請僅使用隨附廚具。避免使用鋒利的廚具。
- 為避免刮痕，不建議直接烹調含有甲殼類食材的食物。烹飪前請先移除其硬殼。
- 請勿將金屬製品或其他異物插入蒸氣通氣孔內。
- 請勿將磁性物質放到蓋子上。請勿將微電腦迷你電子鍋放在磁性物質附近使用。
- 清潔或移動微電腦迷你電子鍋之前，請務必先待其冷卻。
- 使用微電腦迷你電子鍋後，請務必加以清潔。請勿將微電腦迷你電子鍋放入洗碗機內清洗。
- 如果有較長時間不使用微電腦迷你電子鍋，請務必拔下其插頭。
- 如果不當使用微電腦迷你電子鍋、作為 (半) 專業用途，或未依照使用手冊操作，保固將無效，且飛利浦將不擔負任何損壞賠償責任。

### 停電備援功能

本產品具備備援功能，可記憶停電前的狀態。

- 烹調過程中若發生停電的情形，而電源供應於兩個小時內恢復，烹調時間將從先前停下的時間繼續倒數。
- 若本產品在預設模式中發生停電的情形，而電源供應於兩個小時內恢復，預設時間將從先前停下的時間繼續倒數。
- 若電源供應於兩個小時後恢復，本產品將不會繼續先前的工作，並會進入待機模式。

### 電磁場 (EMF)

本飛利浦產品符合所有電磁波暴露的相關適用標準和法規。

## 3 內容物（圖 1）

① 微電腦迷你電子鍋主機體	⑤ 量杯
② 電源線	⑥ 保固卡
③ 飯匙	⑦ 使用者手冊
④ 湯杓	

# 4 概覽

### 產品概覽（圖 2）

⑧ 蒸氣閥	⑭ 加熱板
⑨ 開蓋按鈕	⑮ 電子鍋把手
⑩ 控制面板	⑯ 水位刻度標示
⑪ 主機體	⑰ 內鍋
⑫ 電源插座	⑱ 拆卸式內鍋蓋

### 控制項目概覽（圖 3）

⑰ 顯示畫面	⑳ 開始烹飪按鈕
⑰ 預約時間按鈕	㉑ 保溫/關閉按鈕
㉒ 烹煮時間按鈕	㉒ 再加熱按鈕
㉑ 功能選單按鈕	

### 烹煮時間控制範圍

編程	預設烹煮時間	時間控制	預設時間
米飯	約 35 分鐘	n/A	24 小時
煲湯	2 小時	1-4 小時	24 小時
煮粥	2 小時	1-4 小時	24 小時
燉品	2 小時	1-4 小時	24 小時
優格	6 小時	4-12 小時	24 小時
再加熱	25 分鐘	25-59 分鐘	n/A
鍋巴飯	約 1 小時 20 分鐘	n/A	24 小時
保溫	12小時	烹煮功能 (不包括優格模式) 結束後自動啟動。	

## 5 使用微電腦迷你電子鍋

## 註

- 如果您按保溫/取消按鈕取消當前設定和終止正在工作的功能，微電腦迷你電子鍋會進入待機狀態；如果您在待機狀態下按保溫/取消按鈕，微電腦迷你電子鍋則自動進入保溫狀態。
- 不使用產品時請拔出電源插頭才能徹底關閉機器。
- 默認時間為從煮飯開始到進入保溫狀態所需的時間。另外因電源、室溫、季節、米種、水量等而差異。

### 第一次使用

- 從內鍋拿出所有配件。移除所有內鍋的包裝材料。
- 第一次使用微電腦迷你電子鍋前，請先徹底清洗微電腦迷你電子鍋的零件 (請參閱「清洗」單元)。

## 註

- 開始使用微電腦迷你電子鍋前，請確認所有零件都已經完全乾燥。

## 炊飯（圖 4 和 5）

- 使用隨附的量杯平口盛滿進行量取。
- 將米徹底洗乾淨。

## 秘訣

- 洗米時，第一次放較多的水稍加混合，立即水倒掉。水倒掉時，用手揉洗米。倒入大量的水再倒淨。重複洗米和沖洗動作 2~3 次，直到水變半透明狀態。

- 將洗好的米倒入內鍋中。
- 視所使用的米籽數，將內鍋中的水位加至相應的刻度。然後讓米均勻攤平。
  - 例如，如果您要煮 4 杯米，請將水加到 4 杯的水位刻度。

 


## 註

- 如居住地區的電壓不穩定，微電腦迷你電子鍋可能出現食物溢出的情況，這屬於正常現象。
- 內鍋內側所標示的水位僅供參考；您可以隨時針對不同的米以及自的偏好來調整水位。
- 除了依照水位刻度標示，您也可以將米和水用 1:1-1.2 的比例炊飯。
- 請勿超過指示的量或超過內鍋所標示的最高水位，否則可能使水溢出微電腦迷你電子鍋，造成潛在危險。

- 按下開蓋按鈕，打開鍋蓋。
- 將內鍋外部擦乾，然後將其放入微電腦迷你電子鍋內。檢查內鍋是否與加熱板適當接觸。

## 註




- 請確定內鍋外部乾燥、乾淨，且加熱板上沒有異物殘留。

- 蓋上微電腦迷你電子鍋鍋蓋，並將插頭插入電源插座。
- 按下選單按鈕 (  )，直到選擇了米飯功能。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。

## 註

- 烹煮結束後，請立即攪拌米飯將其翻鬆，以便讓多餘的水氣散出，讓米飯更加鬆軟。
- 視烹煮條件而定，鍋底部分的米飯可能會呈現淡淡的棕色。

## 煲湯（圖 6）

- 將食材和水放入內鍋。
- 照「炊飯」中的步驟 6 和 7 操作。
- 按下選單按鈕 (  )，直到選擇了煲湯功能。
  - 如欲設定不同的烹煮時間，請參考「調整烹煮時間」單元。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。

### 煮粥（圖 6）

 


- 照「炊飯」中的步驟 1 至 7 操作。

## 註

 


- 請勿超過內鍋所標示的最高水位，否則可能使水溢出微電腦迷你電子鍋。

## 秘訣

- 除了依照水位刻度標示，您也可以將米和水用 1:4 的比例來煮粥。

- 按下選單按鈕 (  )，直到選擇了煮粥功能。
  - 如欲設定不同的烹煮時間，請參考「調整烹煮時間」單元。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。

### 燉品（圖 6）



- 將食物和食材放入內鍋。
- 照「炊飯」中的步驟 6 和 7 操作。
- 按下選單按鈕 (  )，直到選擇了燉品功能。
  - 如欲設定不同的烹煮時間，請參考「調整烹煮時間」單元。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。

## 製作優格（圖 7）

 


- 將製作優格的材料充分攪拌，然後倒入密封的容器中。

## 註


 
- 使用帶密封功能的食品級塑料或耐熱 80℃ 以上玻璃材質的容器。

- 將容器放入內鍋。確認容器已密封。
- 在內鍋內倒入一些水。確認水位達到容器高度的一半。
- 照「炊飯」中的步驟 6 和 7 操作。
- 按下選單按鈕 (  )，直到選擇了優格功能。
  - 如欲設定不同的烹煮時間，請參考「調整烹煮時間」單元。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮結束後，微電腦迷你電子鍋會發出嗶聲，並自動切換至待機模式。

### 烹調鍋巴飯（圖 8）

 
- 照「炊飯」中的步驟 1 至 7 操作。
- 按下選單按鈕 (  )，直到選擇了鍋巴飯功能。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 一段時間後，微電腦迷你電子鍋會發出嗶聲一段時間。
- 將鍋巴飯所需食材放在米飯上。蓋上蓋子繼續烹煮。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。

### 再加熱（圖 9）

- 將放涼的米飯翻鬆，均勻地鋪在內鍋中。
- 在米飯上倒一些水，避免飯變得太乾。水量取決於米飯量。
- 按照「炊飯」中的步驟 6 和 7 操作。
  - 如欲設定不同的烹煮時間，請參考「調整烹煮時間」單元。
- 按住開始按鈕 (  ) 3 秒鐘以開始烹調程序。
- 烹煮完成後，您將聽到 4 聲嗶聲，所選的烹煮功能燈將熄滅。
- 微電腦迷你電子鍋將自動進入保溫模式。
  - 保溫指示燈 (  ) 會亮起。


 

 


### 調整烹煮時間（圖 10 和 11）

您可以調整再加熱、優格、煮粥、煲湯和燉品的烹煮時間。請參考「功能概覽」表，瞭解每項功能的時間控制。在使用選單按鈕選擇想要的烹煮功能後，顯示幕上會顯示預設的烹煮時間。

- 若要設定不同的烹煮時間，請按下烹煮時間按鈕 (  )，顯示幕上的時數單位會開始閃爍。
- 重複按烹煮時間按鈕，以設定時數單位。
- 時數單位設定完成後，請稍微幾秒鐘等待時數單位確認，接著顯示幕上的分鐘數單位會開始閃爍。
- 重複按烹煮時間按鈕，以設定分鐘單位。

### 預約延遲烹調時間（圖 12）

您可以在不同的烹調模式中預約延遲烹調時間。

- 按下選單按鈕 (  )，直到畫面上出現想要的烹調功能為止。
- 按下預約時間按鈕 (  )。
- 按下預約時間按鈕 (  )，畫面隨即顯示預約時間，且時數單位開始閃爍。
- 重複按預約時間按鈕 (  ) 以設定時數單位。
- 時數單位設定完成時，請稍微幾秒鐘等待時數單位確認，接著顯示幕上的分鐘數單位會開始閃爍。
- 重複按預約時間按鈕 (  ) 以設定分鐘單位。
- 分鐘數單位設定完成後，請按住開始按鈕 (  ) 3 秒鐘以確認預約定時。
- 當預約定時器啟動時，預約指示燈會亮黃燈。當預設時間結束時，其會改亮藍燈。
- 預設時間結束後即烹煮完畢。微電腦迷你電子鍋會發出嗶聲，並自動切換至保溫或待機模式。

## 註

- 如果預設時間比烹煮時間短，微電腦迷你電子鍋會立刻開始烹煮程序。
- 夏季室溫較高時，為防止白米過度浸泡而引起的變質，請儘量設定在 12 小時以內。