

Philips Pure Essentials Collection Toaster

- 2 slot
- 3 function
- White



HD2686/30

Have it your way, exactly your way

Toaster for different types of bread

This Philips toaster HD2686/30 enables you to prepare the kind of toast you want, thanks to the extra-long, extra-wide slots. The eight digital browning settings give you full control so you get the crispy toasted bread you like.

Toast any type of bread

- Extra long slots to fit all kinds of bread
- Extra wide and extra deep slot(s) to fit your bread
- Evenly toasts thick or thin slices

Exactly the way you like

- · Bun warming rack to warm buns and croissants
- · Defrost and toast frozen bread at any browning level
- Reheat setting warms or further browns just-toasted bread

In the easiest way

- · Cancel button stops toasting at any time
- · High lift feature to safely take out small pieces of bread
- The outside of the toaster stays cool and safe to touch
- · Removable crumb tray for easy cleaning



HD2686/30

Specifications

General specifications

- Multiple toast settings: 8
- · Automatic safety shut-off

Technical specifications

- Power: 1500 W
 Slot size (L x W x H): 152 x 30 x 130 mm
- Cord length: 0.85 m

- Voltage: 220-240 V
- Frequency: 50/60 Hz

Design specifications

- Materials: Housing: metal/plastic (PC/ABS), chrome-plated top
- Colour(s): White, metal and red

Highlights

Extra wide and extra deep slot(s)

Extra wide and extra deep slot(s) to fit your bread.

Bun warming rack

Bun warming rack to warm buns and croissants.



Issue date 2013-05-21

Version: 6.3.1

© 2013 Koninklijke Philips N.V.

All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V.

or their respective owners.

12 NC: 0000 000 00000

www.philips.com