



## Classic Clean

The e-Series brush heads are visibly angled for better reach within the mouth, providing a thorough every day clean, while massaging and stimulating gums.

### **Designed to optimize performance**

 $\boldsymbol{\cdot}$  Reminder bristles ensure you are getting an effective clean

### A brush head that fits multiple handles

 $\cdot$  Screw-on brush head for our original Sonicare handles

#### Easy to maneuver to focus on hard-to-reach areas

· Unique angled neck helps you reach back teeth

# Highlights

#### **Reminder bristles**



Reminder bristles let's you know when to replace the brush head. After three months of normal use bristles exhibit fatigue, and brush heads are less effective. Replace your brush heads every 3 months.

#### Screw-on brush head



Screw-on brush head that will fit our original Sonicare handles

#### Unique angled neck



The slim angled neck enables you to easily maneuver the toothbrush head, particularly in hard-to-reach areas to remove plaque.

# Specifications

#### **Technical specifications**

Operating time: For optimal results, a new brush head is recommended every three months.

Replacement: Reminder Bristles fade when a replacement is needed.

#### Ease of use

Suitable for these models: Elite, Essence, CleanCare, Xtreme, Advance

© 2020 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2020-11-18 Version: 2.0.1

