



Philips
Sneaker Cleaner

3x brushhead

Blue/Yellow
4x AA battery

GCA1000/60

The easy way to keep your sneakers clean

Including three brushes for different material

The Philips Sneaker Cleaner is designed to make cleaning your sneakers easy and effective. Select the right brush for your sneaker, wet the brush with some water and soap, apply it to your sneakers and they will look fresh in no time.

Easy cleaning

- Simple to use in three steps

Effective cleaning

- The rotating brush cleans effectively

Safe for your sneakers

- Soft brush for multipurpose use

Safe for your sneakers

- Hard brush for tough surfaces
- Sponge brush for delicate surfaces
- Three brushes to clean different material

Take it on the go

- Including 4x AA batteries
- Clean sneakers wherever you go

PHILIPS

Highlights

Effective cleaning



 
With up to 500 rotations per minute the Philips Sneaker Cleaner delivers an effective clean.

Take it with you



You can take the battery powered sneaker cleaner with you on the go, so you can enjoy clean sneakers no matter where you are.

Hard brush

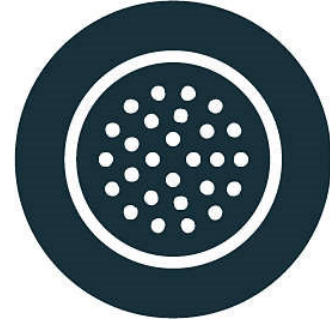

The hard brush is great to use for tough materials like textured rubber or the rubber sole of your sneaker.

Simple to use



Simply wet the brush with water and soap, switch on the Philips Sneaker Cleaner and wipe the sneaker with a clean towel when done.

Sponge brush



The sponge brush is ideal to use for delicate materials like PVC, leather, suede and smooth rubber.

Battery powered



 
The Philips Sneaker Cleaner comes with 4x AA batteries included so you can start cleaning your sneakers right away .

Three brush heads



Select the sponge, soft or hard brush to safely clean the material your sneaker is made of.

Soft brush

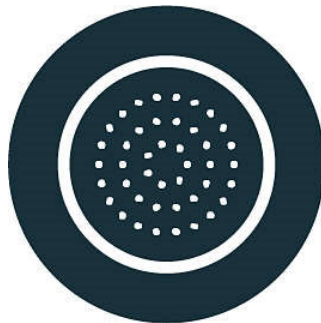

The soft brush is designed to use on multiple surfaces and ideal for mesh and canvas.

Specifications

Dimensions

- Packaging dimensions (WxHxL): 116 mm x 204 mm x 93 mm
- Product dimensions (WxHxL): 60 mm x 69 mm x 170 mm

Weight

- Product weight incl batteries: 0.351 kg
- Total weight with packaging: 0.501 kg kg

Recyclable

- Product packaging: 100% recyclable
- User manual: 100% recycled paper

Safe for your sneakers

- 3 Brushes included: Sponge, Soft Brush, Hard Brush

Battery

- Battery run time: 80 minutes at 450g load
- Battery type: 4x AA battery
- Power: 6 V

Guarantee

- 2 year worldwide guarantee

Technology

- Rotations per minute: 500 RPM
- Waterproofness: IPX5



Issue date 2024-02-19

Version: 4.4.1

EAN: 87 20389 00476 6

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com