



- Philips Aqua 8000 Series KC8349**
- During charging, the adapter becomes warm to the touch. This is normal.
 - Do not plug in, unplug or operate the appliance with wet hands.
 - Do not remove the adapter from the wall socket by pulling at the cord (Fig. 1). When you do not use the charging station for charging, always unplug the appliance by first detaching the magnetic charging disc from the underside of the appliance (Fig. 2).
 - Always switch off the appliance after use and before you charge it.
 - Never block the exhaust air openings at the back of the appliance during vacuuming.
 - Do not clean the dust container and the dust container lid in the dishwasher. They are not dishwasher-proof.
 - Do not clean the white material of the filter holder with a normal vacuum cleaner or a brush to avoid damage to the material.
 - Always use the vacuum cleaner with the filter assembled.
 - When you clean the washable sponge filter with water, make sure it is completely dry before you put it back into the filter holder and dust container. Do not dry the sponge filter in direct sunlight, on the radiator or in the tumble dryer. Do not clean the filter holder with water. This part is not washable.
 - Replace the filter if it can no longer be cleaned properly or if it is damaged (see 'Ordering accessories').
 - Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
 - Make sure that the appliance is installed with the charging station attached to the wall according to the instructions in the user manual.
 - Be careful when you drill holes in the wall to attach the charging station, to avoid the risk of electric shock.
 - As this appliance uses water to clean, the floor may remain wet and slippery for a while (Fig. 3).
 - Do not lift or tilt the nozzle when the water tank is assembled and full, as water may spray out of the water tank.
 - To prevent damage, never put wax, oil, floor maintenance products or liquid floor cleaners that are not water-dilutable in the water tank.
 - To prevent damage, never put ethereal oils or similar substances in the water tank or let the appliance pick them up.
 - Only use liquid floor cleaners that are transparent. Do not use milky or non-transparent floor cleaners.
 - Do not mix different types of liquid floor cleaner. When you have used one liquid floor cleaner, first empty and rinse the water tank before you add another liquid floor cleaner to the water in the water tank.
 - Never exceed the maximum quantities mentioned on the bottle when you use a liquid floor cleaner. Do not add more than a few drops to the water in the water tank, as this tank has a capacity of 380 ml.
 - Do not clean the metal wetting strip with a sharp object, as this may damage the strip. Only clean the wetting strip by rinsing it under the tap. Replace the wetting strip when you can no longer clean it.
 - Replace the wetting strip only with an original strip.
 - To guarantee good cleaning results and proper functioning of the appliance and water tank, always use original Philips cleaning pads.
 - Clean the water tank according to the instructions. The water tank is not dishwasher-proof.
 - After mopping the floors, do not store the appliance with the water tank attached on the charging station. If you do this, the wet mopping pad will touch the wall and this may damage the wall. Always remove the water tank before you store the appliance.

Electromagnetic fields (EMF)
This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Using the appliance

Usage restrictions

- Only use the water tank on hard floors with a water-resistant top coat (such as linoleum, enameled tiles and varnished parquet) and stone floors (such as marble). If your floor has not been treated to make it water-resistant, check with the manufacturer if you can use water to clean it. Do not use the water tank on hard floors of which the water-resistant top coat is damaged.
- Only use the water tank on linoleum floors that are properly affixed to prevent linoleum from being drawn into the mopping nozzle.
- Do not use the water tank to clean carpets.
- Do not move the appliance with water tank assembled sideways, as this leaves water traces. Only move forwards and backwards.

Note: The operating time depends on the power level used during cleaning.

Mopping pad and wetting strip

The appliance comes with one wetting strip and two identical microfibre mopping pads. With the water tank, wetting strip and microfibre mopping pad attached to the standard floor nozzle, you can clean hard floors.

Using liquid floor cleaner in the water tank

If you want to add a liquid floor cleaner to the water in the water tank, make sure that you use a low-foaming or non-foaming liquid floor cleaner that can be diluted in water. As the water tank has a capacity of 380ml, you only have to add a few drops of liquid floor cleaner to the water.

Cleaning the water tank

To clean the water tank, mix one part vinegar with three parts water. Pour this mixture into the water tank and close the cap. Shake the water tank and put the water tank on a water-resistant surface. Leave the water-vinegar mixture in the water tank overnight. Then empty the water tank, rinse it thoroughly with fresh water, and use it normally again.

Caution: Water will leak from the water tank during cleaning, with and without the wetting strip attached to the nozzle.

To empty the water tank, hold the water tank over a sink, remove the cap and tilt the water tank to the side of the filling hole. Then turn the water tank over to let the water flow into the sink. To remove the remaining water from the water tank, turn the water tank on its long side with the filling hole pointing towards the sink. Then tilt the water tank forwards to let the remaining water flow out of the water tank.

Note: Always store the water tank with the cap removed from the filling hole.

Ordering accessories

To buy accessories or spare parts, visit www.philips.com/parts-and-accessories or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Recycling

- This symbol means that electrical products and batteries shall not be disposed of with normal household waste (Fig. 4).
- Follow your country's rules for the separate collection of electrical products and batteries.

Rem

