

EN


- ① Steamer head
- ② Steam supply hose
- ③ Steam dial
- ④ Base
- ⑤ De-calc knob
- ⑥ Water tank
- ⑦ Pole
- ⑧ Pole lock clip
- ⑨ Pants clip (GC516, GC522)
- ⑩ Hanger
- ⑪ Hanger hook
- ⑫ Steamer head holder
- ⑬ Pleat maker and brush (GC516, GC522)
- ⑭ Glove
- ⑮ Board (GC522)
- ⑯ Board cover (GC522)

RU

- ① Сопло отпаривателя
- ② Шланг подачи пара
- ③ Регулятор подачи пара
- ④ Основание
- ⑤ Клапан De-Calc
- ⑥ Резервуар для воды
- ⑦ Стойка
- ⑧ Зажим для стойки
- ⑨ Зажим для брюк (GC516, GC522)
- ⑩ Вешалка
- ⑪ Крючок для подвешивания
- ⑫ Держатель сопла отпаривателя
- ⑬ Насадка для стрелок и щетка (GC516, GC522)
- ⑭ Рукавица
- ⑮ Гладильная доска (GC522)
- ⑯ Чехол для гладильной доски (GC522)

KK

- ① Бұттіңін басы
- ② Беретін шланг
- ③ Бу дисқісі
- ④ Түп
- ⑤ Қактан тазаңа тұтқасы
- ⑥ Су ыдыры
- ⑦ Тірек
- ⑧ Тірек күлшітпақтың кысышы
- ⑨ Шалбарлар кысыш (GC516, GC522)
- ⑩ Ілгіш
- ⑪ Ілгіш імдегі
- ⑫ Бу үтгінін басын ұстағыш
- ⑬ Қыр салыш және щетка (GC516, GC522)
- ⑭ Қоллан
- ⑮ Такта (GC522)
- ⑯ Такта жапкыш (GC522)

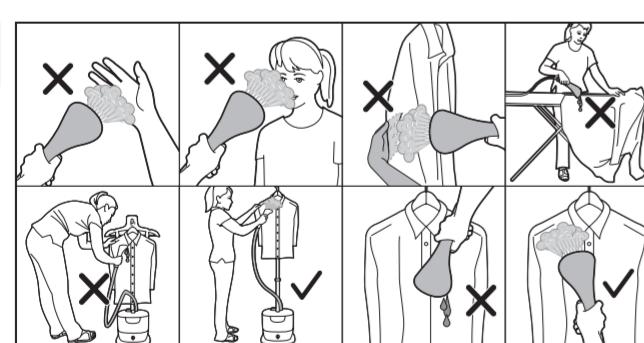

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference.

This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

Danger

- Never immerse the appliance in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.

- The plug must be plugged to a power outlet of the same technical characteristics of the plug only.

- Do not use the appliance if the plug, the mains cord, the steam supply hose or the appliance itself shows visible damage or if the appliance has been dropped or leaks.

- If the mains cord or the steam supply hose is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.