
 
 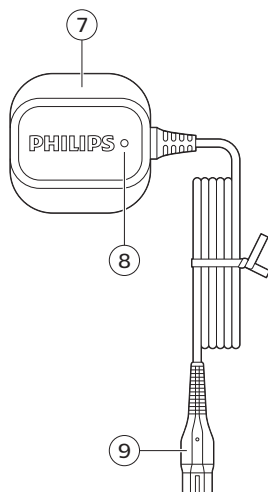



PHILIPS

QP2529/95
QP2529/85
QP2529/75



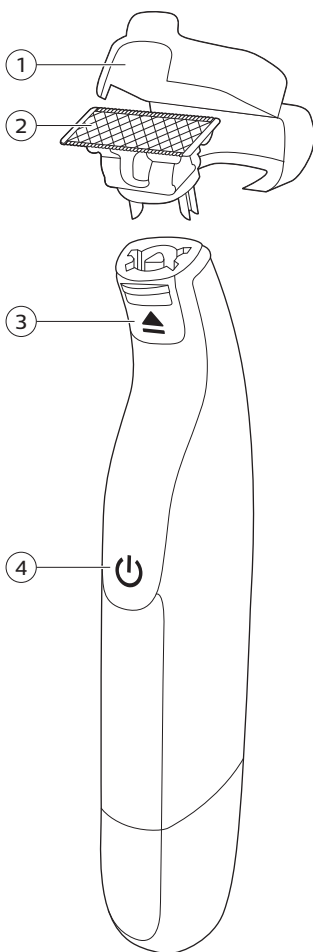

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Protection cap for blade
- 2 Blade
- 3 Blade release slide
- 4 On/off button
- 5 Skin protector for wet and dry use (0.1 mm) 2x
- 6 Trimming comb (3 mm)
- 7 Supply unit
- 8 Battery charging indicator
- 9 Small plug

Important safety information

Read this important information carefully before you use the product and its batteries and accessories, and save it for future reference.

Danger



- Keep the supply unit dry.

Warning

- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Caution

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

8 English

- To prevent damage and injuries, keep the operating appliance away from scalp hair, eyebrows, eyelashes, lips, inner labia, clothes etc.
- Do not use this appliance to trim facial hair or scalp hair.
- For hygienic reasons, the appliance should only be used by one person.
- Never use water hotter than 60 °C to rinse the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Battery safety instructions

- Only use this product for its intended purpose and follow the general and battery safety instructions as described in this user manual. Any misuse can cause electric shock, burns, fire and other hazards or injuries.
- To charge the battery, only use the detachable supply unit (A00390) provided with the product. Do not use an extension cord.

- Charge, use and store the product at a temperature between 5 °C and 35 °C.
- Always unplug the product when it is fully charged.
- Do not burn products and their batteries and do not expose them to direct sunlight or to high temperatures (e.g. in hot cars or near hot stoves). Batteries may explode if overheated.
- If the product becomes abnormally hot, gives off an abnormal smell, changes color or if charging takes much longer than usual, stop using and charging the product and contact your local Philips dealer.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- This product contains a rechargeable battery that is non-replaceable. Do not open the product to replace the rechargeable battery.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.

- To prevent batteries from heating up or releasing toxic or hazardous substances, do not modify, pierce or damage products and batteries and do not disassemble, short-circuit, overcharge or reverse charge batteries.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General



- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.


- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance before first use and when the appliance starts working more slowly.

Charging normally takes approx. 8 hours.

A fully charged appliance has an operating time of up to 45 minutes.

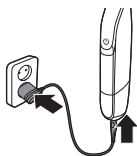

- 1 Make sure that the appliance is switched off.
- 2 Insert the small plug into the appliance and put the supply unit in the wall socket.

The battery charging indicator on the adapter lights up continuously when the appliance is connected to the wall socket.

- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Note: This appliance can only be used without cord.

Switching the appliance on and off




To switch on the appliance, press the on/off button once.

To switch off the appliance, press the on/off button once more.

Changing attachments



To attach the skin protector onto the blade, hook one rounded end around the narrow edge of the blade and press down on the other end until the skin protector snaps into place.

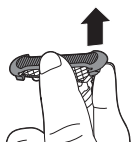

To remove the skin protector from the blade, put your thumb under the rounded end of the skin protector and put your index finger on top of the skin protector. Press from below with your thumb to detach the skin protector from the blade.



Hold the body comb on both sides and press it onto the blade.



To remove the comb, hold it on both sides and pull it off the blade.


The appliance

Before you use the appliance, always check the blade for damage or wear. If the blade is damaged or worn, do not use the appliance as injury may occur.

Do not use this appliance to trim facial hair or scalp hair.

Do not use the appliance on the inner labia.

- The appliance, skin protector and comb are suitable for wet and dry use. For the best performance, it is recommended to use the appliance on dry skin.
- To remove hair from the intimate area, always use either the skin protector or the comb.

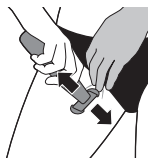

- The skin protector and comb can be moved both forwards and backwards.



- The skin protector shaves hairs to a length of 0.1 mm. Use the skin protector if you want a short hair length.




- The comb trims hairs to a length of 3 mm. Use the comb if you want a longer hair length.



Removing hair from your intimate area



Take your time when you first start to shave or trim intimate areas. You have to acquire practice with the appliance. Your skin also needs some time to adjust to the procedure.

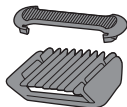

To remove hair from the intimate area, always use either the skin protector or the comb.

Do not apply too much pressure.

- 1** Thoroughly clean the area to be trimmed or shaved.
- 2** Take a position that allows you to reach your intimate area with the appliance, for instance:
 - Place one leg on a bathtub or chair.
- 3** Spread your legs to achieve some initial stretching of the skin.
 - Sit on a chair.
 - Sit on the toilet.
- 4** Press the on/off button once to switch on the appliance.
- 5** Place the blade with the skin protector or comb flat onto the skin. Make sure that the blade with the skin protector or comb is in full contact with the skin.

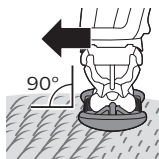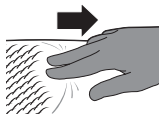


- 6 With your free hand, stretch a small area of the skin with two fingers to make the hairs stand upright. Only place the blade on thoroughly stretched skin.
- 7 Move the appliance slowly and with light pressure against the direction of hair growth. As you move along, make sure that your skin always remains stretched.
- 8 When you have finished shaving or trimming, switch off the appliance and clean it.

Tips and warnings


- Warning for men: When you shave your scrotum, make sure that you stretch your skin in such a way that the blade cannot come into contact with the flexible skin.
- Warning for women: When you shave the inside of your outer labia, make sure that you stretch the outer labia in such a way that the blade cannot come into contact with the inner labia. Protect your inner labia with your other hand.
- Since hairs do not all grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.

Edging and shaping

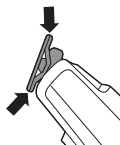


You can use both edges of the blade to create sharp lines and perfect edges.

Hold the appliance in such a way that the blade is perpendicular to the skin and one of its edges touches the skin. This allows more precise detailing.

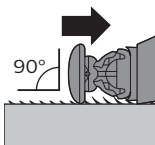


- 1 Place the edge of the blade perpendicular onto the skin.
- 2 Make straight strokes while applying gentle pressure.

Cleaning

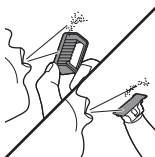


- 1 Switch off the appliance.
- 2 Remove the skin protector or comb from the blade.
- 3 Blow off any hairs that have accumulated on the blade, skin protector and/or comb.

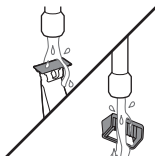

- 4 Switch on the appliance and rinse the blade with lukewarm water.

Caution: Do not dry the blade with a towel or a tissue as this may cause damage. The blade is fragile. Handle it carefully. Do not use the appliance with a damaged blade.

- 5 Rinse the skin protector and/or comb with lukewarm water.
- 6 Carefully shake off excess water and let all parts air dry completely.

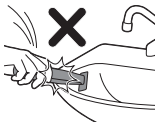

Do not tap the appliance on the rim of the sink to remove excess water, as this may cause damage.

Replacement

For optimal cutting and gliding performance, we advise you to replace the blade every 6 months, when it no longer provides the shaving or trimming results you expect.

Always replace the blade with an original Philips blade.

Depending on your usage behavior, the exact lifetime of the blade could be longer or shorter. Similar to a manual blade, the blade becomes blunt over time, which results in increased hair pulling and reduced cutting performance.

Replacing the blade



- 1 Switch off the appliance.
- 2 Push the blade release slide upwards carefully, and hold the blade on both sides to remove the blade. This will prevent the blade from flying off the handle.



- 3 Hold the new blade on its sides and press it onto the handle ('click').

Note: When you hear a click, the new blade is placed correctly and ready for use.

Ordering accessories

To obtain new skin protectors, contact the Philips Consumer Care Center in your country.

To buy new blades or combs, visit

www.philips.com/parts-and-accessories or go to your Philips dealer.

Troubleshooting

Problem	Possible cause	Solution
The appliance does not work anymore.	The appliance is connected to the wall socket.	Disconnect the appliance from the wall socket before use. For safety reasons, the appliance can only be used without cord.
	The rechargeable battery is empty.	Charge the appliance (see 'Charging').
	The blade is blocked by dirt.	Switch on the appliance and rinse the blade under the tap with lukewarm water (see 'Cleaning').
		Hold the blade in a cup with warm water (60 °C and no hotter) for approx. 30 seconds.
The appliance doesn't function optimally anymore or makes a strange noise.	The blade is placed onto the handle incorrectly.	Remove and reattach the blade. Hold the blade on both sides and press it onto the handle until you hear a click. Be careful, the edges of the blade are sharp.
	The blade is damaged or worn.	Replace the blade with a new one.
	The skin protector is not attached to the blade properly.	Reattach the skin protector (see 'Changing attachments').
	The skin protector is damaged.	If the skin protector is damaged, stop using it and replace it with a new one.

Recycling



- This symbol means that electrical products and batteries shall not be disposed of with normal household waste.
- Follow your country's rules for the separate collection of electrical products and batteries.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Check if there are screws in the back or front of the appliance. If so, remove them.
- 2 Remove the back and/or front panel of the appliance with a screwdriver. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- 3 Remove the rechargeable battery.

— |

| —

— |

| —

— |

| —

— |

| —

© 2020 Koninklijke Philips N.V.

All rights reserved

3000.061.1791.1 (24/11/2020)



>75 % recycled paper
>75 % papier recyclé