



BHC200
 BHC201
 BHC202
 BHC203

EN User manual TH ຄ່າມອຸ່ນໄທ
 KO 사용 설명서 ZH-TW 使用手冊

PHILIPS



Specifications are subject to change without notice
 © 2016 Koninklijke Philips N.V.
 All rights reserved.

3140 035 40403



English

Congratulations on your purchase, and welcome to Philips!
 To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING: Do not use this appliance near water.**
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge




Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

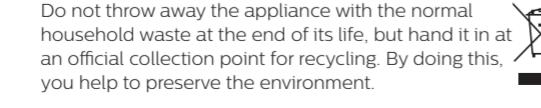


If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.



If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

4 Guarantee and service

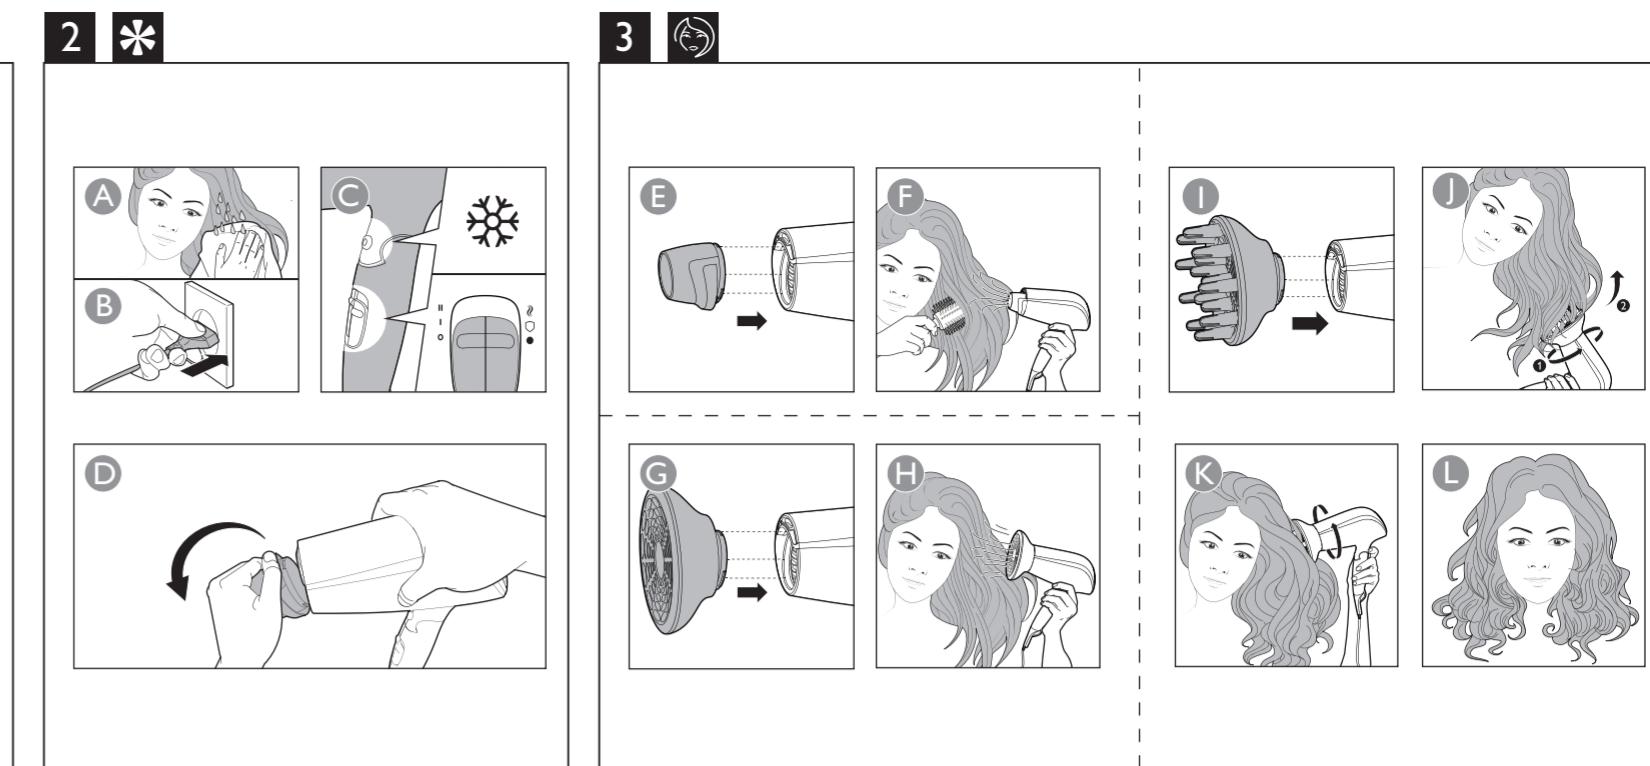

if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

2 Introduction

Philips SmartCare dryer features innovative and unique ThermoShield Technology which actively adjust drying temperature to prevent hair and scalp from overheating for healthy and shiny hair.

ThermoShield is an innovative technology that Philips brings to upgrade drying performance with superior protection to your hair. It operates a specially designed drying program which actively and constantly adjust temperature for fast and healthy drying. The LED indicator will light up when ThermoShield setting is selected. You will feel the drying temperature regularly changed with no more hot spots.

3 Dry your hair

- Select suitable attachment and attach it to the hairdryer properly before using (④, ⑥, ① in Fig.3).
- Connect the plug to a power supply socket.
- Adjust the airflow switch (③) and temperature switch (④) to suitable positions.

Switch	Settings	Function
Airflow	II	Strong airflow and fast drying
	I	Gentle airflow and styling
	O	Switch off
Temperature	Hot	Dry shower-wet hair quickly
	□ ThermoShield	Provide optimal drying temperature with alternative cool and warm temperature to avoid overheating
	● Cool	Cool airflow for styling your hair

→ The LED indicator (①) will light up when ThermoShield setting is selected.

→ (BHC201, BHC202, BHC203 only) When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine. A special odor may be smelt. It is normal and caused by the ions which are generated.

Nozzle

For precise drying, attach the nozzle (⑤) onto the hairdryer. The nozzle enables you to direct the airflow straight at the brush or comb with which you are styling your hair. (⑥ in Fig.3)

Radiance Diffuser (BHC203 only)

For attentive drying, attach the radiance diffuser (⑥) onto the hairdryer. It helps to distribute the airflow evenly on your hair to avoid overheating. (⑦ in Fig.3)

Curl Diffuser (BHC202 only)

For gently drying wavy or curly hair, select curl diffuser (⑦) and attach it to the hairdryer. It spreads the airflow across the hair, boosting volume and enhancing curls while drying. The diffuser's fine textured pins will add volume, maximize thickness, bounce and help shape curls.

- To enhance your natural volume and maintain your curls, hold the dryer vertically and place the hair in a circular motion in between pins. Then move the hairdryer upwards. (⑧ in Fig.3)
- To add volume at the roots, insert the pins into your hair by making rotating movements. (⑨ in Fig.3)
- Press the cool shot button (⑩) for cool temperature to fix your style.

After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- To disconnect the attachment, pull it off the hairdryer. (⑪ in Fig.2)
- Clean the appliance by damp cloth.
- Keep it in a safe and dry place, free of dust. You can also fold the appliance (⑫) or hang it with the hanging loop (⑬).

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Consumer Care Center in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

한국어

필립스 제품을 구입해 주셔서 감사합니다! 필립스가 드리는 지원 혜택을 받으실 수 있도록 www.philips.com/welcome에서 제품을 등록하십시오.

1 중요 사항

본 제품을 사용하기 전에 이 사용 설명서를 주의 깊게 읽고 나중에 참조할 수 있도록 잘 보관하십시오.

- 경고:** 본 제품은 물이 없는 곳에서 사용하십시오.
- 욕실에서 사용할 경우 사용 후에는 반드시 전원 플러그를 뽑으십시오. 전원이 꺼져 있더라도 물에 닿으면 위험할 수 있습니다.
- 경고:** 본 제품을 욕조, 샤워기, 대야 또는 기타 물이 있는 용기 근처에서 사용하지 마십시오.
- 사용 후에는 반드시 제품의 전원 코드를 뽑으십시오.
- 제품이 과열되면 자동으로 전원이 꺼집니다. 제품의 전원을 뽑은 후 몇 분 동안 열기가 식도록 두십시오. 제품의 전원을 다시 켜기 전에 그릴이 잔털, 머리카락 등으로 막혀 있지 않은지 확인하십시오.
- 전원 코드가 손상된 경우, 안전을 위해 필립스 서비스 센터 또는 필립스 서비스 지정점에 의뢰하여 교체하십시오.
- 8세 이상의 아이들과 신체적인 감각 및 정식적인 능력이 떨어지거나 경험과 지식이 풍부하지 않은 성인이 이 제품을 사용하려면 제품 사용과 관련하여 안전하게 사용할 수 있도록 지시사항을 충분히 숙지한 사람의 도움을 받아야 합니다. 어린이가 제품을 가지고 놀지 않도록 하십시오. 어린이가 혼자 제품 청소나 정비를 하지 않도록 하십시오.



- 제품에 전원을 연결하기 전에 제품에 표시된 전압과 해당 사용 지역의 전압이 일치하는지 확인하십시오.

- 이 설명서에 나와있는 이외의 용도로 제품을 사용하지 마십시오.
- 제품을 인조 모발에 사용하지 마십시오.
- 제품이 전원에 연결된 상태로 외출하거나 자리를 비우지 마십시오.
- 다른 제조업체에서 만들었거나 필립스에서 권장하지 않은 제품 액세서리 또는 부품은 절대 사용하지 마십시오. 이러한 액세서리나 부품을 사용했을 경우에는 품질 보증이 무효화됩니다.
- 전원 코드를 제품에 감지 마십시오.
- 제품이 충분히 식은 다음 보관하십시오.
- 사용 후 전원 코드를 당기지 마십시오. 항상 플러그를 잡고 제품의 전원 코드를 뽑으십시오.

EMF(전자기장)

이 제품은 EMF(전자기장)와 관련된 모든 기준 및 규정을 준수합니다.

환경

수명이 다 된 제품은 일반 가정용 쓰레기와 함께 버리지 말고 지정된 재활용품 수거 장소에 버리십시오. 이런 방법으로 환경 보호에 동참하실 수 있습니다.



2 소개

필립스 스마트케어 드라이어는 혁신적이고 독보적인 ThermoShield 기술을 통해 드라이 온도를 조절할 수 있으므로 고도한 열로부터 모발과 두피를 보호하여 건강하고 빛나는 모발을 가꿔줍니다.


ThermoShield는 모발을 확실히 보호할 수 있도록 드라이 성능을 업그레이드한 필립스의 혁신적인 기술입니다. 이 기술은 특별히 디자인된 드라이 프로그램을 작동시켜 능동적이고 지속적으로 온도를 조절하므로 빠르고 건강하게 드라이할 수 있습니다. ThermoShield 설정이 선택되면 LED 표시등이 켜집니다. 과열되는 부분 없이 드라이 온도가 자주 변하는 걸 느끼실 수 있습니다.

3 헤어 드라이

- 적합한 액세서리를 선택하고 사용하기 전 헤어 드라이어에 옮기거나 부착합니다 (그림 3의 ④, ⑥, ①).
- 전원 공급 장치 콘센트에 플러그를 꽂습니다.

- 바람 스위치 (③) 및 온도 스위치 (④)를 적절한 위치로 조절합니다.

스위치	설정	기능
공기 흐름	II	빠른 드라이를 위한 강한 바람
	I	부드러운 바람 및 스타일링
	O	전원 고기
온도	고온	젖은 모발을 빠르게 건조
	O	과열을 방지하기 위해 시원한 온도와 따뜻한 온도를 번갈아 가며 최적의 드라이 온도를 제공합니다.
	ThermoShield	모발 스타일링을 위한 시원한 바람
● 저온		

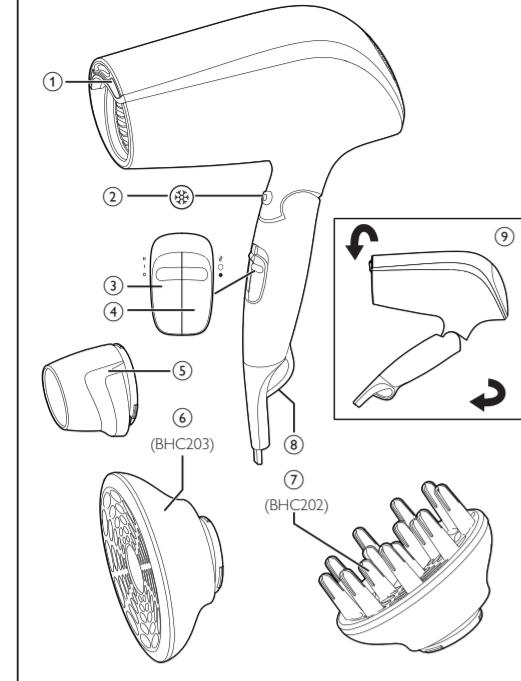

→ ThermoShield 설정이 선택되면 LED 표시등 (①)이 켜집니다.

→ (BHC201, BHC202, BHC203만 해당) 제품의 전원이 켜져 있을 경우, 모발에 광택을 더해주고 곱슬거림을 방지하기 위해 이온이 자동으로 연속 분사됩니다.

독특한 향이 날 수 있습니다. 이것은 이온 발생으로 인한 정상적인 현상입니다.

노출

정확한 드라이어를 위해 헤어 드라이어에 노출 (⑤)을 부착합니다. 노출은 브러시나 빗을 사용하여 스타일링을 원하는 부위를 향하도록 할 수 있습니다. (그림 3의 ⑪)

레디언스 디퓨저 (BHC203만 해당)

섬세한 드라이어를 위해 레디언스 디퓨저를 (⑥) 헤어드라이어에 부착합니다. 공기를 고르게 분출하여 모발이 과열되는 것을 방지합니다. (그림 3의 ⑫).

컬 디퓨저 (BHC202 글로벌 버전만 해당)

웨이브 또는 컬 있는 모발을 부드럽게 드라이아하려면 컬 디퓨저를 선택 (⑦) 한 다음 헤어드라이어에 부착합니다. 드라이어는 동안 모발 사이에 바리를 평지도록 하여 볼륨을 살리고 컬을 풍부하게 합니다. 디퓨저의 충출한 마사지 빙이 볼륨감을 더해주고 모발을 풍성하게 하며 컬 모양을 잡아줍니다.

- 자연스러운 볼륨 및 컬을 유지하려면 드라이어를 수직이 되도록 잡고 핀 사이에 원을 그리듯 모발을 놓습니다. 그런 다음 헤어드라이어를 위로 움직입니다. (그림 3의 ⑨)

- 모근에 볼륨감을 더하려면 회전하며 움직이면서 모발 사이로 핀을 집어넣으십시오. (그림 3의 ⑩)

4 스타일 고정을 위한 시원한 온도를 원할 경우 펄샷 버튼 (④)을 누릅니다.

사용 후:

- 1 제품 전원을 고고 전원 코드를 뽑으십시오.

- 2 제품을 내열 표면 위에 올려놓고 식히십시오.

- 3 (그림 2의 ⑯) 액세서리를 분리하려면 헤어 드라이어에서 빼내십시오.

- 4 젖은 천을 사용하여 제품을 닦으십시오.

- 5 안전하고 건조한 장소에 먼지가 묻지 않은 상태로 보관하십시오. 제품을 접거나 (⑨) 걸고리 (⑩)에 걸 수 있습니다.

4 품질 보증 및 서비스

액세서리 교체 등 보다 자세한 정보가 필요하시거나 사용상의 문제가 있을 경우에는 필립스 홈페이지

(www.philips.com/support)를 방문하거나 필립스 서비스 센터로 문의하십시오. 전국 서비스 센터 안내는 제품 보증서를 참조하십시오. 해당 지역에 서비스 센터가 없는 경우 필립스 대리점에 문의하십시오.

ภาษาไทย

หากแสดงความยินดีที่ต้องการใช้อุปกรณ์หัวใจของเรา และบันทึกอันรู้สึ้น Philips เพื่อหัวคุณได้รับประโยชน์อย่างมากที่สุดก็คือ Philips มอบให้ โปรดลงทะเบียนเมล์ก่อนเข้าห้องทดลองที่ www.philips.com/welcome

1 ขอสำคัญ

โปรดอ่านผู้อ่านนี้ย่างละเอียดก่อนใช้งาน และเก็บไว้ในที่อันน่าจะได้

- คำเตือน: ห้ามใช้เครื่องนี้ใกล้บริเวณที่เปียกน้ำ



- เมื่อคุณใช้เครื่องนี้ในห้องน้ำ ให้ถอดปลั๊กทุกครั้งหลังใช้ การอยู่ใกล้น้ำอาจก่อให้เกิดอันตรายได้ เมเนต้าเครื่องจะปิดอยู่ก็ตาม

- คำเตือน: ห้ามใช้เครื่องนี้ใกล้บริเวณอาบน้ำ อาบน้ำ ท่อระบายน้ำ อาจล้างหน้า หรือภาชนะที่ใส่น้ำ


- ดึงปลั๊กออกหลังการใช้งานทุกครั้ง
- หากเครื่องมีความร้อนมากเกินไป แนะนำให้ทำความสะอาดและทำความสะอาดทุกครั้งที่
- ผลิตภัณฑ์ไฟฟ้าที่มีทุกประการ ทำงานโดยอัตโนมัติ ถอดปลั๊กเครื่องของออก และปล่อยให้เครื่องเย็นลงประมาณ 2-3 นาที ก่อนเปิดสวิตช์ใช้งานอีกครั้ง ควรตรวจสอบแต่ละเครื่องอย่างเคร่งช่องลมให้แน่ใจว่าไม่มีเชื้อเพลิงเส้นขึ้น หรืออื่นๆ อุดตัน

Electromagnetic fields (EMF)

ผลิตภัณฑ์ของ Philips นี้เป็นไปตามมาตรฐานและเกณฑ์อันดับต้นๆ ค่า EMF และไฟฟ้าที่มีทุกประการ

สิ่งแวดล้อม

ห้ามทิ้งของขยะในห้องน้ำที่ไม่สามารถกำจัดได้ เช่น ก้อนทรายในฝักดูดหรือหัวลับบีไฟฟ้า (รีไซเคิล) เพื่อรักษาสภาพแวดล้อมที่ดี

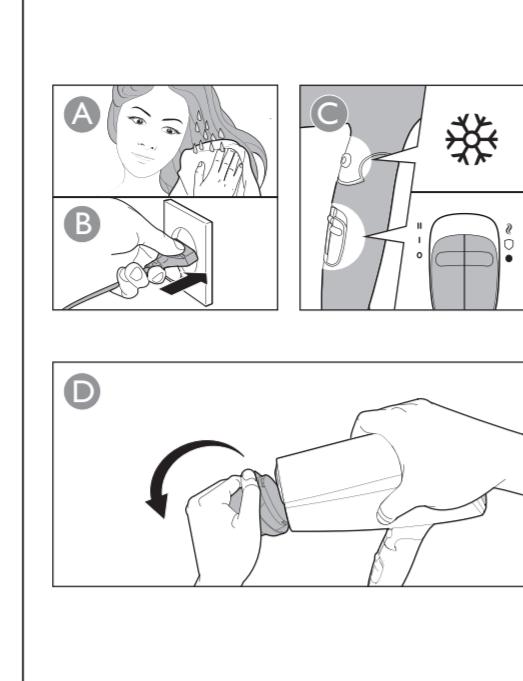

→ ThermoShield 설정이 선택되면 LED 표시등 (①)이 켜집니다.

→ (BHC201, BHC202, BHC203만 해당) 제품의 전원이 켜져 있을 경우, 모발에 광택을 더해주고 곱슬거림을 방지하기 위해 이온이 자동으로 연속 분사됩니다.

독특한 향이 날 수 있습니다. 이것은 이온 발생으로 인한 정상적인 현상입니다.

노출

정확한 드라이어를 위해 헤어 드라이어에 노출 (⑤)을 부착합니다. 노출은 브러시나 빗을 사용하여 스타일링을 원하는 부위를 향하도록 할 수 있습니다. (그림 3의 ⑪)

레디언스 디퓨저 (BHC203만 해당)

섬세한 드라이어를 위해 레디언스 디퓨저를 (⑥) 헤어드라이어에 부착합니다. 공기를 고르게 분출하여 모발이 과열되는 것을 방지합니다. (그림 3의 ⑫).

컬 디퓨저 (BHC202 글로벌 버전만 해당)

웨이브 또는 컬 있는 모발을 부드럽게 드라이아하려면 컬 디퓨저를 선택 (⑦) 한 다음 헤어드라이어에 부착합니다. 드라이어는 동안 모발 사이에 바리를 평지도록 하여 볼륨을 살리고 컬을 풍부하게 합니다. 디퓨저의 충출한 마사지 빙이 볼륨감을 더해주고 모발을 풍성하게 하며 컬 모양을 잡아줍니다.

- 자연스러운 볼륨 및 컬을 유지하려면 드라이어를 수직이 되도록 잡고 핀 사이에 원을 그리듯 모발을 놓습니다. 그런 다음 헤어드라이어를 위로 움직입니다. (그림 3의 ⑨)

- 모근에 볼륨감을 더하려면 회전하며 움직이면서 모발 사이로 핀을 집어넣으십시오. (그림 3의 ⑩)

4 스타일 고정을 위한 시원한 온도를 원할 경우 펄샷 버튼 (④)을 누릅니다.

사용 후:


- 1 제품 전원을 고고 전원 코드를 뽑으십시오.

- 2 제품을 내열 표면 위에 올려놓고 식히십시오.

- 3 (그림 2의 ⑯) 액세서리를 분리하려면 헤어 드라이어에서 빼내십시오.

- 4 젖은 천을 사용하여 제품을 닦으십시오.

- 5 안전하고 건조한 장소에 먼지가 묻지 않은 상태로 보관하십시오. 제품을 접거나 (⑨) 걸고리 (⑩)에 걸 수 있습니다.

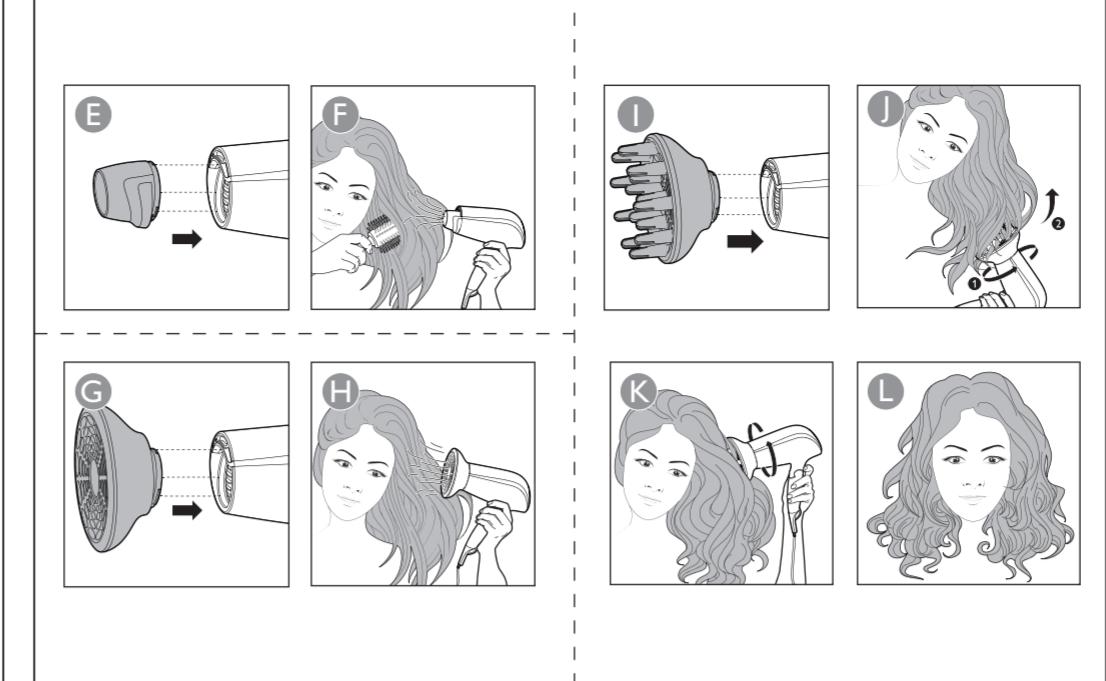

2 ข้อมูลเบื้องต้น

• หากสายไฟชำรุด คุณต้องให้ช่างผู้ชำนาญซึ่ง Philips ดำเนินการให้ คุณบริการที่ได้รับอนุญาตจาก Philips หรือผู้ที่ผ่านการฝึกอบรม ดำเนินการเปลี่ยนไฟฟ้าเพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้น

• เด็กอายุ 8 ปีและมากกว่า และผู้ที่มีสภาพร่างกายไม่สมบูรณ์หรือสภาพจิตใจไม่ปกติหรือขาดประสบการณ์และความรู้ความเข้าใจสามารถใช้งานเครื่องได้โดยต้องอยู่ภายใต้เฝ้าระวังในการใช้งาน ห้ามเด็กเล่นเครื่องหากไม่ได้เกิดทำความสะอาดและดูแลรักษาเครื่องโดยปราศจากการควบคุมใดๆ

• เพื่อเพิ่มการบังกัน เราขอแนะนำให้คุณติดตั้ง Residual current device (RCD) ในระบบไฟภายในห้องอาบน้ำ RCD นี้จะมีกระแสไฟ Residual operating current ไม่เกิน 30mA โปรดสอบถามเจ้าหน้าที่ติดตั้งสำหรับคำแนะนำ

• เพื่อเพิ่มการบังกัน เราขอแนะนำให้คุณติดตั้ง Residual current device (RCD) ในระบบไฟภายในห้องอาบน้ำ RCD นี้จะมีกระแสไฟ Residual operating current ไม่เกิน 30mA โปรดสอบถามเจ้าหน้าที่ติดตั้งสำหรับคำแนะนำ

• เลือกอุปกรณ์เสริมที่เหมาะสมและประกอบเข้ากับโครงสร้างไฟฟ้าที่คุณใช้งาน

• เลือกอุปกรณ์เสริมที่มีไฟฟ้าติดตั้งไฟฟ้า

• เลือกอุปกรณ์เสริม (③) และสวิตซ์อุณหภูมิ (④) ไปยังตำแหน่งที่เหมาะสม

• เลือกสวิตซ์ (③) และสวิตซ์อุณหภูมิ (④) ไปยังตำแหน่งที่เหมาะสม

• เลือกอุปกรณ์เสริม (③) และสวิตซ์อุณหภูมิ (④) ไปยังตำแหน่งที่เหมาะสม