

ENGLISH

Introduction

The Salon ProCeramic Rollers is a roller set that has been specially designed to create perfect long-lasting curly and wavy styles.

Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- ▶ Check the condition of the mains cord regularly. Do not use the appliance if the plug, the cord or the appliance itself is damaged.
- ▶ Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- ▶ If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- ▶ Keep this appliance away from water! Do not use this product near or over water contained in baths, washbasins, sinks etc. When used in a bathroom, unplug the appliance after use since the proximity of water presents a risk, even when the appliance is switched off.
- ▶ For additional protection, we advise you to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.
- ▶ After the appliance has heated up, remove the cover and wait a while before taking out the first roller.
- ▶ The rods of the appliance become very hot. Prevent contact with the skin.
- ▶ Only pick up the heated rollers by the cool-touch plastic rim. The other parts of the rollers are hot.
- ▶ Keep the appliance out of the reach of children.
- ▶ Do not leave the appliance unattended when it is switched on.
- ▶ Only use the appliance on dry hair.
- ▶ Always unplug the appliance after use.
- ▶ Never immerse the appliance in water nor pour water into it.
- ▶ Always return the appliance to a service centre authorised by Philips for examination or repair. Repair by unqualified people could cause an extremely hazardous situation for the user.
- ▶ The big rollers have a ceramic coating. This coating will wear in the course of time. When this happens, the rollers will still function normally.
- ▶ Wait until the rollers and the appliance have cooled down and are dry before storing them.

Preparing for use

Washing your hair

Everybody wants shiny and beautiful hair. A good hair-washing routine can help to achieve this. When washing your hair, wet your hair thoroughly for 30-60 seconds.

- 1 Pour some TRESemmé shampoo into the palm of your hand. Spread it between your hands and distribute it evenly through the hair.
 - 2 Gently massage your hair and scalp. Do not rough up the hair or pull long hair up onto the scalp, as this may cause tangles.
 - 3 Massage your scalp with your fingertips. This stimulates blood circulation and is gentler to the hair cuticles.
 - 4 Rinse your hair thoroughly, as poor rinsing can result in dull hair.
 - 5 Finish with a cold rinse for extra shine.
- ▶ After shampooing, use TRESemmé conditioner for detangling the hair and improving its condition.

Drying your hair

To get professional styling results, it is essential to prepare your hair for styling.

- 1 After washing, squeeze excess water out of the hair with your hands and then towel-dry the hair.
- 2 Dry your hair properly with a hairdryer to ensure a professional finish.
- 3 Dry your hair by making brushing movements with the dryer at a small distance from your hair.

Use a comb to disentangle hair gently from the roots to the tips.

- 4 When you have finished drying, set the hairdryer to the cold setting for a final cold shot. This closes the cuticles and leaves your hair glossier.

Using the appliance

Do not leave the appliance unattended when it is switched on.

- 1 Make sure all rollers are in the appliance, the clips and pins are outside the appliance and the lid is closed.
- 2 Put the plug in the wall socket.
- 3 Switch the appliance on by setting the red rocker switch on the right side of the appliance to 'I'. The switch will light up when the appliance is switched on.
- 4 Let the appliance heat up for about 10-15 minutes. When the red dots on top of the rollers have turned white, the appliance is ready for use.
 - ▶ You can leave the appliance switched on while you are putting the rollers in your hair.
- 5 Make sure the hair is clean, dry and tangle-free. Divide the hair into sections.
- 6 Take a lock of hair and comb it through. You can use a little bit of Tresemmé hairspray for better fixation.

Take locks with a width of approx. 4cm for the big rollers, approx. 3cm for the medium rollers and approx. 2cm for the small rollers.
- 7 Take the end of the lock and start winding the lock round the roller. Make sure the end of the lock is wound in the required direction.

Always hold the rollers by the plastic rim, because the other parts of the rollers are hot. Usually the small rollers are used on the sides of the head and the large rollers on top of the head.
- 8 Wind the roller towards the scalp, maintaining an even tension. Fix the roller with a clip or pin.

Use the metal pins to fix the small and medium rollers and use the butterfly clips to fix the large rollers.
- 9 Continue with the rest of the hair, always taking locks of the appropriate width for the rollers.
- 10 Leave the rollers in the hair until the hair has completely cooled down. You can use a hairdryer for additional heat to speed up the curling process.
- 11 Remove rollers from the hair by first removing the clip or pin and then carefully removing the roller by unwinding the lock of hair.
- 12 Don't comb or brush the hair after styling, as this would destroy the curls. Just run your fingers through the curls to divide them into smaller strings and to get the most natural effect.

Cleaning

- 1 Always switch the appliance off and unplug it before cleaning it.
- 2 Make sure the rollers and the appliance have cooled down before cleaning them.
- 3 Clean the rollers with a moist cloth and remove any residues of e.g. hairspray.
- 4 Clean the appliance with a moist cloth.

Never immerse the appliance in water nor pour water into it.
- 5 Let the rollers dry completely before placing them back into the appliance.

Storage

- 1 Make sure the rollers and the appliance have cooled down and are dry before storing them.
- 2 Place the rollers in the appliance.

There is a circle around each heating rod that indicates which roller size should be placed on the rod.
- 3 Store the mains cord by winding it round the cord storage hooks in the bottom of the appliance.
- 4 Place the clips and pins in the four compartments surrounding the rollers.

Environment

- ▶ Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment (fig. 1).



Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

If problems should arise with the appliance and you are unable to solve them by means of the troubleshooting guide below, please contact a Philips service centre or the Philips Customer Care Centre in your country.

Problem	Cause	Solution
The appliance does not work at all.	Perhaps there is a power failure or the socket is not live.	Check whether the socket is live by plugging in another appliance.
	Perhaps the mains cord of the appliance is damaged.	If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similar qualified persons in order to avoid a hazard.


TRESemmé
USED BY PROFESSIONALS


HP461 I/07 Salon ProCeramic Rollers



PHILIPS



www.philips.com

 100% recycled paper
100% papier recyclé

4222 002 62912