

Register your product and get support at
www.philips.com/welcome



EN	User manual	LV	Lietuvaiš rokasgrūmatė
BG	Употреба на приборите	PL	Instrukcja obsługi
CS	Průvodce pro uživatele	RO	Manual de utilizare
DE	Kundenführer	RU	Руководство пользователя
ET	Kasutajate juhend	SK	Průvodce uživatelem
HU	Felhasználói kézikönyv	SL	Uporabniški priročnik
KK	Қолданушының пәдісі	SR	Korisnički priručnik
LT	Vartotojų vadovas	UK	Посібник користувача

PHILIPS



Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

3140 035 33042

English

Congratulations on your purchase, and welcome to Philips to fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the heating plates/barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and national regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Style your hair

Note: Do not change the attachments or styler when the appliance is heating up or when it is hot. Let the appliance heat up for 3-5 minutes for perfect styling results. When unplugging the styler of the hair after curling, do not pull the hair as it could damage the curl.

Select a suitable attachment and styler for the hairstyle you want.

Hairstyle	Attachment
Tight curls	small curling attachment (8)
Waves	large curling attachment (8) and Slide-on brush (9)
Large curls	large curling attachment (8)
Beats	large curling attachment (8) and Slip-on spiral (9)

 
 
Before you style your hair:

1 Secure around the ring in pointing at unlock icon on the handle (8).

2 Slide a suitable attachment onto the metal tube (9) of the handle (8) and turn the ring to the right/clockwise to lock it (8).

3 To remove the attachment turn the ring to the left/clockwise to unlock (8) and pull it off.

4 Connect the plug to a power supply socket.

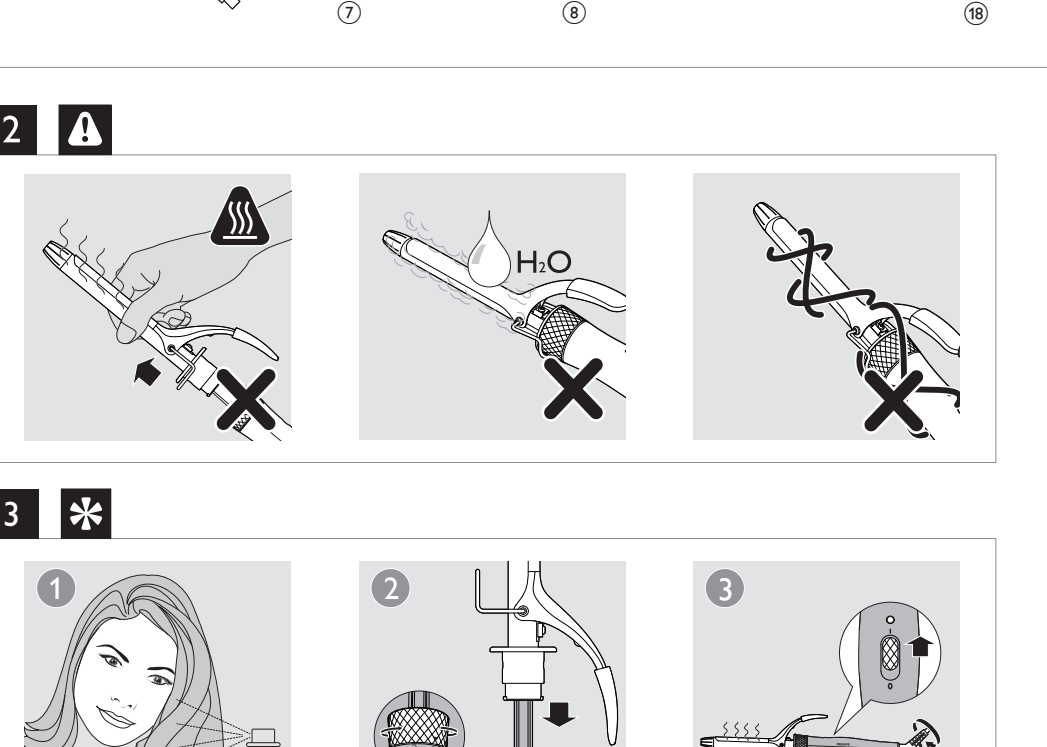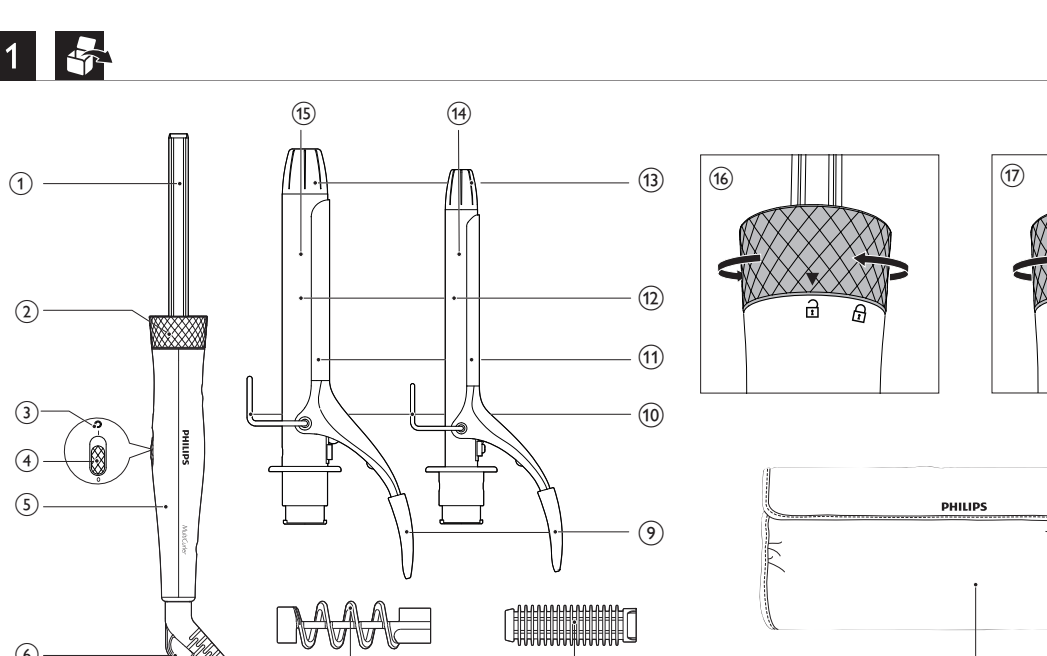

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English

Congratulations on your purchase, and welcome to Philips to fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the heating plates/barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and national regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Style your hair

Note: Do not change the attachments or styler when the appliance is heating up or when it is hot. Let the appliance heat up for 3-5 minutes for perfect styling results. When unplugging the styler of the hair after curling, do not pull the hair as it could damage the curl.

Select a suitable attachment and styler for the hairstyle you want.

Hairstyle	Attachment
Tight curls	small curling attachment (8)
Waves	large curling attachment (8) and Slide-on brush (9)
Large curls	large curling attachment (8)
Beats	large curling attachment (8) and Slip-on spiral (9)

 
 
Before you style your hair:

1 Secure around the ring in pointing at unlock icon on the handle (8).

2 Slide a suitable attachment onto the metal tube (9) of the handle (8) and turn the ring to the right/clockwise to lock it (8).

3 To remove the attachment turn the ring to the left/clockwise to unlock (8) and pull it off.

4 Connect the plug to a power supply socket.

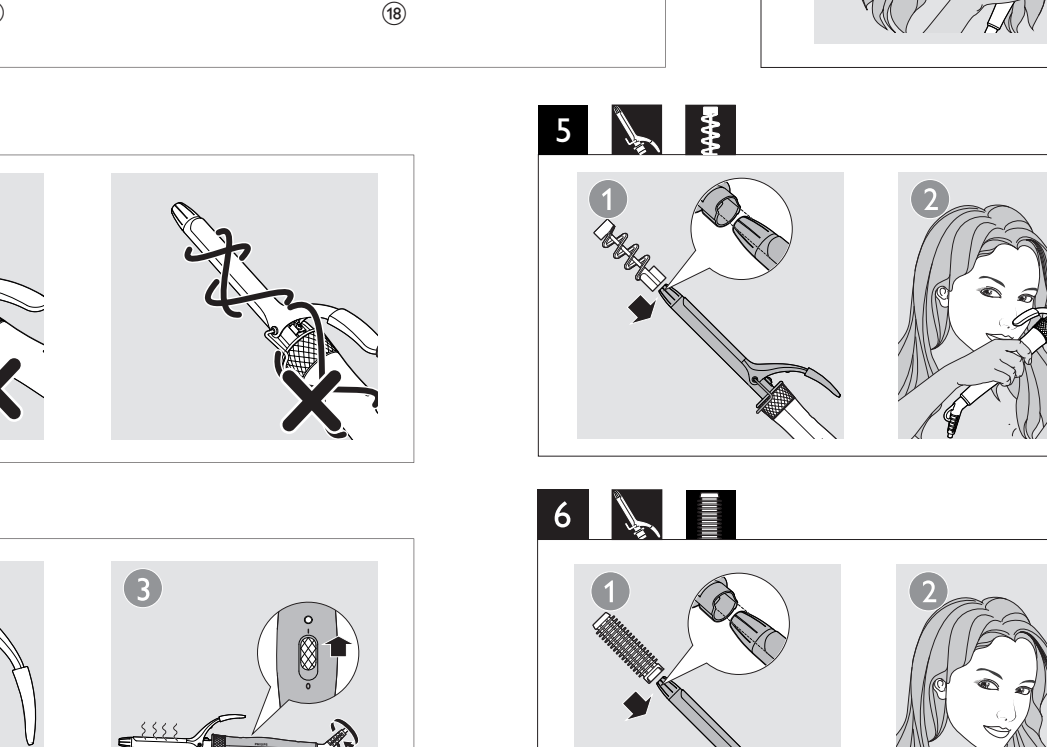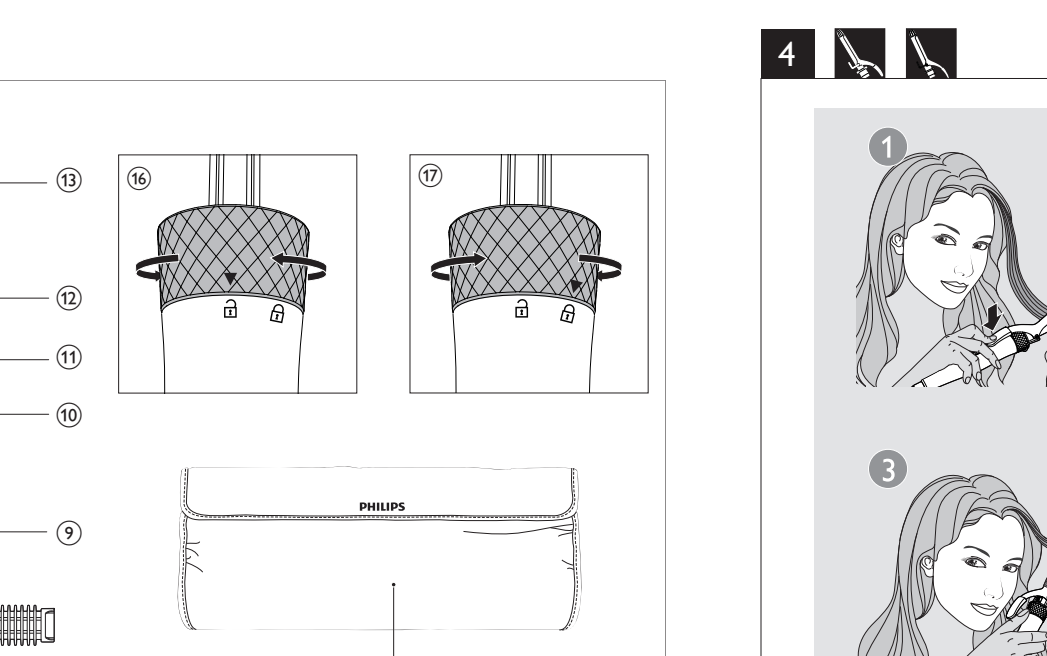

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English

Congratulations on your purchase, and welcome to Philips to fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the heating plates/barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and national regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Style your hair

Note: Do not change the attachments or styler when the appliance is heating up or when it is hot. Let the appliance heat up for 3-5 minutes for perfect styling results. When unplugging the styler of the hair after curling, do not pull the hair as it could damage the curl.

Select a suitable attachment and styler for the hairstyle you want.

Hairstyle	Attachment
Tight curls	small curling attachment (8)
Waves	large curling attachment (8) and Slide-on brush (9)
Large curls	large curling attachment (8)
Beats	large curling attachment (8) and Slip-on spiral (9)

 
 
Before you style your hair:

1 Secure around the ring in pointing at unlock icon on the handle (8).

2 Slide a suitable attachment onto the metal tube (9) of the handle (8) and turn the ring to the right/clockwise to lock it (8).

3 To remove the attachment turn the ring to the left/clockwise to unlock (8) and pull it off.

4 Connect the plug to a power supply socket.

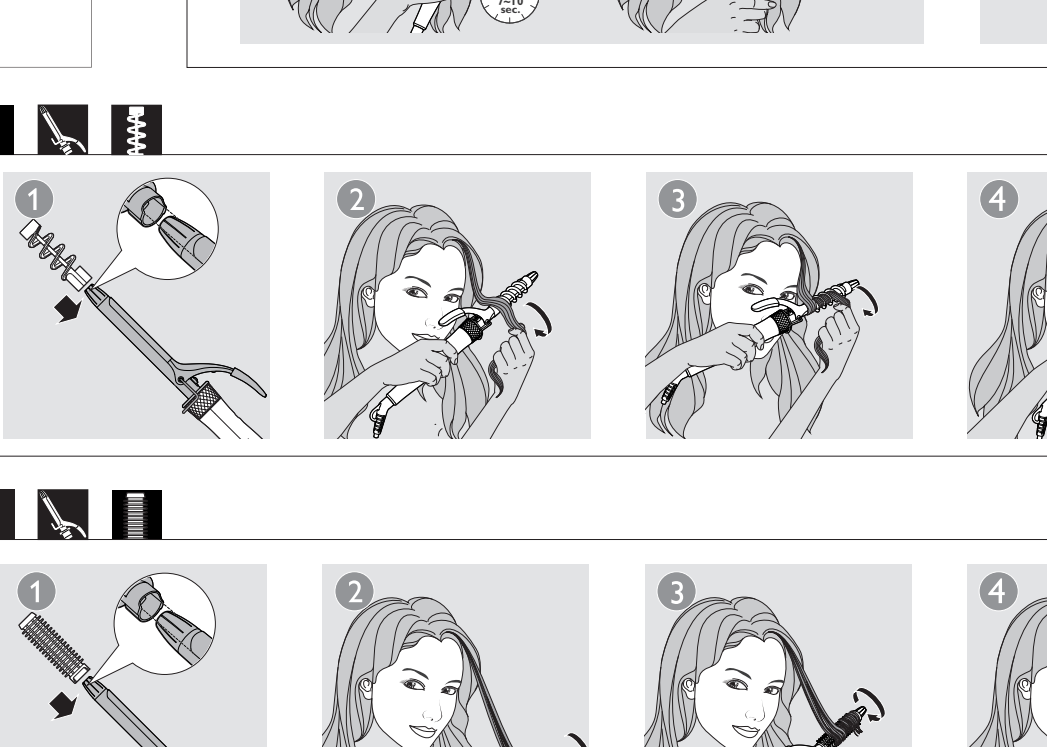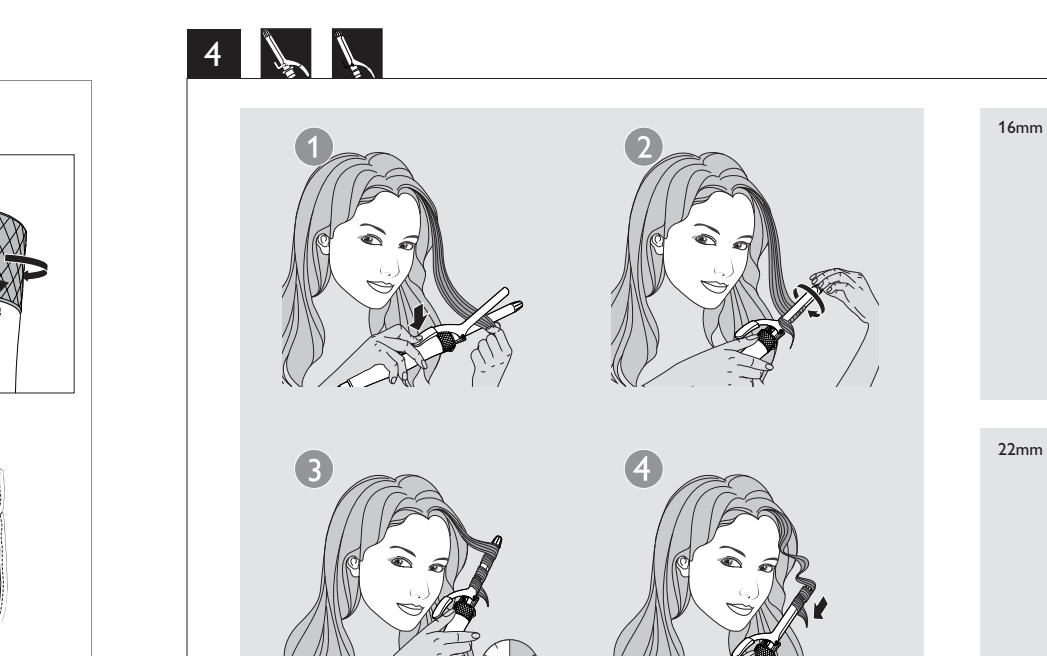

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English

Congratulations on your purchase, and welcome to Philips to fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the heating plates/barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and national regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2 Style your hair

Note: Do not change the attachments or styler when the appliance is heating up or when it is hot. Let the appliance heat up for 3-5 minutes for perfect styling results. When unplugging the styler of the hair after curling, do not pull the hair as it could damage the curl.

Select a suitable attachment and styler for the hairstyle you want.

Hairstyle	Attachment
Tight curls	small curling attachment (8)
Waves	large curling attachment (8) and Slide-on brush (9)
Large curls	large curling attachment (8)
Beats	large curling attachment (8) and Slip-on spiral (9)

 
 
Before you style your hair:

1 Secure around the ring in pointing at unlock icon on the handle (8).

2 Slide a suitable attachment onto the metal tube (9) of the handle (8) and turn the ring to the right/clockwise to lock it (8).

3 To remove the attachment turn the ring to the left/clockwise to unlock (8) and pull it off.

4 Connect the plug to a power supply socket.

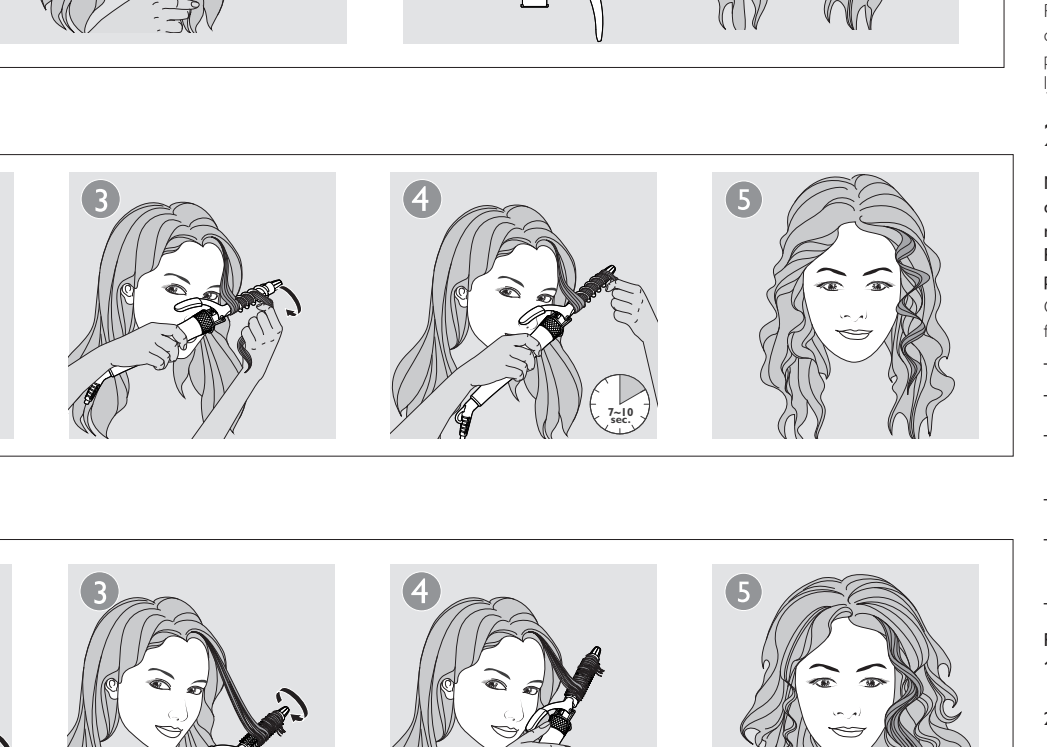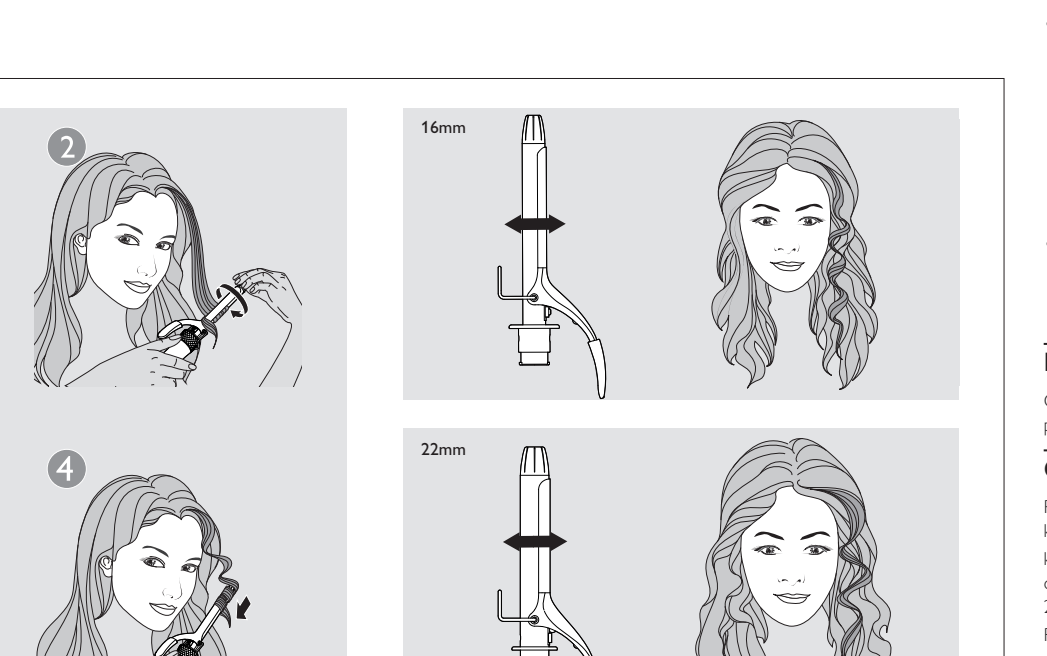

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.

English

Congratulations on your purchase, and welcome to Philips to fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use. If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.

• Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates/barrel should never touch the surface or other flammable material.

• Avoid the mains cord from coming into contact with the hot parts of the appliance.

• Keep the appliance away from flammable objects and material when it is switched on.

• Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.

• Only use the appliance on dry hair. Do not operate the appliance with wet hands.

• Keep the heating plates/barrel clean and free of dust and styling products such as mousse, spray and gel.

• The heating plates/barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

• If the appliance is used on color-treated hair, the heating plates/barrel may be stained. Before using it on artificial hair, always consult their distributor.

• Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

• Do not insert metal objects into openings to avoid electric shock.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and national regulations regarding exposure to electromagnetic fields.

Environment

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is

