

English

Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register
your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the
appliance and keep it for future reference.


- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge



EN User manual

ZH-TW 使用手冊

PHILIPS

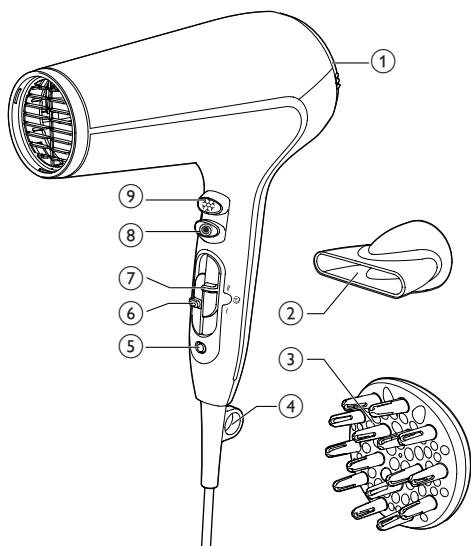

Specifications are subject to change without notice
© 2019 Koninklijke Philips N.V.
All rights reserved.



3000 042 84491

- if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Do not operate the appliance with wet hands.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



2 Dry your hair

- 1 Connect the plug to a power supply socket.
 - 2 Adjust the airflow switch (6) to I for gentle airflow and styling, or II for strong airflow and fast drying.
Tip: You can also use the turbo button (8) for an extra powerful airflow.
 - 3 Adjust the temperature switch (7) to 1 for hot airflow, 2 for warm airflow, or 3 for efficiently drying your hair at a constant caring temperature. Press the cool shot button (9) for cool airflow to fix your style.
- The appliance with ionic function provides additional shine and reduces frizz. To turn the ionic function on or off, adjust the ionic slide switch (5) to I or O.
↳ The ionic function may produce a special odor. It is normal and caused by the ions which are generated.

Nozzle (2)

With the ultra slim styling nozzle, air is more concentrated while you are drying your hair. It is easier to style straight hair.

Volume diffuser (③)

The volume diffuser is specially developed to gently dry both straight and curly or wavy hair.

- To enhance your natural volume and maintain your curls, hold the dryer vertically to dry your hair.
- To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp.
- Make rotating movements with the appliance to distribute the warm air through your hair.

After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Take the air inlet grille (①) off the appliance to remove hair and dust.
 - Rotate the air inlet grille anti-clockwise to take it off the appliance.
 - Rotate the air inlet grille clockwise to reattach it to the appliance.
- Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (④).

3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

繁體中文

感謝您購買本產品。歡迎來到飛利浦的世界！請至 www.philips.com/welcome 註冊您的產品，以獲得飛利浦提供的完整支援。

1 重要事項

使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

- 警告：請勿在靠近水的地方使用本產品。
- 在浴室使用完本產品，請將插頭拔除，因為即使產品電源關閉，與水接觸還是可能發生危險。
- 警告：使用本產品時，切勿靠近浴缸、淋浴間、臉盆或其他盛水的容器。
- 用完本產品後，請務必將插頭拔掉。
- 本產品過熱時，會自動斷電。拔出產品插頭，待產品冷卻幾分鐘。在您重新開啟本產品前，

請檢查進風柵口，確定沒有被毛絮或毛髮等阻塞。

- 如果電線損壞，則必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 本產品可供 8 歲以上孩童、身體官能或心智能力退化者，或是經驗與使用知識缺乏者使用，但需要有人在旁監督或適當指示如何安全使用本產品，以及提示可能遭受的危險。請勿讓孩童把玩本產品。若無人在旁監督，不得讓孩童清潔與維護產品。
- 為了加強安全，建議在通向浴室的電流迴路上安裝 30 毫安培以下的漏電斷路器 (RCD)。請洽詢合格的水電技術人員。
- 請勿將金屬物品插入風口，以避免觸電。
- 不可阻塞進風柵口。
- 在您連接電源之前，請確認本地的電壓與產品所標示的電源電壓相符。
- 請勿將本產品用於本手冊所述之外的任何其他用途。
- 請勿在假髮上使用本產品。
- 在無人看管的情況下，請將本產品的插頭拔除。
- 請勿使用其他製造商的任何配件或零件，或非由飛利浦建議之配件或零件。如果您使用此類配件或零件，保固即會失效。
- 請勿將電線纏繞在本產品上。
- 在進行收納之前，請先等候本產品完全冷卻。
- 使用後切勿拉扯電源線。拔除產品插頭時請務必抓住插頭。
- 手潮濕時請勿使用本產品。

請務必將本產品送回飛利浦授權之服務中心進行檢查或維修。由不合格人員進行維修可能會對使用者造成極端危險。

電磁場 (EMF)

本飛利浦產品符合所有電磁場暴露的相關適用標準和法規。

回收

本產品使用壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站。此舉能為環保盡一份心力。

請根據當地有關電子與電器產品分類收集法規棄置產品。正確處理廢棄產品有助於避免對環境和人類健康帶來負面影響。



2 吹乾頭髮

- 將插頭接上電源插座。
- 將風量開關 (⑥) 調至 I 溫和風量，或 II 強力風量，迅速吹乾頭髮。

提示：您也可以使用渦輪按鈕 (⑧)，以超強風量吹整。

- 將溫度開關 (⑦) 調至 ② 熱風、③ 暖風或 ④，以穩定的呵護秀髮溫度，有效率地吹乾頭髮。按下瞬間冷風按鈕 (⑨)，以冷風造型，讓造型更持久。

本產品配備負離子功能，可讓秀髮更富光澤同時減少毛躁。

若要開啟或關閉負離子功能，請將負離子滑動開關 (⑤) 調至 I 或 O。

負離子功能可能會產生特殊氣味。這是正常現象，該氣味是由負離子所造成。

集中風力吹嘴 (②)

讓您使用更為集中的氣流吹乾秀髮。打造直髮造型更輕鬆。

蓬鬆造型烘罩器 (③)

蓬鬆造型烘罩器專為能夠溫和地烘乾頭髮而研發，適用於直髮、捲髮及波浪髮型。

- 要增加自然豐盈的髮量並維持秀髮捲度，請直立握住吹風機吹乾秀髮。
- 要增加髮根的蓬鬆度，將烘罩器梳齒伸入髮中並接觸到頭皮。
- 將本產品以畫圓的方式移動，讓暖風可以吹到所有頭髮。

使用後：

- 關閉產品電源，並拔除插頭。
- 將本產品放在耐熱的平面上，直到冷卻為止。
- 請從產品上取下進風開口 (①)，清除毛髮和灰塵。
 - 以逆時針方向旋轉進風柵口，便可將之自產品上取下。
 - 以順時針方向旋轉進風柵口，則可將之重新裝到產品上。
- 將產品置於安全乾燥處，避免沾染灰塵。您也可以使用吊環 (④) 掛置產品。

3 保固與服務

若您需要相關資訊或有任何問題，請瀏覽 Philips 網站 www.philips.com/support，或連絡您當地的 Philips 客戶服務中心 (您可以在全球保證書上找到連絡電話)。若當地沒有顧客服務中心，請洽詢當地的 Philips 經銷商。

設備名稱：飛利浦大風量負離子溫控護髮吹風機 Equipment name:		型號 (型式)：HP8243 Type designation (Type):				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
塑膠外殼	○	○	○	○	○	○
電源線組	-	○	○	○	○	○
開關	○	○	○	○	○	○
電動機	-	○	○	○	○	○
加熱元件	-	○	○	○	○	○

備考 1：“超出 0.1 wt %”及“超出 0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考 2：“○”係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考 3：“-”係指該項限用物質為排除項目。
Note 3: The “-” indicates that the restricted substance corresponds to the exemption.