



Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof (Fig. 3). It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Note: This appliance can only be used without cord.

When you charge the appliance for the first time or after a long period of disuse, let it charge for at least 10 hours.

A fully charged appliance provides up to 45 minutes of shaving time.

The shaving time may be less as a result of your shaving behavior, your cleaning habits or your beard type.

Charging with the supply unit

- 1 Make sure the shaver is switched off.
- 2 Put the small plug in the shaver and put the supply unit in the wall socket.
- The display of the shaver indicates that the shaver is charging.
- 3 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Charge indications

Battery low

When the battery is almost empty, the appliance starts working more slowly.

Charging

When the appliance is charging, the charging light lights up white continuously (Fig. 4).

- The charging light will keep lighting up white when the appliance is fully charged.

Note: After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Using the appliance

Note: This appliance can only be used without cord.

Switching the appliance on and off

- 1 To switch the appliance on or off, press the on/off button once (Fig. 5).

Shaving tips

- Use the shaver with shaving gel or foam for extra skin comfort, or use the shaver dry for extra convenience.
- We advise you to use the shaver with shaving gel or foam when you use it for a wet shave. Do not use thick shaving cream or shaving oil with this shaver.
- When you use the shaver for dry shaving, we advise you to make sure your skin is fully dry so that the shaver glides smoothly over your skin.
- For best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- For optimal shaving results, make circular movements during use.
- The shaver is waterproof and can be used in the bath or shower.
- Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.

- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Always unplug the shaver before you clean it under the tap.

- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the cleaning system or the charging stand in water and do not rinse it under the tap (Fig. 2).

- Never use water hotter than 60°C to rinse the shaver.

- Only use this appliance for its intended purpose as shown in the user manual.

- For hygienic reasons, the appliance should only be used by one person.

- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- If your shaver comes with a cleaning system, always use the original Philips cleaning fluid (cartridge or bottle, depending on the type of cleaning system).

- Always place the cleaning system on a stable, level and horizontal surface to prevent leakage.

- If your cleaning system uses a cleaning cartridge, always make sure the cartridge compartment is closed before you use the cleaning system to clean or charge the shaver.

- When the cleaning system is ready for use, do not move it to prevent leakage of cleaning fluid.

- Water may drip from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Dry shaving

- 1 Switch on the appliance.

- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 8). Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

- 3 Clean the appliance after use (see 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the appliance.

Trimming

You can use the trimmer to groom your sideburns and moustache.

- 1 Push the trimmer release slide downwards to open the trimmer (Fig. 9).

- 2 Switch on the appliance.

- 3 Hold the trimmer perpendicular to the skin and move the appliance downwards while you exert gentle pressure (Fig. 10).

- 4 After trimming, switch off the appliance.

- 5 Clean the trimmer.
- 6 Close the trimmer ('click') (Fig. 11).

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal performance.

Always unplug and switch off the appliance before you clean it.

Note: Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Be careful with hot water. Always check if the water is not too hot, to prevent burning your hands.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

- 1 Hold the shaving unit and first lift the front, then the back upwards of the appliance (Fig. 12).

Note: Make sure to hold the shaving unit while doing so.

- 2 Rinse the hair chamber under the tap (Fig. 13).

Rinse the inside of the shaving unit under a warm tap (Fig. 14).

- 3 Rinse the outside of the shaving unit under a warm tap.

Thorough cleaning

- 4 Turn the lock anticlockwise and remove the retaining frame from the shaving unit (Fig. 15).

- 5 Remove and clean one shaving head at a time (Fig. 16). Each shaving head consists of a cutter and a guard.

Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- 6 Remove the cutter from the shaving guard and rinse it with water (Fig. 17).

Rinse the inside and outside of the shaving guard with water (Fig. 18).

- 7 Put the shaving heads back into the shaving unit (Fig. 19). Make sure that the projections of the shaving heads fit exactly into the recesses.

10 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 20).

- 11 Reattach the shaving unit (Fig. 21).

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

- 12 Carefully shake off excess water, open the shaving unit again and leave it open to let the shaving unit air dry completely.

Caution: Be careful not to hit the shaving unit against anything while you shake off excess water.

Cleaning the trimmer

Clean the trimmer every time you have used it.

- 1 Switch off the appliance and disconnect it from the wall socket.

2 Push the trimmer release slide downwards to open the trimmer (Fig. 9).

- 3 Rinse the trimmer under the tap (Fig. 22).

4 Carefully shake off excess water and let the trimmer dry.

- 5 Close the trimmer ('click') (Fig. 11).

Tip: For optimal trimming performance, lubricate the trimmer teeth with a drop of sewing machine oil regularly.

Storage

We advise you to let the appliance dry before you put the protection cap on it.

- 1 Switch off the appliance.

2 Put the protection cap on the shaving unit after use to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 23).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads' (see 'Ordering accessories').

- 1 Switch off the appliance and disconnect it from the power outlet.

2 Hold the shaving unit and first lift the front, then the back upwards of the appliance.

Note: Make sure to hold the shaving unit while doing so.

- 3 Turn the lock anticlockwise and remove the retaining frame.

4 Remove the shaving heads and place new ones in the shaving unit. Make sure that the projections of the shaving heads fit exactly into the recesses.

- 5 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 20).

6 Reattach the shaving unit.

Note: If you cannot reattach the shaving unit properly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH30/51 Philips shaving heads

Note: Availability of the accessories may differ by country.

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the mains and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the shaver.

Be careful, the battery strips are sharp.

- 1 Disconnect the shaver from the wall socket.
- 2 Let the shaver operate until it stops.
- 3 Remove the screws in the back of the shaver and in the hair chamber (Fig. 24).
- 4 Remove the top part of the shaver (Fig. 25).
- 5 Remove the front panel and the back panel (Fig. 25).
- 6 Take out the power unit (Fig. 26).

Be careful, the hooks are sharp.

- 7 Bend the snap hooks aside and remove the transparent cover of the power unit (Fig. 26).
- 8 Lift out the battery holder and cut the wires with a pair of cutting pliers or scissors (Fig. 27).
- 9 Bend the battery tags aside with a screwdriver (Fig. 28).
- 10 Remove the rechargeable batteries.

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country