


HP8372

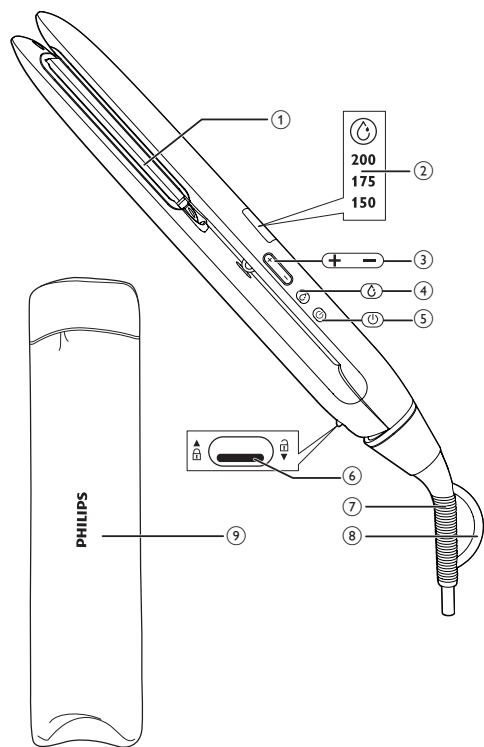

EN User manual ZH-CN 用户手册

PHILIPS

## English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.



- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

- If the appliance is used on color-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.



### 2 Introduction

The MoistureProtect straightener has an innovative new sensor technology called the Moisture Protect sensor. This technology has been specifically designed to preserve the natural hydration of your hair. The sensor diagnoses your hair 30 times per second and adapts the temperature to preserve natural hydration of your hair. This gives advanced protection to your hair from overheating and therefore keeps your hair healthier and shinier. We've already turned the sensor on so you can enjoy maximum protection right from the start.

### 3 Overview

- ① Heating plates
- ② Display panel
- ③ Temperature setting
- ④ MoistureProtect on/off
- ⑤ Power on/off
- ⑥ Closing lock
- ⑦ Swivel cord
- ⑧ Hanging loop
- ⑨ Pouch for storage

### 4 Straighten your hair

**Before use:**

- Wash your hair with shampoo and conditioner.
- Blow dry your hair with a brush.

**Note:** Always select a low setting when you use the straightener for the first time.

- 1 Connect the plug to a power supply socket.
- 2 Push down the closing lock to unlock the appliance (⑥).
- 3 Press the power on/off button (⑤) for one second to switch on the straightener.
  - ↳ The Moisture Protect LED is lit and the temperature indicator '175' (②) starts blinking on the display.
  - ↳ If the appliance is powered on, ions are automatically and continuously dispensed from the outlet, reducing frizz and providing additional shine.
- 4 Press the temperature button + or — to select a suitable temperature setting for your hair. The selected temperature starts blinking on the display. You can refer to the **Hair Type** table below.

Hair Type	Temperature Setting
Coarse, curly, hard-to-straighten	200°C
Fine, medium-textured or softly waved	175°C
Pale, blonde, bleached or color-treated	150°C

- ↳ When the straightening plates have heated up to the selected temperature, the digits stop blinking.
- 5 To switch off/on the MoistureProtect, press and hold the ④ button (④) for one second.
  - 6 Comb your hair and take a section that is not wider than 5cm for straightening.

**Note:** For thicker hair, it is suggested to create more sections.

**For max. moisture preservation we recommend 1 stroke with relatively fewer hair strands.**

- 7 Place it between the straightening plates and press the handles firmly together.
- 8 Slide the straightener down the length of the hair in a single motion (max. 5 seconds) from root to end without stopping.
- 9 To straighten the rest of your hair, repeat steps 6 to 8.
- 10 To finish your hair styling, mist with a shine spray or flexible hold hairspray.

**Note:** The appliance is equipped with an auto-shut off function. After 60 minutes, the appliance switches off automatically. You can re-start the appliance by pressing and holding the power on/off button until the LED screen lights up.

**After use:**

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance and straightening plates by damp cloth.
- 4 Lock the straightening plates (⑥).

- 5 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑧) or store it with the supplied pouch (⑨).

### 5 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at [www.philips.com/support](http://www.philips.com/support) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

### 6 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The mains cord of the appliance may be damaged.	If the mains cord is damaged, you must have it replaced by a service centre authorised or similarly qualified persons in order to avoid a hazard.

## 简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 注册您的产品。

### 1 重要事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- **警告：**请勿在靠近水的地方使用本产品。
- 在浴室内使用产品后需拔下插头，即使产品已关闭，近水放置仍存在危险。
- **警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。





警告符号注释：禁止在洗澡或淋浴时使用。

使用后务必拔下产品的插头。

如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。

本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有所障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。

连接产品之前，请确保产品上标示的电压与当地电源电压相符。

请勿将本产品用于本手册中说明以外的任何其它用途。

当产品连接了电源时，切勿让其无人看管。

切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。

切勿将电源线缠绕在产品上。

待产品完全冷却后再存放。

由于产品会很烫，请在使用时多加注意。只能握住手柄，因为其他部位会很烫，并且避免与皮肤接触。始终将本产品放置在隔热的平稳表面上。热加热板不得接触表面或其他可燃材料。

不要使电源线接触到产品的灼热部分。

如果产品已打开，请使产品远离易燃物体和材料。

当产品变热时切勿在其表面覆盖任何物品（如毛巾或衣服）。

产品只能用于干的头发。切勿用湿手操作本产品。

保持加热板洁净无尘且未粘上定型产品(如摩丝、定型喷剂和发胶)。切勿将本产品与定型产品结合使用。

加热板上涂有涂层。此涂层可能会随着时间的推移慢慢磨损。但是，这并不影响产品的性能。

将产品用于染过色的头发时，加热板可能会染上颜色。将产品用于假发之前，务必先咨询其经销商。

产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。

切勿将金属物体插入开口中，以免触电。

## 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

## 环保

弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给政府指定的回收中心。这样做有利于环保。



## 2 简介

MoistureProtect 直发器采用创新的新型传感器技术，其称为保湿传感器。

该技术专为保持头发的自然滋润而设计。该传感器每秒钟对头发分析 30 次，调整温度，以保持头发的自然滋润。这可为头发提供先进的保护，防止其过热，让您的秀发更健康、更亮泽。我们已经打开了传感器，因此您从一开始就可以享受最完善的保护。

## 3 概述

- ① 加热板
- ② 显示面板
- ③ 温度设定
- ④ MoistureProtect 开/关
- ⑤ 开启/关闭
- ⑥ 锁扣
- ⑦ 电源线
- ⑧ 挂环
- ⑨ 收纳袋

## 4 拉直头发

### 使用之前：

- 用洗发水和护发素洗净头发。
- 吹干时用梳子梳理头发。

**注意：**首次使用直发器时，一定要选择较低的温度设定。

- 1 将插头连接至电源插座。
- 2 拨动锁扣将产品解锁 (⑥)。
- 3 按电源开/关按钮 (⑤) 1 秒钟可打开直发器。

↳ Moisture Protect LED 会亮起，显示屏上的温度指示“175” (②) 开始闪烁。

↳ 如果产品已接通电源，将自动并连续地从出口产生负离子，令秀发更加顺滑、亮泽。

- 4 按住温度按钮 + 或 - 选择适合您发质的温度设定。选定的温度会在显示屏上开始闪烁。您可以参阅下面的发质类型表。

发质类型	温度设定
粗糙，带卷，很难拉直	200°C
纤细，中性发质或略卷	175°C
白发、金发、经过漂白或者染过色的头发	150°C

↳ 直发夹板加热至选定的温度后，数字将停止闪烁。

- 5 要关闭/打开 MoistureProtect，请按住 ⑥ 按钮 (④) 1 秒钟。
- 6 梳理头发，取一绺宽度不超过 5 厘米的头发进行拉直。

**注意：**对于较浓密的头发，建议将头发分为更多发绺。

为了最大限度地保持润泽，我们建议每次选取较少量的发绺。

- 7 将头发置于直发夹板之间，然后用力将手柄按拢。

- 8 从发根至发梢，将直发器顺着头发往下拉（不要超过 5 秒）动作要流畅，不要停顿。

- 9 要拉直头发的其余部分，重复步骤 6 至 8 即可。

- 10 要完成您的头发造型，请喷上一些亮泽喷雾或柔护定型剂。

**注意：**产品配备自动关熄功能。60 分钟后，产品将自动关闭。您只需重新启动产品，即按住电源开/关按钮，直至 LED 屏幕亮起。

### 使用后：

- 1 请关闭产品并拔下电源插头。
- 2 将产品置于隔热表面上，直至其冷却。
- 3 用湿布清洁本产品和直发夹板。
- 4 锁定直发夹板 (⑥)。
- 5 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环 (⑧) 将产品挂起或将其存放在随附的软袋 (⑨) 中。

## 5 保修与服务

如果您需要了解信息（如更换附件的相关信息）或有任何疑问请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support)。您也可以与您所在地的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

## 6 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。
	产品的电源线可能已损坏。	如果电源软线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员来更换。

保留备用

出版日期：2016-07-01

部件名称		产品中有害物质的名称及含量			
		有害物质			
发热架组合	多溴二苯醚 (PBDE)	○	○	○	○
负离子发生器	多溴联苯 (PBB)	○	○	○	○
电源线	六价铬 (Cr6+)	○	○	○	○
	镉 (Cd)	○	○	○	○
	汞 (Hg)	○	○	○	○
	铅 (Pb)	×	×	×	×

本表格依据 SJ/T 11364 的规定编制。

○：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

×：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

## PHILIPS

产品：飞利浦直发造型器  
 型号：HP8372  
 额定电压：220V~  
 额定频率：50Hz  
 额定输入功率：36 W  
 生产日期：请见产品本体  
 产地：中国广东东莞



飞利浦（中国）投资有限公司  
 上海市天目西路218号1602-1605  
 全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2009 及 GB17625.1-2012 制造