

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a charging stand while plugged in that has fallen into water. Unplug immediately.
2. Power plug and the accessories connected to it are not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Always unplug the charging stand from the electrical outlet immediately after use, except when StyleShaver is (re)charging.
5. Unplug and remove power supply cord from charging stand before cleaning.
6. When discarding StyleShaver, unplug charging stand and remove StyleShaver from charging stand before removing rechargeable batteries. See Battery Removal instructions.
7. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this StyleShaver/charging stand is used by, on, or near children or invalids.
2. Use this StyleShaver/charging stand for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this StyleShaver/charging stand if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. For assistance call 1-800-243-3050.
4. Keep the StyleShaver, charging stand, cord and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Never operate the StyleShaver with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Do not operate, charge or plug in StyleShaver outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check foil, cutters, trimmers and combs before using the StyleShaver. Do not use the StyleShaver if foil, cutters, trimmers or combs are damaged, as injury may occur.
9. Always attach plug to charging stand first, then charging plug into outlet. To disconnect, remove charging plug from outlet.
10. Use only the cord and charging stand provided to charge and (re)charge the StyleShaver.
11. If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatize for 30 minutes before using.
12. Never put the StyleShaver/charging stand in direct sunlight or store at a temperature above 140°F.
13. To prevent possible damage to the cord, do not wrap cord around the charging stand. Do not store in a damp environment.
14. Only use the power plug and other accessories supplied with the StyleShaver.

SAVE THESE INSTRUCTIONS


IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

Registration

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register

Features

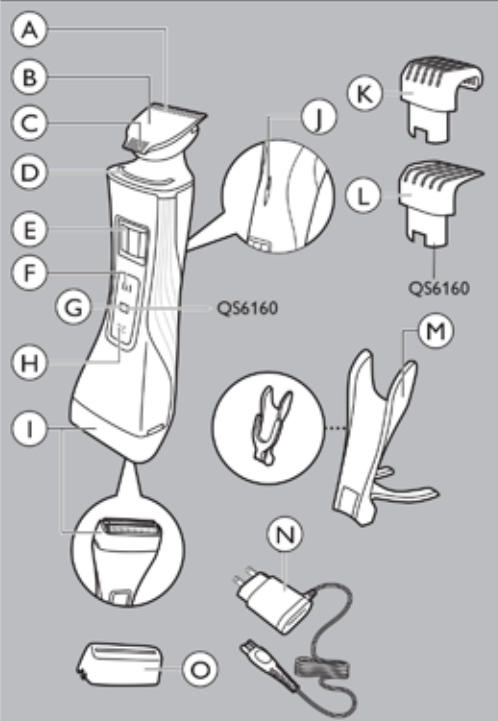

Create Your Own Look


Your new Philips Norelco StyleShaver offers you a safe, gentle and quick way to trim or shave facial hair. This unique combination allows you to create your own look safely and with less irritation. The zoom wheel gives you multiple hair length settings to choose from so you can control the exact hair length you desire or use the shaving unit to completely shave off facial hair. Your StyleShaver will give you a precise trim and shave anywhere, every time.

Like many new products, your Philips Norelco StyleShaver may take a little getting used to. If you are shaving sensitive areas for the first time, your skin may need time to adapt. Give yourself some time to acquaint yourself with your new StyleShaver.

Stick with it! If you alternate trimming or shaving methods during the adjustment period it may make it more difficult to adapt to the Philips Norelco StyleShaver. If you are still not convinced, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Features

- A Full-size trimmer (1 17/64 in./32 mm)
- B Trimming head
- C Precision detail trimmer (5/8 in./15 mm)
- D Guiding groove
- E Zoom wheel
- F On/off button
- G Travel lock indication (QS6160 only)
- H Shaving head on/off button
- I Shaving head
- J Battery status indicator
- K Beard comb
- L Detail comb (QS6160 only)
- M Charging stand
- N Adapter with small plug
- O Protective cap
- P Cleaning brush
- Storage pouch (QS6160 only)
- Full 2-Year Warranty
- 45-Day Money-Back Guarantee

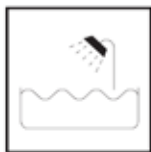

This symbol indicates that the StyleShaver can be used in the bath or shower.

Battery Status Indicator

- ▶ The Battery Status Indicator on the StyleShaver will flash white to indicate StyleShaver is (re)charging.
- ▶ The Battery Status Indicator lights up white continuously to indicate the StyleShaver is fully charged.
- ▶ After StyleShaver is fully charged, the charging light goes out after 30 minutes to save energy.

Before First Use

- ▶ Charge the StyleShaver before you start using it (see 'Charging'). Make sure the StyleShaver is switched off before you start charging it.
- ▶ Before using, check foil, cutters, trimmers and combs for wear or damage. If foil, cutters, trimmers or combs show signs of wear or damage, do not use StyleShaver as injury may occur. Do not use StyleShaver until foil, cutters, trimmers or combs have been replaced.

Charging

- ▶ Charging requires 1 hour (QS6160) or 4 hours (QS6140).
- ▶ Use only the power cord and charging stand provided.
- ▶ Charging, recharging or storing at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries.
- ▶ The StyleShaver can only be charged in the charging stand.

- 1 Be certain StyleShaver is OFF.
- 2 Connect power cord to charging stand (Fig. 1). NOTE: The small plug is easiest to insert when the charging stand is folded.
- 3 Unfold the charging stand (Fig. 2).
- 4 Plug the adaptor into any 120V AC outlet. Use only the power cord provided.

- ▶ An adaptor plug may be necessary for power cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for the power outlet.

- 5 Put the StyleShaver in the charging stand with the shaving head pointing upwards (Fig. 3). Make sure the charging contacts on each side of the StyleShaver fit into the charging stand correctly. When placed correctly, the charging light will flash white to indicate the StyleShaver is (re)charging (Fig. 4).

- 6 A fully charged StyleShaver has a cordless grooming time of up to 75 minutes.

- 7 When the battery is fully charged, the Battery Status Indicator lights up white continuously for 30 minutes and then will go out.

- 8 Disconnect the power cord and unplug from the electrical outlet.

Recharging

- 1 Recharge when the Battery Status Indicator flashes orange. This indicates there is approximately 10 minutes of operating time left.

If the Battery Status Indicator flashes orange quickly, the battery is completely empty. Charge the StyleShaver before using.

- 2 When StyleShaver is fully charged, disconnect the power cord and unplug from electrical outlet.

Trimming

- ▶ Use this StyleShaver for its intended household use as described in this manual.
- ▶ Always comb your beard and/or moustache with a fine comb before you start trimming.
- ▶ If you are trimming for the first time, be careful. Do not move the StyleShaver too fast. Make smooth and gentle movements.
- ▶ After trimming, residual hair length can vary depending on hair type.

Trimming With Trimming Comb

- ▶ The trimming combs let you trim facial hair to different lengths.
- ▶ Use the beard comb to trim your beard and moustache.
- ▶ Use the detail comb (QS6160 only) to trim hard-to-reach areas, such as under the nose.
- ▶ Trimming is easier when the skin and hair are dry.
- ▶ The hair length settings are indicated on the StyleShaver. The settings correspond to the remaining hair length after trimming.
- ▶ The trimming combs cut hair to a length of 3/64 – 13/32 in. (1-10 mm).

- 1 Hold the StyleShaver in the trimming position, with the trimming head pointing up (Fig. 5).

- 2 Slide the trimming comb into the guiding grooves of the StyleShaver (Fig. 6).

- 3 Press and turn the Zoom Wheel left or right to select a setting (Fig. 7). See Table for settings and corresponding hair lengths. –The line above the Zoom Wheel indicates the setting selected (Fig. 8).

- ▶ If you are trimming for the first time, start by using the maximum trimming length setting of 13/32 in. (10mm) to prevent accidentally trimming hairs too short. As you become familiar with the settings, adjust Zoom Wheel to desired trimming setting.

- 4 Press the trimming head on/off button once to turn trimming head ON (Fig. 9). The on/off button lights up to indicate trimming head is ON (QS6160 only).

- ▶ If you turn the trimming head on while the shaving head is also on, the shaving head will turn off.

- 5 To trim in the most effective way, move the StyleShaver against the direction of hair growth. Do not move the StyleShaver too fast. Make smooth and gentle movements and make sure the surface of the trimming comb always stays in contact with the skin (Fig. 10).

NOTE: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- 6 Turn the StyleShaver OFF.

- 7 Clean the StyleShaver (see section 'Cleaning').

Trimming Length Settings Table

Hair length setting	Hair length after trimming
No comb	1/32 inch – 0.5 mm
1	3/64 inch – 1 mm
.	1/16 inch – 1.5 mm
2	5/64 inch – 2 mm
.	3/32 inch – 2.5 mm
3	1/8 inch – 3 mm
4	5/32 inch – 4 mm
5	3/16 inch – 5 mm
6	1/4 inch – 6 mm
7	9/32 inch – 7 mm
8	5/16 inch – 8 mm
9	3/8 inch – 9 mm
10	13/32 inch – 10 mm

Trimming Without A Trimming Comb

Remove trimming comb to cut hair close to the skin (approximately 1/32 in./0.5mm)

- 1 Be certain StyleShaver is in the OFF position.

- 2 Remove the trimming comb by pulling it off the StyleShaver (Fig. 11).

Never pull off comb by grasping the flexible top portion. Always pull off by the bottom part of the comb.

- 3 Press the trimming head on/off button once to turn trimming head ON (Fig. 9).

- 4 Hold the StyleShaver in the trimming position, with the trimming head pointing up (Fig. 5).

- 5 Make downward strokes with the broad side of the trimming head.

Using the Precision Trimmer

Use the precision trimmer for precise trimming around ears, sideburns, mouth and under the nose.

- 1 Turn the trimmer head until the precision trimmer points to the front of the StyleShaver (Fig. 12).
- 2 Press the trimming head on/off button to turn trimming head ON (Fig. 9).
- 3 Hold the StyleShaver with the trimming head pointing up and make downward strokes with the precision trimmer.

Shaving

- ▶ The StyleShaver should be used on facial hair only.
- ▶ Use the shaving head with shaving gel or foam for extra skin comfort or use dry for extra convenience.
- ▶ When shaving sensitive areas for the first time, you may feel some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- ▶ If your hair is longer than 13/32 in. / 10 mm, trim hair using a trimmer comb first for optimum shaving results.
- ▶ Be certain that your skin is clean before using the StyleShaver.
- ▶ Make sure the shaving head is in complete contact with your skin for the closest shave and minimum foil wear.
- ▶ Pressing too hard may cause skin irritations.
- ▶ Practice is best for optimum results.

- 1 Hold the StyleShaver in the shaving position, with the shaving head pointing upwards and the trimming head pointing downwards (Fig.13).

- 2 Turn StyleShaver ON by pressing the shaving head on/off button (Fig. 14).

The on/off button lights up to indicate shaving head is on (QS6160 only).

- 3 Stretch your skin taut with your free hand and gently press StyleShaver to skin and move it slowly and smoothly against the direction of hair growth (Fig. 15). DO NOT press too hard. Too much pressure can distort the foil and cause skin irritation.

For optimal results, make circular movements during use.

- 4 Make sure the shaving head is always in full contact with your skin.

TIP: If using wet, rinse the shaving head often under the tap to ensure it continues to glide smoothly over your skin.

- 5 Turn StyleShaver OFF by pressing the shaving head on/off button (Fig. 14).

Overload Protection

If you press the trimming or shaving head too hard on your skin or the cutting element gets blocked, the on/off button of the blocked trimming or shaving head quickly flashes (QS6160 only) and the appliance turns off automatically. Clean the appliance (see 'Cleaning' section).

Cleaning

- ▶ The StyleShaver should be cleaned after each use.
- ▶ Always switch StyleShaver OFF and remove StyleShaver from charging stand before cleaning.
- ▶ Do not use compressed air, abrasive cleaning agents, scourers or aggressive liquids such as alcohol, benzene bleach or acetone to clean the appliance.
- ▶ Never clean, remove or replace trimmer or shaving head assembly while motor is on.
- ▶ Do not apply pressure to shaving head. Do not touch foil with hard objects as this may dent or damage foil or cutters. If damage occurs, replace damaged parts.
- ▶ Do not use StyleShaver if foil, cutters, trimmers or combs are damaged or broken as injury may occur.
- ▶ Only use the cleaning brush supplied. Any other brush may cause damage.

Cleaning the shaving head

- 1 Always switch StyleShaver OFF and remove StyleShaver from the charging stand before cleaning (Fig. 9).

- 2 Remove the shaving foil head by pulling it off the appliance (Fig. 16). Hold the shaving head by the plastic housing only.

- 3 Rinse the shaving head under warm running tap water to rinse away debris (Fig. 17). Do not use the cleaning brush to clean the shaving head as this may cause damage.

- 4 Use the cleaning brush to remove hairs from the cutters (Fig. 18).

- 5 Do not use a towel or cloth to dry shaving foil or cutters as this may cause damage. Allow to air dry thoroughly.

- 6 Reattach the shaving head by snapping it back onto the StyleShaver (Fig. 19). You will hear a 'click'.

Cleaning the trimming head

- 1 Always switch StyleShaver OFF and remove StyleShaver from the charging stand before cleaning (Fig. 9).

- 2 Pull the comb off the trimming head (Fig. 11).

- 3 Rinse the trimming head with warm running tap water (Fig. 20).

Cleaning the trimming head connector

Note: Make sure to clean the trimming head connector at least every 3 months.

- 1 Always switch StyleShaver OFF and remove StyleShaver from the charging stand before cleaning (Fig. 9).

- 2 Gently pull trimming head off the StyleShaver (Fig. 21).

- 3 Remove the hairs from the inside of the trimming head connector with the cleaning brush (Fig. 22).

- 4 Clean the inside of the trimming head with the cleaning brush (Fig. 23).

- 5 Place the trimming head back on the StyleShaver (Fig. 24).

Replacing the Shaving Foil Head

- ▶ If the shaving foil and cutters are worn or damaged, do not continue using the StyleShaver. Replace the shaving foil and cutters immediately.
- ▶ It is recommended that you replace your shaving foil and cutters once a year.
- ▶ A worn or damaged shaving foil or cutters should only be replaced with an original Philips Norelco shaving foil, model QS6100, which is available on the Philips Norelco website, www.philips.com/support or call 1-800-243-3050 for assistance.
- ▶ The foil is a precision part. Handle with care.

- 1 Always switch StyleShaver OFF and remove StyleShaver from the charging stand before replacing shaving foil.

- 2 Remove the shaving foil head by pulling it off the appliance.

- 3 Place the new shaving foil head on the StyleShaver by snapping it into place. You will hear a "click".

After replacing the shaving foil head, check that the shaving head is firmly attached before using StyleShaver.

This StyleShaver has no other user-serviceable parts. For assistance call 1-800-243-3050.

Travel Lock (QS6160 only)

You can lock the appliance when you are going to travel. The travel lock prevents the appliance from being switched on by accident.

Activating the travel lock

- 1 Press and hold the trimming on/off button or the shaving on/off button for at least 4 seconds.

- ▶ The travel lock indication flashes 3 times. The travel lock is only activated when the indication lights up continuously.

Deactivating the travel lock

- 1 Press and hold the trimming on/off button or the shaving on/off button for at least 4 seconds.

- ▶ The travel lock indication flashes 4 times. The travel lock is now deactivated and the StyleShaver switches on.

NOTE: The travel lock is deactivated automatically when you charge the appliance.

Storage

- ▶ Fold the charging stand for easy travelling or storage (Fig. 25).
- ▶ Put the protective cap on the shaving head (Fig. 26).
- ▶ Be sure StyleShaver is turned off. Remove power cord from outlet and charging stand before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap power cord around StyleShaver/charging stand when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store StyleShaver/charging stand where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Battery Removal

The StyleShaver battery may only be removed when the StyleShaver is to be discarded.

- ▶ This Philips Norelco StyleShaver contains a Lithium-Ion rechargeable battery which must be disposed of properly (Fig. 27).
- ▶ For assistance, call toll free: 1-800-243-3050 or visit our website, www.philips.com/support.

- 1 Be certain StyleShaver is OFF and removed from charging stand before dismantling. Allow the StyleShaver to run until the batteries are completely empty/depleted. Turn StyleShaver OFF.

- 2 Remove the shaving head and cutters from appliance.

- 3 Undo the four screws of the top cover with a screwdriver.

- 4 Remove the cover.

- 5 Insert a screwdriver under the back panel and remove panel.

- 6 Insert a screwdriver under the cover of the basic body and remove cover. You will see a printed circuit board.

- 7 Break the battery from the printed-circuit board. Be careful, the battery strips are very sharp.

- 8 Do not attempt to replace battery. Insulate battery ends by covering with tape and/or place battery in a small plastic bag.

- 9 Discard StyleShaver. Do not attempt to plug electrical cord into the outlet or recharge StyleShaver after the batteries have been removed.

- 10 Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbrc.com for drop-off locations.

Assistance

For assistance, visit our website:

www.philips.com/support or call 1-800-243-3050

Online information is available 24 hours a day, 7 days a week.

Accessories

- ▶ For maximum StyleShaver performance replace shaving foil head once a year.
- ▶ Replacement Shaving Foil Head may be purchased on our website www.philips.com/store

PHILIPS



Styleshaver



BC

QS6160

QS6140

Rechargeable

Cordless

Always here to help you
Register your product and get support at www.norelco.com/register

4222 002 8424 3

PHILIPS



45-DAY MONEY-

BACK GUARANTEE

If you are not fully satisfied with your Philips Norelco StyleShaver send the product back and we'll refund you the full purchase price.

The StyleShaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.

The StyleShaver must be postmarked no later than 45 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.

Delivery of refund check will occur 6–8 weeks AFTER receipt of returned product.

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips Norelco product, Model QS6160, QS6140 (except foil, cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904

 This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.

© 2014 Philips Electronics North America Corporation All Rights Reserved.