 
 
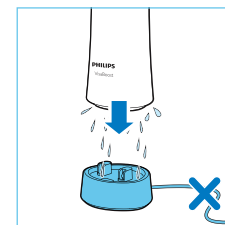 


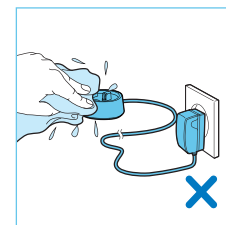

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

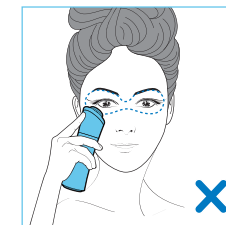

Specifications are subject to change without notice  
© 2015 Koninklijke Philips N.V.  
All rights reserved.

3140 035 40211



EN User manual

ZH-HK 使用手冊

**PHILIPS**





 
**EN** Apply preferred serum, cream or gel to your cleansed face, or moisten the probe with your skincare products before using.

**HK** 於已洗淨的面上塗上所需的乳膠、面霜或啫哩，或在使用前以您的護膚產品弄濕探頭。

### Quick Treatment / 快速導入


**EN** 3 min per day when time limited

**HK** 若時間有限，每天使用 3 分鐘

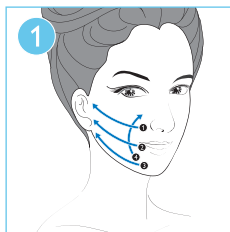

**EN** Start from the corner of your mouth and move toward your ear, and glide the probe from chin to the lower part of your cheekbone. Repeat each step 2-3 times with each motion lasting for 5 sec.

 **HK** 由嘴角開始，往耳朵方向移動，把探頭由下巴至頰骨下方滑動。重覆每個步驟 2-3 次，每個動作維持 5 秒。

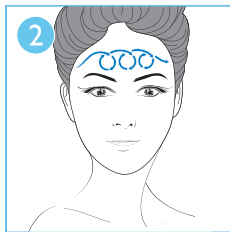


**EN** Make circular movements on your forehead from left temple to the right. Repeat it 2-3 times.

**HK** 由左方太陽穴至右方於前額打圈按摩。重覆 2-3 次。

### Emphasized Treatment / 重點導入

 
**EN** 7 min for the concerned areas

**HK** 重點部位使用 7 分鐘

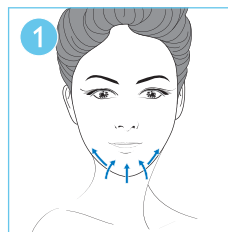


**EN** Glide the probe over your chin by following upward directions. Repeat steps 3 times. Each motion should last for 5 sec.

 **HK** 以向上的方向於下巴滑動探頭。重覆步驟 3 次。每個動作應維持 5 秒。

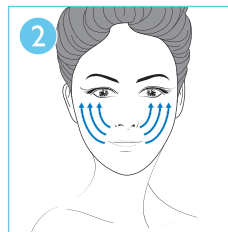


**EN** Move the probe with upward directions around your cheekbone. Repeat this step 2-3 times with each lasting for 5 sec.

 **HK** 以向上的方向於頰骨的四周移動探頭。重覆此步驟 2-3 次，每個動作維持 5 秒。

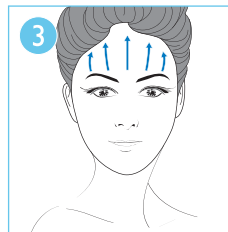

**EN** Put the probe above your brow, and then glide to your hairline. Repeat this step 2-3 times with each motion lasting for 5 sec.

 **HK** 把探頭移至眉上，並滑動至髮線。重覆此步驟 2-3 次，每個動作維持 5 秒。

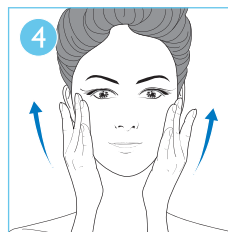

**EN** Massage your skin with palms when finished, preferably using an upward direction.

**HK** 完成後，以掌心按摩皮膚，最好向上按摩。

**ENGLISH 1**  
繁體中文 12

SC2800

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## Important

Read this user manual carefully before you use the appliance and keep it for future reference.

### Danger

- Keep the adapter dry. Never immerse the handle into water.
- Do not charge this appliance in wet surroundings (e.g. near a filled bath, a running shower or near a filled swimming pool).
- Never throw the appliance into fire.

### Warning

- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance must be disconnected from the supply mains when removing the battery.



- The battery must be removed from the appliance before it is scrapped.
- The battery is to be disposed of safely.
- Only use the appliance in combination with the adapter supplied.
- Do not use the appliance, the attachment or the adapter if it is damaged or broken to avoid injuries.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.
- Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- Fully charge the appliance at least every 3 months to sustain battery lifetime.
- This appliance is NOT a toy. Keep the appliance out of the reach of children younger than 8 years old.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not insert metal-containing material into the socket of the appliance plug to avoid short circuiting.
- Women who are pregnant or lactating are not recommended to use this appliance.

### Caution

- Do not use the appliance for any other purpose than described in this manual.
- Charge, use and store the appliance at a temperature between 5°C/40°F and 35°C/95°F.

### 3 ENGLISH

- Do not use the appliance if you are taking steroid based medication.
- Do not use this appliance if your skin is still recovering from a cosmetic procedure, such as a chemical or mechanical peeling, laser resurfacing, fractional laser treatment, or mesotherapy treatment or any other treatment with dermal fillers in the past two weeks.

#### **General**

- Regular cleaning of the appliance ensures optimal results and a longer life of the appliance.
- Do not use when sleeping or drowsy.

#### **Contraindications and other warnings**

- Do not apply this device directly to your ear as this may cause temporary hearing loss.
- Do not use this device if you have any ear problems (Swimmer's ear, ear infection, any anomaly).
- Do not use the appliance on chapped skin, open wounds, or if you suffer from skin diseases or skin irritations, such as severe acne, sunburn, skin infection, etc.
- Do not use this device if you have a pacemaker, implanted device, or have a metal prosthesis.
- Do not use the appliance on the sensitive skin area around the eyes, as it is thin and delicate.
- Do not use the appliance on any mucosal area (e.g. inside nose, mouth, genital area) as it may cause local irritation.

### Electromagnetic fields (EMF)

---

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### Environment

---

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



## Introduction

Do you often feel that skincare products can not penetrate well into the skin and stay on the surface? After using loads of creams, lotions, serums everyday, it still does not give you the ideal benefits as you want.

The new Philips VisaBoost Absorption Booster Device introduces a unique innovative ultrasound technology working together with vibrating massage which encourages better absorption of skincare products in the deep layer of the skin.

The technology has been especially designed to help skincare products be better absorbed into the deep layer of skin, where they can achieve maximum effect for the appearance of healthy, moist, dewy skin today and tomorrow.

 
The ultrasound waves instantly dissolve skincare products into micro-molecules which are more easily transported into your skin's epidermis. It can stimulate your skin's metabolism and encourages natural cell renewal process. Combined with vibration, it gently massages the skin and stimulates micro-circulation, which further boosts absorption of skincare products and delivers a healthy glow continuously.

The device is innovated to complement your current skincare routine. It is recommended to use after applying a serum, lotion or cream. Before application, please clean and gently dry your face until it is completely dry; during application, please apply your regular skincare products on the probe and also your face as step instruction, in order to better absorb skincare essence. Once you start to use the VisaBoost, you may notice an immediate improvement in your skin's appearance. After long-term usage, your skin becomes more healthy and radiant.

We hope you and your skin will enjoy using this VisaBoost Absorption Booster Device. For maximum results, we recommend to complement your regular facial treatment routine by using the VisaPure Cleansing device and VisaCare Firming device.

## General description

- ① Probe
- ② Power-on indicator (Blue)
- ③ Power on/off button
- ④ Charging indicator (Blue)
- ⑤ Charging stand
- ⑥ Appliance socket
- ⑦ Charging pins
- ⑧ Handle
- ⑨ Protective cap

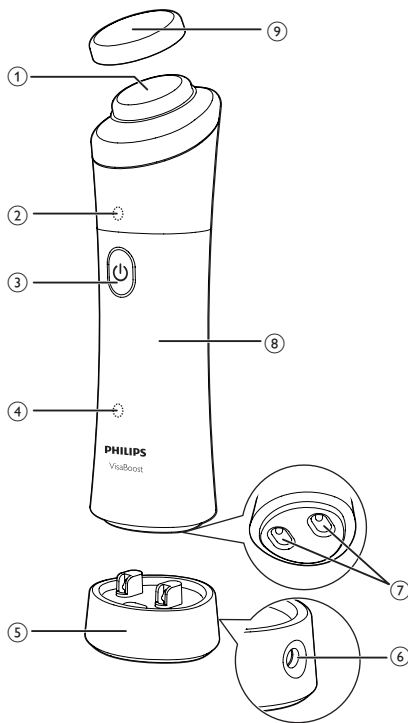



### Auto Shut-off

The appliance will automatically shut off after 10 minutes of continuous use.



## Preparing for use
  
### Charging the appliance

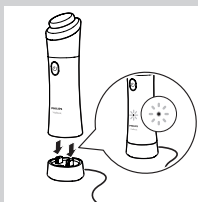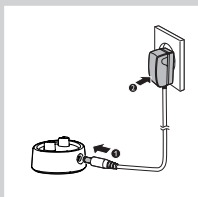

**Note:** Make sure the appliance is fully charged before you use it for the first time.


Charging the appliance takes approximately 2 hours. A fully charged appliance has a cordless operating time of up to 20 minutes.

- 1** Make sure the appliance is switched off.
- 2** Insert the small plug in the socket of the charging stand, and put the adapter in the socket.
- 3** Put the appliance in the charging stand.

► The charging indicator lights blue when charging. When the battery is fully charged, the indicator goes out.

**Note:** You can use the appliance before the battery is fully charged, but its performance and operating time will not be optimal in this case.

### Cleansing your face

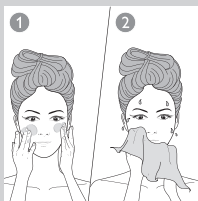 

- 1** Cleanse your face with a suitable facial cleanser. Make sure all dirt and makeup are removed.
- 2** Rinse your face and pat it dry gently with a clean towel.

## Using the appliance

We suggest to use this appliance three times per week for best results.

 
### Notes:

- Do not put the dry probe on your face when the appliance is on, as it may irritate your skin.
- Make sure to take off the protection cap before applying serum, gel or cream onto the probe.



- 1** Moisten the probe with one or two drops of your usual serum, cream or gel. Evenly distribute the drops with the help of your fingertips.


## 7 ENGLISH

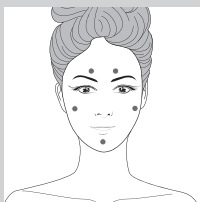


- 2** Apply a few drops of your serum, cream or gel around your face as shown, and gently tap it into your skin with the help of your fingertips.

### Tips:

 - For optimal results, do not use oil based skincare products.

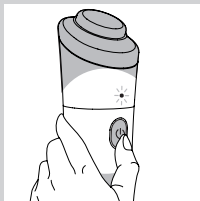


 - 3** Press the on/off button once to switch on the appliance.

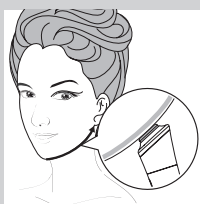

- 4** Put the probe on your face. Make sure it is fully contact ing your face. Gently move the appliance from your chin all the way up to your ears. This motion should take about 5 seconds. To emphasize the result, repeat this step 2-3 times on each side of your cheek. (Refer to “Quick Treatment” and “Emphasized Treatment” in inner leaflet)

 - **Tip:** To treat the areas where full skin contact is hard to achieve, such as the corner on either side of your nose, you can try different ways of holding the appliance for instance, vertical and horizontal ways, or with the help of the other hand to stretch and hold the skin to be treated. You can apply this method to your chin and forehead areas.

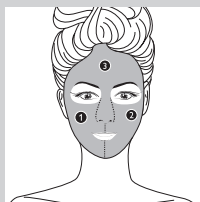


### Notes:

- Do not treat any zone longer than 3 minutes (Refer to the zone separation ① ② ③ as shown).
- It is normal for the probe to feel warmer during use due to continuous vibration.



- 5** To treat your forehead, make overlapping circular movements with either inwards or outwards directions.

 After use:

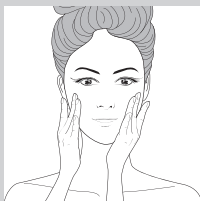


- 1** Press the on/off button to turn off the appliance. The appliance is equipped with an auto-shutoff function, it will be shut off automatically after ten minutes of continuous use.
- 2** Tap extra serum or gel on your face with your fingertips. Alternatively use your palms to gently lift both sides of your cheek two to three times.

## Cleaning and maintenance

 
Cleaning the appliance

Notes:

- Make sure the appliance is switched off before you start cleaning.
- Make sure the adapter is unplugged when you clean it. Only wipe the adapter with a dry cloth.
- Always detach the charging stand from the adapter before you clean it.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as alcohol or acetone to clean the appliance.
- Clean the appliance and the probe thoroughly after each use to ensure optimum performance.
- The probe and front end of the appliance is waterproof and can be rinsed under tap water, but never rinse the whole appliance under water.
- Make sure all parts are dry before you reconnect to the adapter.

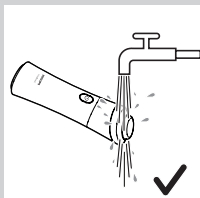

 - 1** Rinse only the probe under a lukewarm tap. You can also use a mild facial cleanser to clean the probe.

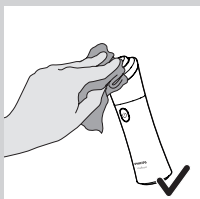

- 2** Wipe these parts with a clean and dry towel.
- Tip: For easy cleaning, you can also use a damp cloth to remove residue from the probe.*

---

**Storage**

---

- 1** Store the appliance with the protective cap in a dry and dust free place. You can also keep the packaging for future storage.
- 2** Ensure the protective cap is in place to protect the appliance from damage when storing or traveling.

---

**Discard the rechargeable battery**

 
 
 
---

**Warning:**


- Do not attempt to replace the rechargeable battery.
- Do not reconnect the appliance to the mains cord after you have removed the rechargeable battery.

Remove the rechargeable battery before discarding the appliance to help preserve the environment.

- 1** Remove the appliance from the charging stand, switch on the appliance and let it operate until it switches off automatically. Repeat this action until the rechargeable battery is empty.
- 2** Loosen and release the screw and detach the bottom part off the appliance.
- 3** Insert a small flathead screwdriver between the golden color ring and the appliance. Pry loose the top part off the appliance.

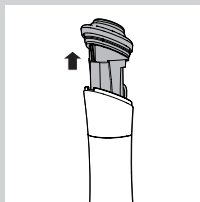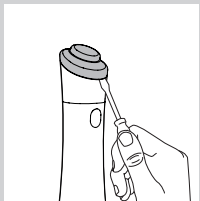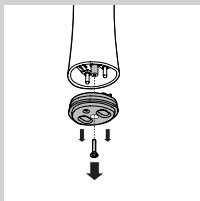

 - 4** Carefully pull the top part with the battery holder out of the housing.

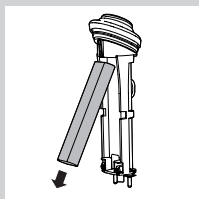

- 5 Remove the rechargeable battery from the battery holder, and dispose of it at an official collection point for batteries.

## Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at [www.philips.com/support](http://www.philips.com/support) or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Centre in your country.

### Problem

### Solution

I do not know if the appliance is suitable for use on my skin.

Do not use the appliance on dry, chapped skin, open wounds, or when you suffer from skin diseases or skin irritation, such as severe acne, sunburn, skin infection, etc. Do not use the appliance if you are taking steroid-based medication.

The appliance does not charge.

Make sure the socket to which you connect the appliance is live. Check whether the voltage indicated on the appliance corresponds to the local mains voltage. Check whether contact pins on the appliance are in proper contact with the contact points in the stand.

When the indicator on the appliance still does not light up or when the appliance still does not charge, take it to your Philips dealer or the nearest Philips Service Centre.

## 11 ENGLISH

Problem	Solution
The appliance does not work anymore.	Make sure that you have pressed the on/off button properly. Charge the appliance according to the instructions in this user manual. Verify whether there is a power failure and if the wall socket is live. Check if the charging light on the appliance lights up to make sure the appliance is charging. If it does not light up or if the appliance still does not work, take it to your Philips dealer or the nearest Philips Service Centre.

## Specifications

### Adapter

Model name: HNA120050B

Input: AC 100-240V~ 50/60Hz 0.2AMAX

Output: 12.0V  $\equiv$  0.5A

感謝您購買 Philips 產品，歡迎來到 Philips 世界！要享受 Philips 為您提供的全面支援，請在 [www.philips.com/welcome](http://www.philips.com/welcome) 網站註冊您的產品。

## 重要資訊

使用本產品前請先閱讀本用戶手冊，並保管以作將來參考。

### 危險事項

- 保持適配器乾爽。不要把手柄浸入水中。
- 不要於潮濕的環境充電（例如有水的浴缸、已開啓的花灑旁或已注水的泳池）。
- 不要把產品投入火中。

### 警告

- 請勿在浴缸、花灑、水盆或其他載有水的容器附近使用本產品。
- 此產品可供八歲及以上兒童，體能、感官或心智能力低下人仕，或缺乏知識及經驗人仕使用，如該等人仕已就使用本產品給予監督或有關安全使用本產品的指導及明白本產品的使用所涉及的危險。請勿讓孩童將本產品當成玩具。兒童不應於沒有監督情況下對產品進行清潔及維護。
- 移除電池時請將產品斷電。
- 如電池報廢，請移除電池。
- 請正確棄置電池。
- 只可使用隨產品提供的適配器。
- 若產品已損壞，請不要使用產品、附件或適配器，以免受傷。
- 若適配器已損壞，請更換一個新的原裝適配器，以免發生危險。



### 13 繁体中文

- 不要拔出適配器並移至另一個插頭，這樣會發生危險。
- 每 3 個月為產品完全充電一次，以保持電池壽命。
- 本產品並非玩具。請勿讓 8 歲以下的兒童接觸產品。
- 兒童應受監督以確保他們不會以本產品玩耍。
- 不要將含金屬的物料插入到產品的插孔，以免發生短路。
- 不建議懷孕或泌乳期間的婦女使用。

### 注意

- 請勿將本產品用於用戶手冊描述以外的目的。
- 請於 5° C/40° F 及 35° C/95° F 的溫度之間充電、使用及儲存本產品。
- 若您正在服用類固醇藥物，請不要使用產品。
- 若您的皮膚正於整容期的復原期間，請不要使用產品。例如在過去兩週曾進行化學或機械脫皮、激光重塑、部份激光療程或美塑療程或含真皮填充物的任何其他療程。

### 常規

- 定期清潔產品可確保獲得理想的效果以及保持產品壽命。
- 不要於睡覺或睏倦時使用。

### 禁忌及其他警告

- 不要直接把產品用於耳朵上，因為可能會導致短暫聽力損失。



- 若您有任何耳朵問題（例如游泳耳炎、耳朵感染、任何異常），請不要使用本產品。
- 請不要於破裂的皮膚、傷口使用本產品，或若您患有皮膚病或皮膚敏感，例如嚴重暗瘡、曬傷、皮膚感染等，請不要使用本產品。
- 若您使用心臟起搏器、植入裝置或裝有金屬義肢，請不要使用本產品。
- 請不要於眼睛四週敏感的皮膚表面使用本產品，因為該處的皮膚十分薄和細緻。
- 請不要於任何黏膜部位使用本產品（例如鼻內、口腔內、生殖器範圍），因為可能會導致發炎。

#### 電磁場 (EMF)

---

這款 Philips 產品符合一切有關電磁場暴露的適用安全標準及條例。

#### 環境

---

請勿在本產品使用壽命結束後當作一般家庭垃圾廢棄，應交給官方回收站作循環再用。這樣做有助保護環境。



## 簡介

您是否常常覺得護膚產品未能滲入皮膚，只停留在表面？每天使用大量乳霜、護膚霜、乳膠，仍然未能為您提供所需的理想效果。

全新 Philips VisaBoost 超音波美膚滋養儀引入獨特的創新超聲波科技，與微震按摩同時作用，提高肌膚對護膚產品的吸收能力。

獨特的超音波科技，幫助肌膚更好的吸收護膚產品的營養成份，讓您的肌膚時刻展現健康水潤光彩。

 
超聲波可即時溶解護膚產品為微粒子，更容易傳達至皮膚的表皮。產品可加速皮膚的新陳代謝系統，促進天然的細胞更新過程。融合震動技術，溫和地按摩皮膚，刺激微循環，進一步提升皮膚對護膚產品的吸收，持續散發健康光采。

超音波美膚滋養儀專門為輔助您的日常護膚習慣而研制。建議於塗上乳膠、乳霜或護膚霜後使用。應用前，請先清潔面部并溫和地把面部擦乾，直至完全乾燥。應用期間，請按指示塗上您的日常護膚產品於探頭及面部，以提高護膚品精華的吸收能力。開始使用 VisaBoost 後，您可能發現皮膚的外表有即時的改善。長期使用後，您的皮膚將變得更健康及更具光澤。

我們希望您和您的肌膚適合使用此 VisaBoost 美膚滋養儀。為提升效果，我們建議使用 VisaPure 淨顏煥采潔膚儀及 VisaCare 微晶緊致嫩膚儀配合您的日常面部療程。

## 一般說明

- ① 探頭
- ② 電源顯示燈（藍）
- ③ 電源開 / 關按鈕
- ④ 充電顯示燈（藍）
- ⑤ 充電座
- ⑥ 產品插頭
- ⑦ 充電插頭
- ⑧ 把手
- ⑨ 保護蓋

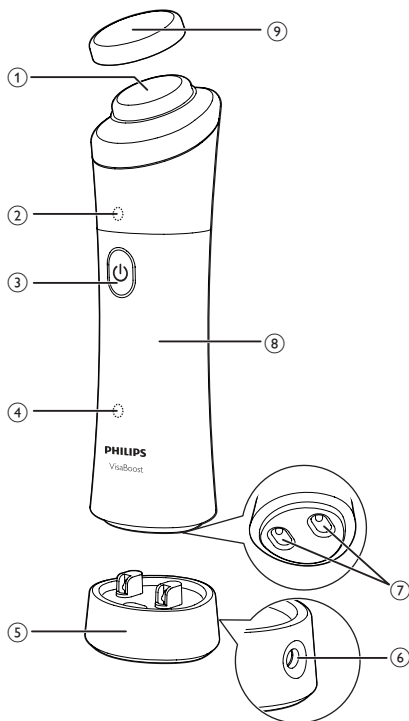


### 自動關閉

於連續使用 10 分鐘後，產品將自動關閉。


## 準備使用
 
### 為裝置充電

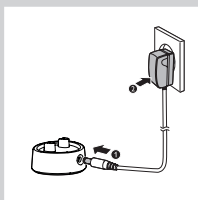

注意：首次使用前，請確保產品已充滿電。  
充電需時約 2 小時。充滿電的產品可無線使用最多 20 分鐘。

 - 1 確保產品已關閉。
- 2 於充電座插頭插入小型插頭，把適配器插入插頭。

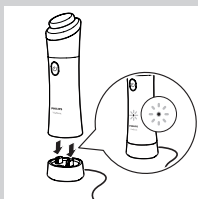


- 3 把產品放於充電座上。

▶ 充電時，充電指示燈將著起藍燈。當電池充滿電時，指示燈將熄滅。

注意：裝置即使未充滿電也可運作，但性能和使用時間將不會發揮到最佳效果。

### 洗面

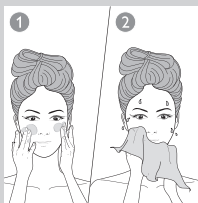 

- 1 以適合的潔面產品洗面。確保移除所有污垢及化妝。
- 2 以清水沖洗，並以潔淨的毛巾抹乾。

## 使用產品

 
建議每週使用本產品三次以達到最佳效果。

注意：

- 當產品開啟時，不要把乾燥的探頭直接放於面部，因為可能會令皮膚敏感。
- 確保於探頭塗上乳膠、啫喱或乳霜前移除保護蓋。




- 1 把一至兩滴您常用的乳膠、乳霜或啫喱塗於探頭上。以指尖均勻地塗抹護膚品於產品上。

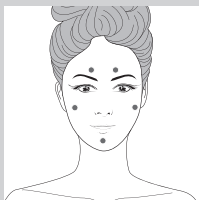


- 2** 把乳膠、乳霜或啫哩塗於面上（如圖所示），並使用指尖溫和地拍於皮膚上。

提示：

 - 為達到最佳效果，不要使用油性的護膚產品。

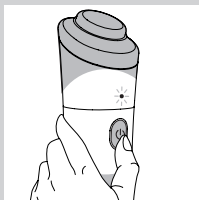


- 3** 按開啟/關閉按鈕開啟本產品。

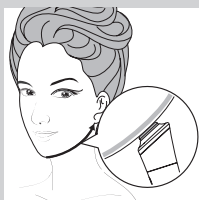 

- 4** 把探頭放在面上。確保緊貼在您的面部。由下巴開始，輕輕把產品向上移至耳朵。此動作應需時約 5 秒。為加強效果，於每邊頰骨重覆本步驟 2-3 次。（請參閱內頁的「快速導入」及「重點導入」）
- 提示：如要為難以全面接觸的部位進行導入，例如兩邊鼻翼的角位，您可嘗試以不同方法緊握產品，例如，打直或橫向握住產品，或以另一隻手拉起進行導入的皮膚。您可於下巴及前額應用這方法。

注意：

 
- 不要接觸任何部位超過 3 分鐘（請參閱圖示的部位分隔 ① ② ③）。
- 於使用期間，由於持續震動，探頭變得較熱是正常現象。

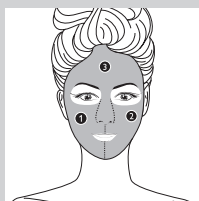

- 5** 前額方面，向內或向外重疊打圈按摩。



 使用之後：

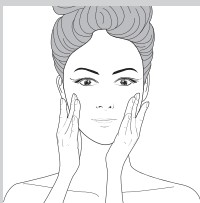


- 1 按下開/關按鈕以關閉產品。產品已配備自動關閉功能，可於持續使用+分鐘後自動關閉。
- 2 以指尖輕拍乳膠或啫喱於面上。此外，可使用掌心溫和地提起兩頰兩至三次。

## 清潔與保養

 
清洗產品

注意：

- 開始清洗前，確保產品已關閉。
- 清洗前，確保已移除適配器。只可以乾布擦拭適配器。
- 清洗前，必須拆開適配器的充電座。
- 切勿使用百潔布、磨蝕性清潔劑或腐蝕性液體（例如酒精或丙酮）清潔產品。
- 每次使用後，徹底清潔產品及探頭，以確保有最佳的效能。
- 探頭及產品前端為防水，可以清水沖洗，但不要把整個產品浸入水中。
- 在重新連接至適配器前，確保所有零件已風乾。

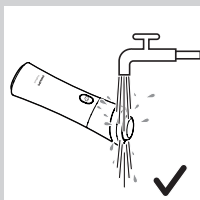

- 1 只可以微溫的水清洗探頭。您亦可使用溫和的潔面乳清潔探頭。

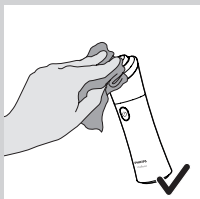 

- 2 以潔淨及乾的抹布擦拭這些部份。
- 提示：為了方便清洗起見，您亦可使用濕布以抹去探頭表面的殘餘物質。

## 存放

- 1 將保護蓋蓋好，然後儲存產品於乾燥及無塵的地方。您亦可保存包裝以作將來儲存。
- 2 確保保護蓋已放於適當地方，以保護產品，以免於儲存或旅遊時被損毀。

 
 
 
 
## 丟棄充電電池

警告：

- 不要試圖更換充電電池。
- 移除充電電池後，不要把產品重新連接至電源線。

先移除充電電池，才丟棄產品以協助保護環境。

- 1 由充電座移除產品，開啟產品，讓產品工作至自動關閉。重覆此動作直至充電電池的電力用完。
- 2 鬆開及放開螺絲，並移除產品的底部。
- 3 於金色外環與產品之間插入小型平頭螺絲批。撬起產品的上方。

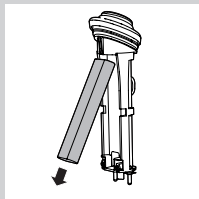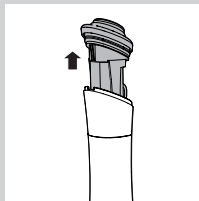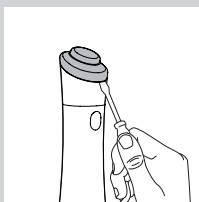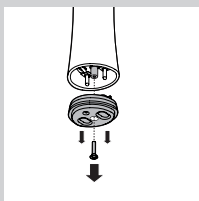

- 4 小心拉開上方，把電池座移除外殼。
- 5 從電池座移除充電電池，並丟棄於正式收集電池的地點。

## 保障及服務

如果您需要服務或資訊，又或遇到問題，請瀏覽 Philips 網站：[www.philips.com/support](http://www.philips.com/support)，或聯絡您所在國家/地區的 Philips 客戶服務中心。您可在全球保障單張內找到相關電話號碼。如果您的國家沒有顧客服務中心，請前往當地的 Philips 經銷商。

## 疑難排解

本章節總結一些您在本產品上最常見的問題。若您未能使用下列資訊解決問題，請瀏覽

[www.philips.com/support](http://www.philips.com/support)，查看常見問題清單或與您的國家/地區的客戶服務中心聯絡。

### 問題

### 解決方案

不知道產品是否適合我的皮膚使用。

不要使用產品於乾燥、破裂的皮膚、傷口上，或若您患有皮膚病或皮膚敏感，例如嚴重暗瘡、曬傷、皮膚感染等，請不要使用本產品。若您正在服用類固醇藥物，請不要使用產品。

本產品無法正常充電。

請確保連接產品的插頭可正常操作。檢查產品上顯示的電壓與本地電源電壓是否配合。檢查產品上的接觸針與充電座的接觸針有否適當地連接。

若產品上的指示燈仍未亮起，或產品仍未能充電，請把產品帶至 Philips 銷售商或最近的 Philips 客戶服務中心。

本產品無法操作。

確保您已適當地按下開 / 關按鈕。按照本使用手冊的指示為產品充電。檢查是否電力故障或電源插座能否操作。檢查產品的充電燈有沒有亮起，以確保產品正在充電。若充電燈沒有亮起或若產品未能操作，請把產品帶至 Philips 銷售商或最近的 Philips 客戶服務中心。

## 規格

### 適配器

型號：HNA120050B

輸入：AC 100-240V~ 50/60Hz 0.2AMAX

輸出：12.0V  $\equiv$  0.5A



