


Register your product and get support at
www.philips.com/welcome
 PQ219, PQ216, PQ211, PQ210

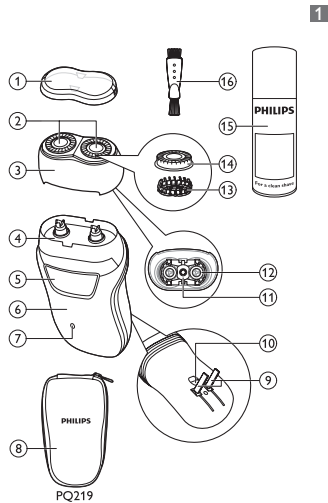


PHILIPS



www.philips.com

100% recycled paper
 100% papier recyclé
 100% 循环再造纸

4222.002.5448.2

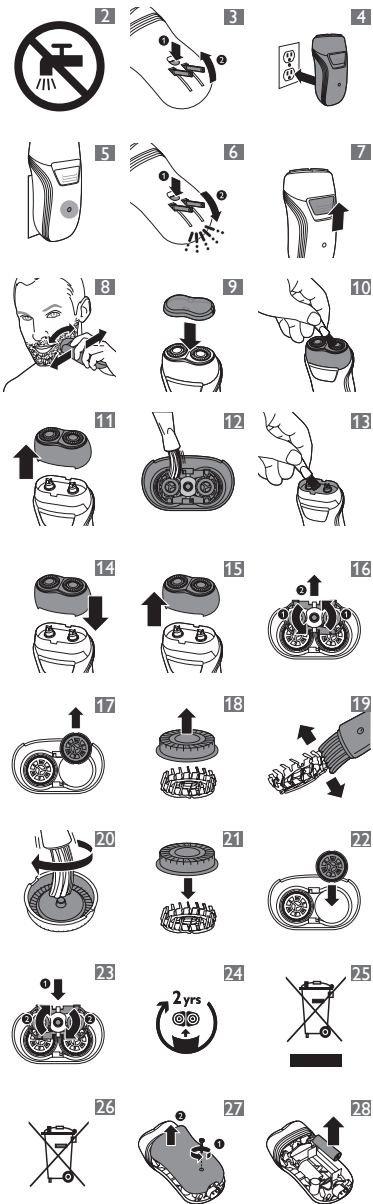

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Protection cap (PQ216, PQ211, PQ210 only)
- 2 Shaving heads
- 3 Shaving unit
- 4 Hair chamber
- 5 On/off slide
- 6 Front panel
- 7 Charging light
- 8 Pouch (PQ219 only)
- 9 Foldable plug
- 10 Release button of foldable plug
- 11 Retaining frame
- 12 Central spring of retaining frame
- 13 Cutter
- 14 Guard
- 15 Philips Cleaning Spray (Optional)
- 16 Cleaning brush

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the appliance dry.
- This symbol means: Forbidden to clean with water (Fig. 2).

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- Use and store the appliance at a temperature between 5°C and 35°C.
- Only use the cleaning brush supplied.
- Make sure the cleaning brush remains clean.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields. If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Charging

Charge the appliance when the motor stops or starts running slower. When you charge the shaver for the first time or after a long period of disuse, let it charge continuously for 12 hours. Charging normally takes approx. 8 hours.

Do not leave the appliance connected to the mains for more than 24 hours.

- 1 Switch off the shaver before you start charging it.
- 2 Press the release (1) button and fold out the foldable plug (2) ('click') (Fig. 3).
- 3 Insert the foldable plug unit into the wall socket (Fig. 4).
- ▶ The charging light goes on to indicate that the appliance is charging (Fig. 5).
- 4 Remove the shaver from the wall socket when the battery is fully charged.
- 5 Press the release button (1) and fold the foldable plug back into the appliance (2) ('click') (Fig. 6).

Note: The light on the shaver does not change colour and does not go out when the shaver is fully charged.

Cordless shaving time

A fully charged shaver has a cordless shaving time of approximately 30 minutes.

Using the appliance

The shaver cannot be used directly from the mains.

- 1 Remove the protection cap.
- 2 Push the on/off slide upwards to switch on the shaver (Fig. 7).
- 3 Move the shaving heads over your skin. Make both straight and circular movements (Fig. 8).

Note: Shave on a dry face only. Do not use the shaver in combination with gel, foam or water.

Note: Your skin may need 2 or 3 weeks to get accustomed to the Philips shaving system.

- 4 Push the on/off slide downwards to switch off the shaver.
 - 5 Clean the shaver after every shave, see chapter 'Cleaning and maintenance'.
 - 6 Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads (PQ216, PQ211, PQ210 only) (Fig. 9).
- PQ219: Put the shaver back into the pouch to prevent damage.

Cleaning and maintenance

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Clean the shaver after every shave to guarantee better shaving performance. For the best cleaning result, we advise you to use Philips Cleaning Spray. Ask your Philips dealer for information.

After every shave: shaving unit and hair chamber

- 1 Switch off the shaver.
- 2 Clean the top of the appliance with the cleaning brush supplied (Fig. 10).
- 3 Pull the shaving unit straight up off the shaver (Fig. 11).
- 4 Clean the inside of the shaving unit with the cleaning brush (Fig. 12).
- 5 Clean the hair chamber with the cleaning brush (Fig. 13).
- 6 Put the shaving unit back onto the shaver (Fig. 14).

Every two months: shaving heads

Note: Do not use cleaning agents or alcohol to clean the shaving heads. Only use Philips Cleaning Spray.

- 1 Switch off the shaver.
- 2 Pull the shaving unit straight up off the shaver (Fig. 15).
- 3 To remove the retaining frame, turn the central spring clockwise (1). Then lift the retaining frame out of the shaving unit (2) (Fig. 16).

- Lift the shaving heads out of the shaving unit. Remove and clean one shaving head at a time. Each shaving head consists of a cutter and a guard (Fig. 17).

Note: Do not clean more than one cutter and guard at a time, since they are matching sets. If you accidentally mix up the cutters and guards, it may take several weeks before optimal shaving performance is restored.

- Remove the guard from the cutter (Fig. 18).
- Clean the cutter with the short-bristled side of the cleaning brush. Brush carefully in the direction of the arrows (Fig. 19).
- Clean the guard with the long-bristled side of the cleaning brush (Fig. 20).
- Put the cutter back into the guard after cleaning (Fig. 21).
- Put the shaving heads back into the shaving unit (Fig. 22).
- Put the retaining frame back into the shaving unit (1), and turn the central spring anti clockwise (2) (Fig. 23).
- Put the shaving unit back onto the shaver (Fig. 14).

Storage

Keep the appliance dry. Use and store the appliance at a temperature between 5°C and 35°C.

- Switch off the shaver.
- Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads (PQ216, PQ211, PQ210 only) (Fig. 9).

PQ219: Put the shaver back into the pouch to prevent damage.

Replacement

Replace the shaving heads every two years for optimal shaving results. Replace damaged or worn shaving heads with Philips shaving heads only (HQ4 for China or HQ56 for the rest of the world). For instructions on how to remove the shaving heads, see chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'.

Accessories

To retain top performance of your shaver, make sure you clean it regularly and replace its shaving heads at the recommended time.

Shaving heads

- We advise you to replace your shaving heads every two years. Always replace them with Philips shaving heads only (HQ4 for China or HQ56 for the rest of the world) (Fig. 24).

Cleaning

- Use Philips Cleaning Spray to clean the shaving heads thoroughly.

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 25).
- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way (Fig. 26).

Removing the rechargeable battery

Only remove the rechargeable battery when it is completely empty.

- Make sure the appliance is disconnected from the mains.
- Let the shaver run until it stops, undo the screw on the back of the shaver (1) and lift the back panel off the shaver (2) (Fig. 27).
- Remove the rechargeable battery (Fig. 28).

Do not connect the shaver to the mains again after you have removed the battery.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to do.	The shaving heads are dirty. You have not cleaned the shaver well enough or you have not cleaned it for a long time.	Clean the shaver thoroughly before you continue shaving. See chapter 'Cleaning and maintenance'.
	Long hairs obstruct the shaving heads.	Clean the cutters and guards with the cleaning brush supplied. See chapter 'Cleaning and maintenance', section 'Every two months: shaving heads'.
	The shaving heads are damaged or worn.	Replace the shaving heads. See chapter 'Replacement'.

Problem	Possible cause	Solution
The shaver does not work when I push the on/off slide upwards.	The battery is empty.	Recharge the battery. See chapter 'Charging'.
My skin is irritated after shaving.	Your skin needs time to get used to the Philips shaving system.	Skin irritation during the first 2-3 weeks of use is possible. After this period, the skin irritation usually disappears.
The rotation speed of the shaving heads is lower than usual.	Too much dirt has collected in the shaving heads.	Clean the shaving heads. See chapter 'Cleaning and maintenance'.
	The battery is empty.	Recharge the battery. See chapter 'Charging'.
The appliance makes a strange noise.	Too much dirt has collected in the shaving heads.	Clean the shaving heads. After cleaning, lubricate the central point on the inside of the guards with Philips Cleaning Spray. See chapter 'Cleaning and maintenance'.
	The shaving heads are damaged or worn.	Replace the shaving heads. See chapter 'Replacement'.

简体中文

简介

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。

基本说明 (图 1)

- 保护盖（仅限于 PQ216, PQ211, PQ210）
- 剃须刀头
- 剃毛刀头部件
- 毛发储藏室
- 开/关按钮
- 前面板
- 充电指示灯
- 收纳袋（仅限于 PQ219）
- 折叠式插头
- 折叠式插头的释放钮
- 固定架
- 固定架的中央弹簧
- 刀片
- 网罩
- 飞利浦清洁喷雾剂（可选）
- 清洁刷

注意事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

危险

- 保持器具干燥。
- 禁止水洗。警告符号注释：禁止用在打开的水龙头下进行清洗。（图2）

警告

- 肢体不健全、精神有障碍及缺乏相关经验和知识的人（包括儿童）必须在监护人的监督及指导下使用。
- 请照顾好儿童，本产品不能用于玩耍。

注意

- 必须在 5°C 至 35°C 之间的温度下使用和存放本产品。
- 仅限使用随附的清洁刷。
- 确保清洁刷保持洁净。

电磁场 (EMF)

本飞利浦产品符合电磁场所有相关标准。就目前的科学研究证明，如果正确使用并按照本用户手册中的说明进行操作，本产品是安全的。

■ 充电

当马达停转或转速开始下降时，为产品充电。

如果是第一次充电，或长时间未使用之后的第一次充电，应将其连续充 12 小时。充电通常需约 8 小时。

不要将本产品与电源接通超过 24 小时。

- 1 开始充电前，请关闭剃须刀。
- 2 按下释放按钮 (1)，并展开折叠式插头 (2) (可听到“咔哒”一声)。(图 3)
- 3 将折叠式插头插入电源插座。(图 4)
- 4 充电指示灯亮起，表示剃须刀正在充电。(图 5)

- 5 按下释放按钮 (1) 并将折叠式插头重新折叠到产品内部 (2) (可听到“咔哒”一声)。(图 6)

注意：剃须刀充满电后，其上面的指示灯不会改变颜色及熄灭。

不接电源的剃须时间

完全充电的剃须刀在不连接电源的情况下最长可使用达 30 分钟。

■ 使用本产品

剃须刀不能连在电源上直接使用。

- 1 取下保护盖。
- 2 向上推动开/关滑钮以接通剃须刀电源。(图 7)
- 3 将剃须刀头在皮肤上移动。作直线和迂回动作。(图 8)

注意：仅限在干爽的面部剃须。请勿将本剃须刀与凝胶、剃须泡沫或水结合使用。

注意：您的皮肤可能需要 2 到 3 周才能适应飞利浦剃须系统。

- 4 向下推动开/关滑钮以关闭剃须刀电源。
- 5 每次剃须后均应清洁剃须刀 (请参阅“清洁和保养”一章)。
- 6 使用后请盖上剃须刀保护盖，以防止损坏剃须刀头并避免其内积聚灰尘。(仅限于 PQ216, PQ211, PQ210) (图 9)

PQ219: 请将剃须刀放回收纳袋以防损坏。

■ 清洁和保养

不要使用钢丝球、研磨性清洁剂或腐蚀性液体 (例如汽油或丙酮) 来清洁产品。

每次剃须后均应清洁剃须刀，以保证更好的剃须效果。为了获得最佳的清洁效果，建议您使用飞利浦清洁喷雾剂。有关详情，请咨询飞利浦经销商。

每次剃须后：清洗剃须刀头部件和胡茬储藏室

- 1 关闭剃须刀。
- 2 用随附的清洁刷清洁产品顶部。(图 10)
- 3 垂直向上拉动剃须刀头部件，将其从剃须刀中拉出。(图 11)
- 4 用清洁刷清洁剃须刀头部件的内侧。(图 12)
- 5 用清洁刷清洁胡茬储藏室。(图 13)

- 6 将剃须刀头组件重新安装到剃须刀上。(图 14)

每两个月：清洁剃须刀头

注意：请勿使用清洁剂或酒精来清洁剃须刀头。只能使用飞利浦清洁喷雾剂。

- 1 关闭剃须刀。
- 2 垂直向上拉动剃须刀头部件，将其从剃须刀中拉出。(图 15)
- 3 要取下固定架，以顺时针方向旋转中央弹簧 (1)。然后将固定架从剃须刀头部件中提起并取出 (2)。(图 16)
- 4 将剃须刀头从剃须刀头部件中提起并取出。一次取下并清洁一个剃须刀头。每个剃须刀头包含一组刀片和网罩。(图 17)

注意：不要同时清洁多组刀片和网罩，因为它们都是相互匹配的。如果不小心将刀片和网罩弄混，则需要数周时间才能恢复产品的最佳剃须性能。

- 5 从刀片上卸下网罩。(图 18)
- 6 用清洁刷的短毛一侧清洁刀片。按箭头方向小心地清洁。(图 19)
- 7 用清洁刷的长毛一侧清洁网罩。(图 20)

- 8 清洁后，将刀片重新装回至网罩。(图 21)

- 9 将剃须刀头重新放入剃须刀头部件。(图 22)

- 10 将固定架放回剃须刀头部件内 (1)，并沿逆时针方向转动中央弹簧 (2)。(图 23)

- 11 将剃须刀头组件重新安装到剃须刀上。(图 14)

■ 存储

保持器具干燥。必须在 5° C 至 35° C 之间的温度下使用和存放本产品。

- 1 关闭剃须刀。
- 2 使用后请盖上剃须刀保护盖，以防止损坏剃须刀头并避免其内积聚灰尘。(仅限于 PQ216, PQ211, PQ210) (图 9)

PQ219: 请将剃须刀放回防护旅行包以防损坏。

■ 更换

每两年更换一次刀头以获得最佳的剃须效果。

只能使用飞利浦剃须刀头 (适用于中国的 HQ4 或适用于世界各地的 HQ56) 更换损坏或磨损的剃须刀头。有关如何拆卸剃须刀头的说明，请参阅“清洁和保养”一章中的“每两个月：清洁剃须刀头”部分。

■ 附件

为了保持剃须刀的最佳性能，请确保定期清洁并在推荐的时间更换剃须刀头。

剃须刀头

- 建议您每两年更换一次剃须刀头。务必仅使用飞利浦剃须刀头 (适用于中国的 HQ4 或适用于世界各地的 HQ56) 进行更换。(图 24)

清洁

- 使用飞利浦清洁喷雾剂彻底清洁剃须刀头。

■ 环保

- 弃置产品时，请不要将其与一般生活垃圾堆放在一起；应将其交给官方指定的回收点。这样做有利于环保。(图 25)
- 内置充电电池含有可能会污染环境的物质。丢弃产品时，一定要将电池取出，并将产品送到官方指定的回收站。到官方指定的电池回收站处理电

池。如果您在取出电池时遇到问题，您也可以将产品送至飞利浦维修中心。维修中心的员工会帮您取出电池，并以环保的方式处理它。(图 26)

卸下充电电池

仅在电池电量完全耗尽后方可取出充电电池。

- 1 确保已断开产品的电源连接。
- 2 让剃须刀一直运行直到停止，拧开剃须刀背面的螺丝钉 (1) 并将后面板从剃须刀上卸除 (2)。(图 27)
- 3 卸下充电电池。(图 28)

取出电池之后，不要再将剃须刀与电源连接在一起。

■ 保修和支持

如果您需要信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

保修条款

由于剃须刀头 (刀片和网罩) 属于易磨损物品，因此不在国际保修条款的涵盖范围之列。

■ 故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
----	-------	------

剃须刀的剃须效果没有以前好。	剃须刀头变脏。您没有将剃须刀清洁干净，或长时间未清洁过剃须刀。	在继续剃须之前，请先彻底清洗剃须刀。见“清洁和保养”一章。
----------------	---------------------------------	-------------------------------

过长的胡须堵塞了剃须刀头。	用随附的清洁刷清洁刀片和网罩。见“清洁和保养”中“每两个月：剃须刀头”部分。
---------------	--

剃须刀头已损坏或磨损。	更换剃须刀头。见“更换”一章。
-------------	-----------------

问题	可能的原因	解决方法
----	-------	------

向上推动开/关滑钮时剃须刀不工作。	电池已耗尽。	给电池充电。见“充电”一章。
-------------------	--------	----------------

我在剃须后出现皮肤过敏。	您的皮肤需要一定的时间来适应飞利浦剃须刀。	在前 2-3 周的使用过程中，可能会出现皮肤过敏。在此之后，皮肤过敏通常会消失。
--------------	-----------------------	--

剃须刀头的转速比平时慢。	剃须刀头中积聚了太多的灰尘。	清洁剃须刀头。请参阅“清洁和保养”一章。
--------------	----------------	----------------------

电池已耗尽	给电池充电。见“充电”一章。
-------	----------------

产品发出奇怪的噪音。	剃须刀头中积聚了太多的灰尘。	清洁剃须刀头。清洁后，用飞利浦清洁喷雾剂润滑网罩内侧的中央点。请参阅“清洁和保养”一章。
------------	----------------	--

剃须刀头已损坏或磨损。	更换剃须刀头。见“更换”一章。
-------------	-----------------

PHILIPS

产品类型	: 飞利浦电动剃须刀
型号	: PQ219, PQ216, PQ211, PQ210
额定电压	: 220V~
额定频率	: 50Hz
额定输入功率	: 1 W
生产日期	: 请见产品本体
产地	: 中国广东珠海

珠海经济特区飞利浦家庭电器有限公司
中国珠海市三灶镇琴石工业区
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008 制造

请妥善保管本使用说明书
发行日期: 11/09/2013