


**PHILIPS**

SP9880



 [www.philips.com/support/ifu-lux](http://www.philips.com/support/ifu-lux)



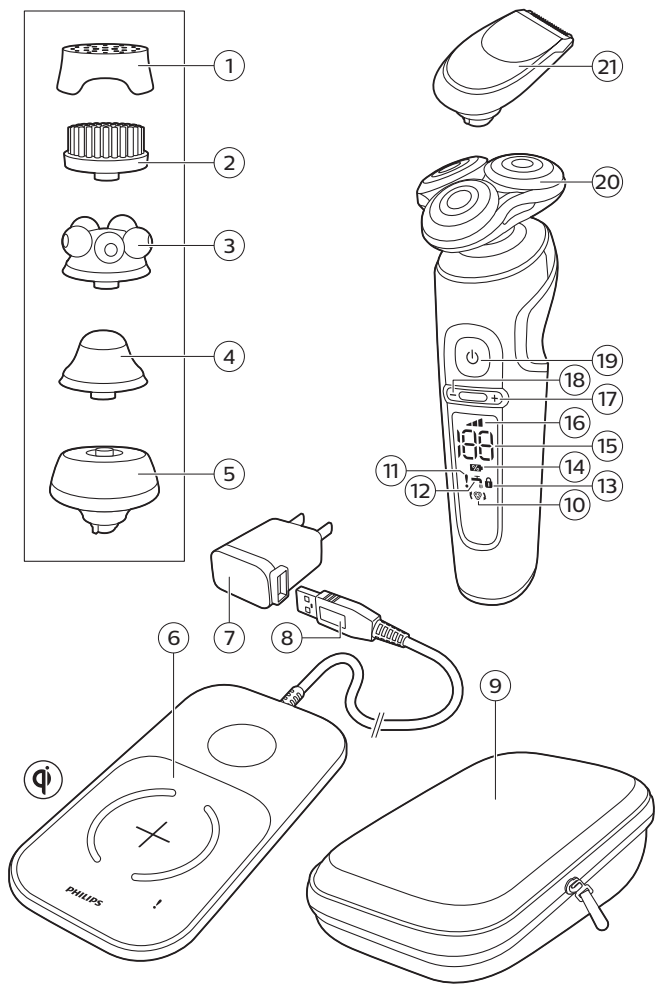



**English 6**

简体中文 **40**

## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **[www.philips.com/welcome](http://www.philips.com/welcome)**.

Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

## General description (Fig. 1)

- 1 Protection cap for click-on cleansing brush
- 2 Cleansing brush attachment
- 3 Massage attachment
- 4 Fresh eyes attachment
- 5 Attachment holder
- 6 Qi charging pad
- 7 Supply unit
- 8 USB plug
- 9 Pouch
- 10 Replacement reminder
- 11 Notification symbol
- 12 Cleaning reminder
- 13 Travel lock symbol
- 14 Battery charge indicator
- 15 Battery charge percentage
- 16 Personal comfort settings bar
- 17 Personal comfort settings decrease button
- 18 Personal comfort settings increase button
- 19 On/off button
- 20 Shaving unit with hair chamber
- 21 Click-on precision trimmer attachment
- 22 Click-on nose trimmer

## Important safety information

Read this important information carefully before you use the appliance and its accessories and save

it for future reference. The accessories supplied may vary for different products.

### Danger



- Keep the supply unit dry.

### Warning



- The appliance is a Class III construction.
- To charge the battery, only use the detachable supply unit and charging pad (supply unit, type HQ87. Charging pad, type HQ8509 or HQ8510) provided with the appliance.
- Do not use an USB extension cord.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance and its attachments before you use it. Do not use the appliance or its attachments if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.



- The charging pad is not intended for use in a car. It may interfere with the automotive electronic systems.
- Do not use the click-on fresh eyes attachment if you have glaucoma, an eye injury, or have had eye surgery within the last 12 months.
- Do not use the click-on fresh eyes attachment if you have an allergy to aluminum.

### **Caution**

- Never immerse the charging pad in water, nor rinse it under the tap.
- Always make sure the charging pad is completely dry before you connect it to the wall socket.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- For safety reasons, do not use the shaver while you drive a car.

- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not put the appliance or any part in the dishwasher.
- Water may trickle out of the shaver after you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Do not use the appliance on chapped skin, open wounds, healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammation, eczema, psoriasis, nylon allergy etc.
- Do not use the appliance if you are taking steroid-based medication.

- If you wear piercings on your face, remove the piercings before you use the click-on attachments or make sure that you do not use the appliance on or near the piercing.
- Do not use the click-on massage attachment and click-on fresh eyes attachment with self-made cleansers, creams, oils or cosmetic products containing harsh chemicals or rough particles.
- If you wear jewelry, contact lenses or glasses, remove them before you use the click-on attachments, or make sure that you do not use the appliance on or near jewelry or glasses.
- Only use the click-on fresh eyes attachment at the lowest personal comfort setting.
- Do not put the click-on fresh eyes attachment in the freezer/fridge or sun, as this may cause a hazardous situation for your skin.
- The click-on fresh eyes attachment is intended for use on the bony area below the eye.

## 12 English

- Please make sure that no loose hair gets trapped in the click-on massage attachment during use by wearing a headband, tying your hair or holding it back with your hands.
- The click-on massage attachment is intended to massage the cheeks.
- Only use the click-on massage attachment at the medium or lowest personal comfort setting.
- Do not use the click-on massage attachment too close to the nostrils.

### Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### General



- This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

### The display

Note: Remove any sticker or protective foil from the display before using the product.

## Charging

 


When the shaver is charging, the ring on the pad lights up and the battery charge indicator on the shaver flashes white.

The battery charge is indicated by the battery charge percentage flashing on the display, which is shown when the shaver is moved.

Quick charge: After approx. 18 minutes charging, the appliance contains enough energy for one shave.

## Battery fully charged

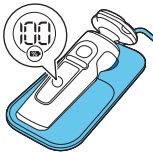

When the battery is fully charged, the battery charge indicator and the ring on the pad light up white continuously.

**Note:** Both lights switch off automatically after 15 minutes.

The battery charge percentage lights up white continuously, which is shown when the shaver is moved.

## Battery low



 
When the battery is almost empty, the battery charge indicator flashes orange and the shaver beeps. At this point there is enough energy left for one shave..

## Remaining battery charge



The remaining battery charge is indicated by the battery charge percentage shown on the display.

## Personal comfort settings

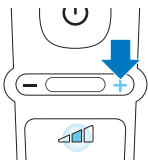

The shaver has a feature that allows you to personalize your settings. Depending on your personal shaving needs, choose between three settings, from low to high: comfort, dynamic or efficiency. When you press the button on the left or right of the display, the segment of the personal comfort settings bar lights up to indicate the selected setting. To select a lower or higher setting, press the button on the left or right of the display.

## Cleaning reminder



 
Clean the shaver after every use for optimal performance (see 'Cleaning and maintenance'). When you switch off the shaver, the cleaning reminder flashes to remind you to clean the shaver.

## Travel lock



When you are going to travel, you can lock the shaver to prevent it from accidentally turning on.

## Replacement reminder

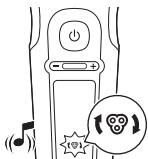

For maximum shaving performance, replace the shaving heads every two years. The shaver is equipped with a replacement reminder which reminds you to replace the shaving heads. The shaver beeps, the replacement reminder lights up and the arrows flash to indicate that you have to replace the shaving heads.

Note: After replacing the shaving heads, you can reset the replacement reminder by pressing the

on/off button for 7 seconds. If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

## Notification symbol

### Overheating



If the shaver overheats during charging, the notification symbol flashes. When this happens, the shaver stops charging automatically. Charging continues once the temperature of the shaver has decreased to the normal level after approx. 10 minutes.

### Blocked shaving heads



If the shaving heads are blocked, the notification symbol lights up red continuously. The replacement reminder and the cleaning reminder alternately flash white and the shaver beeps. In this case, the motor cannot run because the shaving heads are dirty or damaged. If the shaving heads are dirty, you have to clean them. If the shaving heads are damaged, you have to replace them.

### Foreign object on Qi charging pad



If there is a foreign (metal) object on the Qi charging pad during charging, the notification symbol on the Qi charging pad lights up. The Qi charging pad switches off automatically and restarts 5 minutes after the foreign object has been removed.

**Do not place any foreign (metal) objects on the Qi charging pad. Only use the Qi charging pad to charge the shaver or another device (e.g. smartphone) compliant with Qi charging.**

## Charging

Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty.

Charging takes approx. 3 hours. A fully charged shaver has a shaving time of up to 60 minutes.

**Note:** You cannot use the shaver while it is charging.

### Quick charge

After approx. 18 minutes of charging the shaver contains enough power for one shave.

 
 
### Charging with the Qi charging pad



**Note:** The charging pad is Qi compliant. Only charge the Qi compatible shaver or other Qi charging compliant appliances on the Qi charging pad provided.

**Note:** Carefully shake off excess water before placing the shaver on the Qi pad.

- 1 Put the USB plug in the supply unit supplied.
- 2 Put the supply unit in the wall socket.

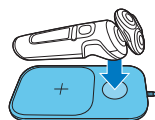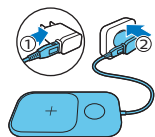


- 3 Place the shaver on the cross mark of the Qi charging pad. Make sure the shaver fits into the cavity of the Qi charging pad.

**Only charge the shaver on the provided Qi charging pad.**





 - The Qi charging pad beeps and the ring on the pad lights up when the shaver is correctly placed and connected for charging.

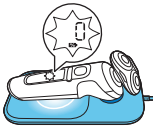

- When the shaver is charging, the ring on the pad lights up and the battery charge indicator on the shaver flashes white. The battery charge is indicated by the battery charge percentage flashing on the display, which is shown when the shaver is moved.
- 4 When the battery is fully charged, the battery charge indicator and the ring on the pad light up white continuously. Both lights switch off automatically after 15 minutes.

## Using the shaver

**Always check the shaver and all accessories before use. Do not use the shaver or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.**

 


This symbol indicates that the shaver can be used in the bath or shower.

- Use this shaver for its intended household use as described in this manual.
- For hygienic reasons, the shaver should only be used by one person.
- Trimming is easier when the skin and hair are dry.

**Note:** This shaver is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used without charging cord.

## Switching the shaver on and off

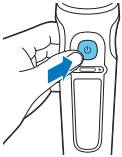

- 1** To switch on the shaver, press the on/off button once.  
The battery charge percentage lights up for a few seconds.
- 2** To switch off the shaver, press the on/off button once.  
The battery charge percentage lights up for a few seconds and shows the remaining battery charge.

## Shaving

### Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

### Shaving tips

- For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer.
- Select your personal comfort setting (see 'Personal comfort settings').

### Dry shaving

- 1** Switch on the shaver.



 
- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

- 3 Switch off and clean the shaver after each use.  
The display lights up for a few seconds to show the remaining battery charge.

### Wet shaving


For a more comfortable shave, you can also use this shaver on a wet face with shaving foam or shaving gel.

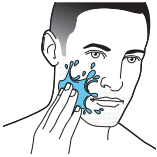

- 1 Apply some water to your skin.



 - 2 Apply shaving foam or shaving gel to your skin.

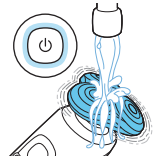

- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4 Switch on the shaver.



- 5 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, this can cause skin irritation.

Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin.

- 6 Dry your face.
- 7 Switch off the shaver and clean it after each use.

Note: Make sure that you rinse all foam or shaving gel off the shaver.

## Using click-on attachments

It is recommended not to use the click-on cleansing brush attachment, the massage attachment or fresh eyes attachment directly after shaving to prevent skin irritation.

### Removing or attaching click-on attachments

- 1 Make sure the shaver is switched off.
- 2 Pull the attachment straight off the shaver.

Note: Do not twist the attachment while you pull it off the shaver.



- 3 Insert the lug of the attachment into the slot in the top of the shaver. Then press down the attachment to attach it to the shaver ('click').

 


## Attachment holder

Note: Attach the click-on massage attachment, cleansing brush attachment and fresh eyes attachment on the attachment holder first, before you place the attachment onto the appliance.



- 1 Pull the click-on attachment straight off the attachment holder.



- 2 Place the click-on attachment onto the attachment holder until it locks into position with a click.

## Using the precision trimmer attachment

You can use the precision trimmer attachment to touch up your beard, sideburns and moustache.

- 1 Attach the attachment to the appliance ('click').
- 2 Switch on the appliance.



- 3 Hold the precision trimmer perpendicular to the skin and move it downwards while exerting gentle pressure.
- 4 Switch off the appliance and clean the attachment after use (see 'Deactivating the travel lock').

 
## Using the cleansing brush attachment

Note: For better shaving results, use the click-on cleansing brush attachment before shaving.

Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin. We advise you to use it no more than twice a day. Start with the lowest personal comfort setting to familiarize yourself with the attachment.

**Do not use the appliance on damaged or irritated skin or on wounds.**

- 1 Place the attachment on the attachment holder.
- 2 Attach the attachment to the appliance ('click').

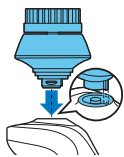

- 3 Moisten the attachment with water.

Note: Do not use the appliance with a dry cleansing brush attachment, as this can irritate the skin.

 


- 4 Moisten your face with water and apply a cleanser to your face.
- 5 Place the attachment on your cheek.
- 6 Switch on the appliance.



- 7** Gently move the brush across your skin from the nose towards the ear. Do not push too hard onto the skin to make sure that the treatment remains comfortable.

Note: Do not cleanse the sensitive area around your eyes.

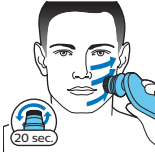

- 8** After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face.



- 9** After approx. 20 seconds, move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left to right.

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer than 20 seconds.

- 10** Switch off the appliance and clean the attachment after use.



- 11** After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine.

## Using the fresh eyes attachment

The click-on fresh eyes attachment is suitable for all skin types. We advise you to use it up to once a day in the morning for approx. 15 seconds per (eye) zone. You can use the fresh eyes attachment on dry skin or after applying cream to your skin.

**Do not use the appliance on damaged or irritated skin or on wounds.**

- 1 Place the attachment on the attachment holder.
- 2 Attach the attachment to the appliance ('click').
- 3 Switch on the appliance and set the appliance to the lowest personal comfort setting: comfort.



Only use the fresh eyes attachment at the lowest personal comfort setting.

- 4 Place the fresh eyes attachment on the bony area below the right eye. Hold the attachment on your skin at an angle of 90°. Gently move the fresh eyes attachment from the nose towards the temple and repeat this movement.



Do not treat the soft skin directly below or above the eyes, as it is thin and delicate.

Do not push too hard onto the skin to make sure that the treatment remains comfortable.

- 5 After approx. 15 seconds, move the appliance to the bony area below the left eye and repeat the treatment.
- 6 Switch off the appliance and clean the attachment after use (see 'Deactivating the travel lock').



## Using the massage attachment

The massage attachment is suitable for all skin types. We advise you to use it up to 2-3 times a week for approx. 90 seconds per zone at the medium personal comfort setting (dynamic). The massage attachment is intended to treat the right and left cheek. The cheek zones include the chin, the area between the nose and upper lip and the areas between the eyes and ears.



**Do not use the appliance on damaged or irritated skin or on wounds.**

**Do not use the massage attachment on the sensitive area around the eyes.**

You can use the massage attachment on dry skin or after applying cream or oil to your skin. Before you massage the skin, we advise you to first cleanse your face with the cleansing brush attachment.

- 1 Place the attachment on the attachment holder.
- 2 Attach the attachment to the appliance ('click').
- 3 Switch on the appliance and set the appliance to the medium personal comfort setting (dynamic).



Only use the massage attachment at the medium or low personal comfort setting.

- 4 Place the massage attachment on your right cheek. Hold the attachment on your skin at an angle of 90°. Gently move the appliance across your skin, from the nose towards the ear and repeat this movement.



Do not push too hard onto the skin to make sure that the treatment remains comfortable.

 
- 5 After 90 seconds, move the appliance to the other cheek and repeat the treatment.
- 6 Switch off the appliance and clean the attachment after use (see 'Deactivating the travel lock').



## Travel lock

You can lock the shaver when you are going to travel to prevent it from turning on accidentally.

## Activating the travel lock

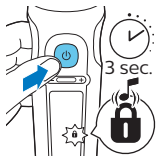

- 1 Press the on/off button for 3 seconds to enter the travel lock mode.

While you activate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. When the travel lock is activated, the travel lock symbol flashes.

If you try to switch on the shaver while the travel lock is active, the travel lock symbol flashes.

## Deactivating the travel lock



- 1 Press the on/off button for 3 seconds.

While you deactivate the travel lock, the travel lock symbol lights up briefly and the shaver produces a short sound. The shaver switches on and is now ready for use again.

Note: The shaver unlocks automatically when it is placed on the Qi charging pad.

## Cleaning and maintenance

**Regular cleaning guarantees better shaving results.**

**Never clean, remove or replace the shaving unit while the shaver is switched on.**

**Do not apply pressure to shaving head guards.**

**Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted guards.**

**Do not use abrasives, scourers or aggressive liquids such as petrol or acetone to clean the shaver.**

## Cleaning the shaver under the tap

 
Clean the shaver after every shave for optimal performance.

**Always check if the water is too hot, to prevent burning your hands.**


**Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.**

**While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence.**


- 1 Switch on the shaver.
- 2 Rinse the shaving unit under a warm tap.  
You can also use the cleaning brush to remove excess hairs before rinsing.

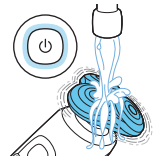

 - 3 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.

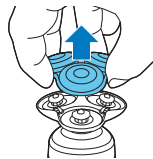

 - 4 Rinse the hair chamber and shaving head holder under the tap.  
You can also use the cleaning brush to remove excess hairs before rinsing.

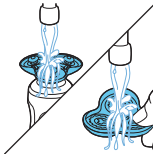


While rinsing the shaving unit, water may drip out of the bottom of the shaver. This is a normal occurrence.





 - 5 Carefully shake off excess water and let the shaving head holder air-dry completely.


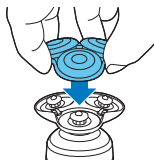


- 6 Attach the shaving head holder to the bottom part of the shaving unit ('click').

## Thorough cleaning

  
We advise you to clean the shaving heads thoroughly once a month or when the shaver does not shave as well as it used to.

- 1 Switch off the shaver.
- 2 Pull the shaving head holder off the bottom part of the shaving unit.

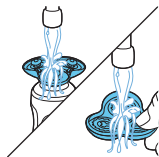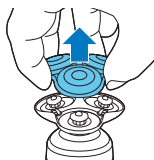


- 3 Rinse the hair chamber and shaving head holder under the tap.

 You can also use the cleaning brush to remove excess hairs before rinsing.

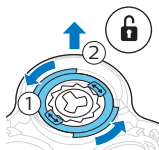


- 4 Turn the retaining ring counterclockwise and lift it off the shaving head.

 Repeat this process for the other retaining rings. Place them aside in a safe place.

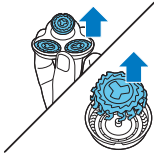

- 5** Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.

 **Note:** Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

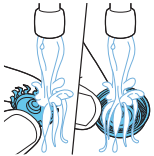


- 6** Clean the cutter and guard under the tap. You can also use the cleaning brush to remove excess hairs before rinsing.


- 7** Shake off excess water.

- 8** Put the cutter back into the guard.

 
- 9** Place the shaving heads in the shaving head holder.

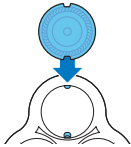


 - 10** Place the retaining ring on the shaving head.

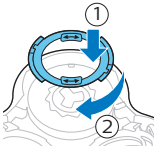

  - 11** Align the arrows on the retaining ring with the projections in the shaving head holder. Turn the ring clockwise until it clicks to indicate that the ring is fixed.

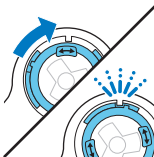

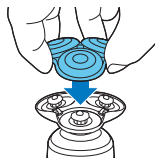


- 12** Attach the shaving head holder to the bottom part of the shaving unit ('click').

## Cleaning the trimmer attachment

 **Never dry the trimmer with a towel or tissue, as this may damage the trimming teeth.**

Clean the trimmer attachment after each use.

- 1** Switch on the appliance with the precision trimmer attachment attached.
- 2** Rinse the attachment under a warm tap.
- 3** After cleaning, switch off the appliance.
- 4** Carefully shake off excess water and let the attachment air-dry completely.

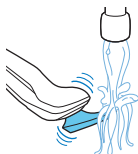


**Tip:** For optimal performance, lubricate the teeth of the attachment with a drop of sewing machine oil regularly.

## Cleaning the cleansing brush, fresh eyes and massage attachment

 Clean the attachments after each use.

- 1** Switch off the appliance.
- 2** Remove the attachment from the attachment holder.



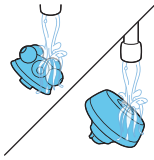

- 3 Clean the parts thoroughly with warm water.
- 4 Dry the attachment with a towel.

## Replacement

### Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately.

 


Always replace the shaving heads with original Philips shaving heads (see 'Ordering accessories').




### Replacement reminder


The replacement reminder indicates that the shaving heads need to be replaced. The shaving unit symbol lights up continuously, the arrows flash white and you hear a beep when you switch the shaver on or off.

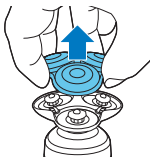

 - 1 Switch off the shaver. Pull the shaving head holder off the bottom part of the shaving unit.

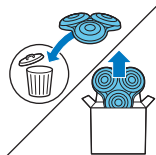

 
- 2** Discard the old shaving head holder and attach the new shaving head holder to the bottom part of the shaving unit ('click').

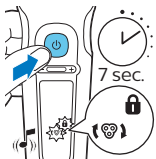

- 3** After replacing the shaving heads, you can reset the replacement reminder by pressing the on/off button for 7 seconds. Wait until you hear 3 beeps.

If you do not reset the replacement reminder, the shaver resets automatically after 9 shaves.

### Replacing the cleansing brush attachment

 

The cleansing brush attachment should be replaced every 3 months or earlier if the brush hairs are bent or damaged (see 'Ordering accessories').

### Replacing the fresh eyes attachment



The fresh eyes attachment should be replaced every year or earlier if parts are damaged (see 'Ordering accessories').

### Replacing the massage attachment



The massage attachment should be replaced every year or earlier if parts are damaged (see 'Ordering accessories').



## Storage



Store the shaver in the pouch.

Note: Always let the shaver dry completely before you store it in the pouch.

## Ordering accessories

To buy accessories or spare parts, visit **[www.shop.philips.com/service](http://www.shop.philips.com/service)** or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

The following accessories and spare parts are available:

- SH98 Philips shaving heads
- HQ110 Philips shaving head cleaning spray
- RQ111 Philips beard styler attachment
- RQ585 Philips cleansing brush attachment
- RQ560 Philips cleansing brush attachment
- RQ563 Philips cleansing brush attachment 3-pack
- HQ87 USB supply unit
- HQ8509, HQ8510 Qi charging pad

Note: The availability of the accessories may differ by country.

## Recycling

 
- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.


## Removing the rechargeable shaver battery

**Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that the battery is completely empty.**


**Take any necessary safety precautions when you handle tools to open the shaver and when you dispose of the rechargeable battery.**

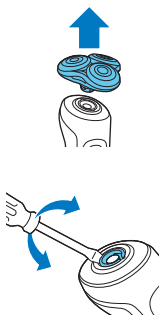

 
- 1 Remove the click-on attachment from the appliance.
- 2 On top of the appliance insert a screwdriver between the black cylinder and silver ring. Force the silver ring up off the appliance and remove the top panel.
- 3 Unscrew the two screws and remove the frame.
- 4 Remove the two back black covers and slide the front housing off the appliance.

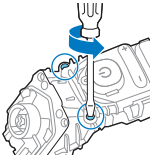

 
- 5 Unscrew the two screws at the top of the inner panel.

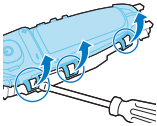

 - 6 Place a screwdriver between the lips of the inner panel and bend them aside. Then remove the inner panel.



 - 7 Lift out the printed circuit board with the rechargeable battery.

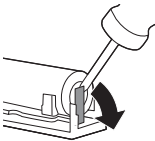

- 8 Bend the battery tags aside with a screwdriver.  
9 Remove the rechargeable battery.

## Warranty and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the international warranty leaflet.

### Warranty restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international warranty because they are subject to wear.

## Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit [www.philips.com/support](http://www.philips.com/support) for a list of frequently asked questions or contact the Consumer Care Center in your country.

### Shaver

Problem	Possible cause	Solution
The appliance does not work when I press the on/off button.	The appliance is still placed on the Qi charging pad.	Remove the appliance from the Qi charging pad and press the on/off button to switch on the appliance.
	The rechargeable battery is empty.	Recharge the battery (see 'Charging').
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads thoroughly (see 'Thorough cleaning') or replace them.
The appliance does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads in the regular way or clean them thoroughly.

<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
I replaced the shaving heads, but the display still shows the replacement reminder.	You have not reset the appliance.	Reset the appliance by pressing the on/off button for approx. 7 seconds.
A shaving unit symbol has suddenly appeared on the display.	This symbol reminds you to replace the shaving heads.	Replace the shaving heads (see 'Replacement').
The notification symbol flashes and the shaver beeps while the shaver is charging.	The appliance is overheated.	When this happens, the shaver stops charging automatically. Charging continues once the temperature of the shaver has decreased to the normal level after approx. 10 minutes.
The notification symbol flashes and the shaver beeps when I try to shave.	The shaving heads are soiled.	Clean the shaving heads (see 'Cleaning and maintenance').
The notification symbol flashes and the shaver beeps after cleaning the shaving heads.	The shaving heads are damaged.	Replace the shaving heads (see 'Replacement').
Water is leaking from the bottom of the appliance.	During cleaning, water may collect between the inner body and the outer shell of the appliance.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the appliance.

## Click-on attachments

Problem	Possible cause	Solution
I do not know if the appliance is suitable for use on my skin.		Do not use the appliance on dry, chapped skin, open wounds, healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammation, eczema, psoriasis etc. Do not use the appliance if you are taking steroid-based medication.
I don't know which facial attachments I can use with the appliance.		All attachments provided with this appliance can be used with this appliance. To find out more about the range of attachments, consult our website <a href="http://www.shop.philips.com">www.shop.philips.com</a> or the shop where you purchased your Philips appliance. If you have any difficulties obtaining information, please contact the Philips Consumer Care Center in your country. You find its contact details in the international warranty leaflet. You can also visit <a href="http://www.philips.com/support">www.philips.com/support</a> .
The cleansing brush attachment feels too harsh on my skin.		Start with the lowest personal comfort setting to familiarize yourself with the attachment.

Problem	Possible cause	Solution
I don't know with which cleansing products I can use the cleansing brush attachment.		We advise you to cleanse your skin with your favorite cleanser. You can use cleansing gel, foam, oil, milk or lotions. Please do not use scrub cream or gel with particles.
The fresh eyes attachment pulls my skin.		Only use the fresh eyes attachment at the lowest personal comfort setting and place it on the bony area. Place the fresh eyes attachment on the skin at an angle of 90°.
The click-on attachments do not fit on the appliance.		Attach the massage attachment, cleansing brush attachment and fresh eyes attachment on the attachment holder, before placing it on the appliance.

## 介绍

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 [www.philips.com/welcome](http://www.philips.com/welcome) 上注册您的产品。

请阅读本用户手册，手册包含有关此剃须刀各种功能的信息以及一些使用技巧，让您的剃须体验更轻松更舒适。

## 基本说明（图 1）

- 1 卡入式洁面刷保护盖
- 2 洁面刷附件
- 3 按摩附件
- 4 眼部赋活附件
- 5 附件支架
- 6 Qi 充电基座
- 7 电源部件
- 8 USB 插头
- 9 存储袋
- 10 更换提示
- 11 通知符号
- 12 清洗提示
- 13 旅行锁符号
- 14 电池充电指示灯
- 15 电池充电百分比
- 16 个人舒适度设置栏
- 17 个人舒适度设置降低按钮
- 18 个人舒适度设置提高按钮
- 19 开/关按钮
- 20 剃须刀头部件及胡茬储藏室
- 21 卡入式精确修剪器附件
- 22 卡入式鼻毛修剪器

## 重要安全信息

使用本产品及其附件之前，请仔细阅读本重要信息，并妥善保管以供日后参考。随附的附件可能因产品而异。



## 危险



- 保持电源部件干燥。
- 警告符号注释：禁止在打开的水龙头下进行清洗。

## 警告



- 本产品为 III 级构造。
- 要给电池充电，请仅使用该产品随附的可拆卸电源部件和充电基座（电源部件，类型 HQ87。充电基座，类型 HQ8509 或 HQ8510）。
- 请勿使用 USB 延长线。
- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。切勿让儿童玩弄本产品。不要让儿童在无人监督的情况下对本产品进行清洁和保养。

- 使用前，请务必检查产品及其附件。如果本产品或其附件损坏，请勿再使用，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。
- 切勿拆开本产品更换充电电池。
- 充电基座不适用于车载充电。它可能会干扰汽车的电子系统。
- 如果您有青光眼、眼部受伤，或在过去 12 个月内进行过眼部手术，请勿使用卡入式眼部赋活附件。
- 如果您对铝金属过敏，请勿使用卡入式眼部赋活附件。

### 警告

- 切勿将充电基座浸入水中，也不要再在自来水龙头下冲洗。
- 务必确保充电基座完全干燥后，再将其连接至电源插座。
- 切勿使用温度高于 60°C 的热水冲洗剃须刀。
- 只能将本产品用于用户手册中所示的原定用途。
- 出于安全原因，请勿在驾车时使用剃须刀。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。
- 请勿将本产品或其任何部件放在洗碗机中。

- 冲洗剃须刀后，可能有水从中滴落。这是正常现象，而且没有危险，因为所有电子元件都封闭在剃须刀内部的密封电源部件中。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。
- 如果皮肤出现皴裂、开放性伤口、正在愈合的伤口、皮肤处于术后恢复期或存在严重粉刺、晒伤、皮肤感染、皮肤癌、发炎、湿疹、牛皮癣、对尼龙过敏等皮肤病或皮肤过敏，请勿使用本产品。
- 如果您正在服用类固醇类药物，请勿使用该产品。
- 如果您的面部带有穿环，则需卸下穿环后再使用卡入式附件或确保不要在穿环上或附近使用产品。
- 请勿将卡入式按摩附件和卡入式眼部赋活附件与自制洁面乳、乳液、精油或含有刺激性化学物质或去死皮微粒的化妆品一起使用。
- 如果您戴有首饰、隐形眼镜或眼镜，则需取下后再使用卡入式附件或确保不要在首饰或眼镜上或附近使用产品。
- 仅以最低个人舒适度设置使用卡入式眼部赋活附件。

- 请勿将卡入式眼部赋活附件放入冷冻室/冰箱或太阳下，否则可能危害您的肌肤。
- 卡入式眼部赋活附件设计用于眼睛下方的骨部区域。
- 请确保使用期间没有任何松散的头发缠入卡入式按摩附件，对此，您可以佩戴头箍、扎住头发或用手将头发向后挽。
- 卡入式按摩附件只能用于按摩两颊。
- 仅以中等或最低个人舒适度设置使用卡入式按摩附件。
- 请勿距离鼻孔太近使用卡入式按摩附件。

## 电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

## 概述



- 符号注释：适合于在洗澡或淋浴时使用。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 该剃须刀具有防水性能。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。
- 电源部件适合在 100 - 240 伏的电源电压下工作。
- 该电源部件可将 100-240 伏的电压转换为 24 伏以下的安全低电压。

## 显示屏

注意：使用本产品前，请先取下显示屏上的任何不干胶标签或保护膜。

## 充电

 


剃须刀充电时，基座上的环将亮起，且剃须刀上的电池充电指示灯呈白色闪烁。

移动剃须刀时，显示屏上会以闪烁的电池充电百分比表示电池的充电情况。

快速充电：充电大约 18 分钟后，本产品含有的电量足以完成一次剃须。

## 电池已完全充满

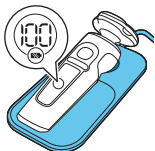

电池充满电后，电池充电指示灯和基座上的环都将呈白色持续亮起。

**注意：**两种指示灯都将在 15 分钟后自动关闭。

移动剃须刀时，电池充电百分比指示灯呈白色持续亮起。

## 电池电量不足



 
当电池电量即将耗尽时，电池符号将呈橙色闪烁，并且您将听到声音。此时，电池含有的电量足以完成一次剃须。

## 电池剩余电量



显示屏上显示的电池充电百分比表示剩余的电池电量。

## 个人舒适度设置

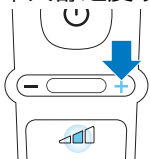


剃须刀提供进行个性化设置的功能。您可以根据个人的剃须需要，从三种设置（由低至高）中进行选择：舒适、强劲或高效。当您按下显示屏左侧或右侧的按钮时，个人舒适度设置栏上亮起的部分会显示当前选择的设置。如需选择较低或较高设置，请按下显示屏左侧或右侧按钮。

## 清洗提示



 每次剃须后请清洁剃须刀，以获得出色性能（请参见‘清洁和保养’）。关闭剃须刀时，清洗提示符号闪烁，提醒您需要清洁剃须刀。

## 旅行锁

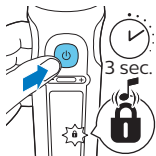

您可以在携带剃须刀旅行之前将其锁住。旅行锁可防止剃须刀被意外打开。

## 更换提示



要获得更好的剃须效果，请每两年更换一次剃须刀头。剃须刀配有更换提示符号，它会提醒您更换剃须刀头。剃须刀发出提示音，更换指示灯亮起且箭头闪烁，这表示需要更换剃须刀头。

注意：更换剃须刀头后，您需要通过按开/关按钮 7 秒来重置更换提醒。

## 通知符号

过热



如果剃须刀在充电期间过热，感叹号会闪烁。在这种情况下，剃须刀会自动停止充电。在大约 10 分钟后，只要剃须刀温度降至正常水平，就会继续充电。



### 剃须刀头被阻塞

如果剃须刀头被阻塞，感叹号将呈红色持续亮起。更换提醒和清洗提示灯将呈白色交替闪烁，并且剃须刀会发出提示音。此时，由于剃须刀头被污染或损坏，马达将无法运行。如果剃须刀头被污染，您必须对其进行清洁。如果剃须刀头已损坏，您必须对其进行更换。



### Qi 充电基座上有异物

如果充电期间 Qi 充电基座上有异物（金属），Qi 充电基座上的通知符号会亮起。Qi 充电基座将自动关闭，并在异物移除 5 分钟后重新启动。

**请勿在 Qi 充电基座上放置异物（金属）。仅使用 Qi 充电基座为剃须刀或其他与 Qi 充电规范兼容的设备（例如智能手机）充电。**

## 充电

首次使用剃须刀之前，或当显示屏指示电池电量几乎耗尽时，请先为剃须刀充电。

充电约需 3 小时。充满电的剃须刀剃须时间可长达 60 分钟。

**注意：**切勿在充电时使用剃须刀。

## 快速充电

剃须刀充电约 18 分钟后所含的电量足以完成一次剃须。

 
## 使用 Qi 充电基座充电



注意：充电基座兼容 Qi。只能在所提供的 Qi 充电基座上为兼容 Qi 充电规范的剃须刀或其他兼容 Qi 充电规范的产品充电。


注意：在将剃须刀放在 Qi 基座上之前，请小心地甩掉多余水分。

- 1 将 USB 插头插入随附的电源部件。
- 2 将电源部件插入电源插座。

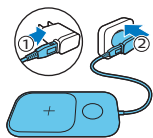

- 3 将剃须刀放在 Qi 充电基座的十字标志上。确保剃须刀恰当放入 Qi 充电基座的仓中。

**只能在随附的 Qi 充电基座上为剃须刀充电。**

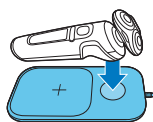 

- 如果剃须刀放置正确并已连接进行充电，则 Qi 充电基座会发出提示音，且基座上的环亮起。



- 剃须刀充电时，基座上的环将亮起，且剃须刀上的电池充电指示灯呈白色闪烁。移动剃须刀时，显示屏上会以闪烁的电池充电百分比表示电池的充电情况。



- 4 电池充满电后，电池充电指示灯和基座上的环都将呈白色持续亮起。两种指示灯都将在 15 分钟后自动关闭。



## 使用剃须刀



使用前务必要检查剃须刀和所有配件。如果剃须刀或任何配件损坏，请勿再使用，否则可能对人体造成伤害。请务必用原装型号更换损坏的部件。

 
此标志表示该剃毛器可在沐浴或淋浴时使用。

符号注释：适合于在洗澡或淋浴时使用。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。

- 请按照本用户手册中所述的预期家用用途使用本剃须刀。
- 出于卫生考虑，请勿共用剃须刀。
- 皮肤和毛发干燥时修剪更容易。

注意：该剃须刀具有防水性能。适合在沐浴或淋浴时使用，也可以放在水龙头下清洗。出于安全原因，该剃须刀在使用时不能连接充电线。

## 打开或关闭剃须刀

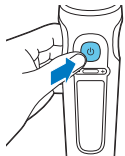

- 1 要打开剃须刀，请按一下开/关按钮。

电池充电百分比指示灯亮起几秒钟。

- 2 要关闭剃须刀，请按一下开/关按钮。

电池充电百分比指示灯亮起几秒钟并显示剩余电池电量。

## 剃须

### 皮肤适应期

前几次剃须可能不会带给您预期效果，并且您的皮肤可能会受到轻度刺激。这是正常的。您的皮肤和胡须需要时间适应任何新的剃须系统。为了让您的皮肤适应这款新产品，我们建议您在 3 周时间内定期（至少每周 3 次）仅使用本产品剃须。

### 剃须提示

如果您连续 3 天或更长时间没有剃须，为确保皮肤获得更好的舒适感，请预先修剪胡须。

选择您的个人舒适度设置（请参见‘个人舒适度设置’）。



### 干剃

- 1 打开剃须刀。
- 2 让剃须刀头在您的皮肤上作迂回运动，以刮剃向不同方向生长的所有须发。轻轻按压，以获取舒适贴面的剃须感受。

注意：不要用力按压剃须刀，这样做可能会导致皮肤受刺激。

- 3 每次使用后，请关闭并清洗剃须刀。

显示屏将亮起几秒钟时间，以显示电池剩余电量。

### 湿剃

 
要获得更舒适的剃须体验，您也可以先用剃须泡沫或剃须啫喱对脸部进行湿润，然后再使用剃须刀。



- 1 用水润湿皮肤。



- 2 在皮肤上涂抹剃须泡沫或剃须啫喱。

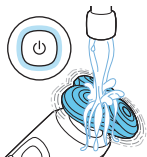

- 3 在水龙头下冲洗一下剃须刀头部件，确保剃须刀头部件可以在您的皮肤上顺畅滑动。
- 4 打开剃须刀。



- 5 让剃须刀头在您的皮肤上作迂回运动，以刮剃向不同方向生长的所有须发。轻轻按压，以获取舒适贴面的剃须感受。

注意：不要用力按压剃须刀，这样做可能会导致皮肤受刺激。

注意：定期冲洗剃须刀头部件，确保其能够继续在您的皮肤上顺畅滑动。

- 6 擦干面部。
- 7 每次使用后，请关闭并清洗剃须刀。

注意：确保冲净剃须刀上的所有泡沫或剃须啫喱。

## 使用卡入式附件

建议不要在剃须后直接使用卡入式洁面刷附件、按摩附件或眼部赋活附件，以免皮肤过敏。

### 拆卸或安装卡入式附件



- 1 确保剃须刀已关闭。
- 2 将附件竖直抽出剃须刀。

注意：将附件从剃须刀上抽出时，不要旋转。



 
- 3 将附件的凸缘插入本剃须刀顶部的槽内。然后，按下附件将其安装到本剃须刀上（可听到“咔哒”一声）。

### 附件支架

注意：将附件安装到产品上之前，先将卡入式按摩附件、洁面刷附件和眼部赋活附件安装到附件支架上。



- 1 将卡入式附件竖直抽离附件支架。



- 2 将卡入式附件安装到附件支架上，直至其锁定到位（可听到“咔哒”一声）。

## 使用精确修剪器附件

您可使用修剪器附件修剪鬓角和胡须。



- 1 将附件安装到产品上（可听到“咔哒”一声）。
- 2 启动产品。
- 3 将修剪器垂直放在皮肤上，向下移动产品，同时轻轻按压。
- 4 使用（请参见“解除旅行锁”）后，请关闭本产品并清洁附件。

 
## 使用洁面刷附件

**注意：**为获得最佳的剃须效果，剃须之前使用卡入式洁面刷附件进行清洁。

将旋转洁面刷与日常洁面产品一起使用。洁面刷可去除油脂和污垢，焕发健康无油脂的肌肤。建议每天使用本产品不超过2次。从最低个人舒适度设置开始，以熟悉附件的使用方法。

**请不要在受伤或发炎的皮肤或伤口上使用本产品。**

- 1 将附件安装至附件支架上。

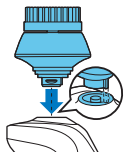

2 将附件安装到产品上（可听到“咔哒”一声）。



3 用水湿润附件。

注意：切勿在洁面刷附件干燥的情况下使用产品，否则可能会刺激皮肤。



4 用水润湿面部，并将洁面乳涂抹到脸上。

5 将附件置于面颊上。

6 启动产品。



7 在鼻子至耳朵的皮肤上轻轻地移动刷头。请勿太过用力地压在皮肤上，以确保舒适护理。

注意：切勿清洁眼部周围的敏感区域。



8 约 20 秒后，可将本产品移至另一侧面颊，开始清洁这部分面部皮肤。



9 约 20 秒后，可将本产品移至前额，开始清洁这部分面部皮肤。轻轻将刷头从左向右移动。

注意：建议您不要过度清洁，任何部位的清洁时间不要超过 20 秒钟。

10 使用后，请关闭本产品并清洁附件。



11 护理后，洗脸并擦干。现在您可以进行日常面部护肤的下一步了。

## 使用眼部赋活附件

本卡入式眼部赋活附件适合各种皮肤类型。建议您每天早晨最多使用一次，大约每个（眼睛）区域 15 秒。您可以在干燥的皮肤上使用眼部赋活附件，或在皮肤上涂抹乳液后使用。

**请不要在受伤或发炎的皮肤或伤口上使用本产品。**

- 1 将附件安装至附件支架上。
- 2 将附件安装到产品上（可听到“咔哒”一声）。
- 3 启动产品并将产品设定为最低个人舒适度设置：舒适。

仅以最低个人舒适度设置使用眼部赋活附件。



- 4 将眼部赋活附件放在右眼下方的骨部区域。将附件以 90° 角置于皮肤上。从鼻子至太阳穴轻轻地移动眼部赋活附件，重复这一动作。

请勿对眼部下方或上方的柔软肌肤直接进行护理，因为那里的肌肤极为细嫩。

请勿太过用力地压在皮肤上，以确保舒适护理。



## 使用按摩附件

- 大约 15 秒后，将本产品移至左眼下方骨部区域，重复护理。
- 使用 (请参见“解除旅行锁”)后，请关闭本产品并清洁附件。

本按摩附件适合各种皮肤类型。建议您选用中等个人舒适度设置（强劲），每个区域大约 90 秒，一周最多 2-3 次。按摩附件只能用于护理左右两颊。面颊区域包括下巴、鼻子和上唇之间的部位以及眼睛和耳朵之间的部位。

**请不要在受伤或发炎的皮肤或伤口上使用本产品。**

**请勿在眼睛周围的敏感部位使用按摩附件。**

您可以在干燥的皮肤上使用按摩附件，或在皮肤上涂抹乳液或精油后使用。在按摩肌肤之前，建议您先用洁面刷附件清洁面部。

- 将附件安装至附件支架上。
- 将附件安装到产品上（可听到“咔哒”一声）。
- 启动产品并将产品设定为中等个人舒适度设置（强劲）。

仅以中等或最低个人舒适度设置时使用按摩附件。



- 将按摩附件置于右颊。将附件以 90° 角置于皮肤上。在鼻子至耳朵的皮肤上轻轻地移动产品，重复这一动作。

请勿太过用力地压在皮肤上，以确保舒适护理。

 


- 90 秒后，将本产品移至另一侧脸颊，重复护理。
- 使用 (请参见 '解除旅行锁')后，请关闭本产品并清洁附件。

## 旅行锁

您可以在携带剃须刀旅行之前将其锁住。旅行锁可防止剃须刀被意外打开。

### 启用旅行锁

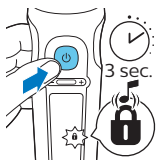

- 按住开/关按钮 3 秒钟以进入旅行锁模式。  
启用旅行锁后，旅行锁符号会短暂亮起且剃须刀会发出短促声音。旅行锁启用后，旅行锁符号将闪烁。

如果在旅行锁处于激活状态下尝试打开剃须刀，旅行锁符号将闪烁。

### 解除旅行锁



- 按开/关按钮 3 秒钟。  
解除旅行锁后，旅行锁符号会短暂亮起且剃须刀会发出短促声音。剃须刀打开后即可供再次使用。

注意：当放在 Qi 充电基座上时，剃须刀会自动解锁。

## 清洁和保养

为保证更好的剃须效果，请定期清洗剃须刀。

切勿在剃须刀开启时清洗、拆除或更换剃须刀头部件。

请勿对剃须刀头网罩施加压力。

请勿使用硬物触碰剃须刀头，以免挫伤或损坏制作精密的带槽网罩。



切勿使用研磨剂、硬毛刷或汽油或丙酮等腐蚀性液体清洗本剃须刀。

 
## 在水龙头下冲洗剃须刀

每次剃须后请清洁剃须刀，以获得出色性能。

**切记先检查水温是否太高，以防烫手。**

不要用毛巾或纸巾擦拭剃须刀头部件，因为这样可能会损坏剃须刀头。

冲洗剃须刀头部件时，水可能会从剃须刀底部滴出。这属于正常现象。

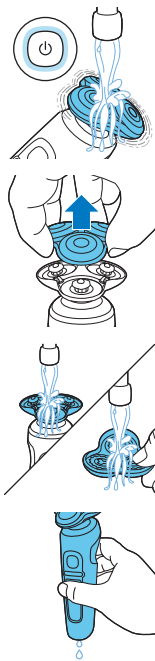

1 打开剃须刀。

2 用温水冲洗剃须刀头部件。

也可以先冲洗剃须刀头部件，然后再冲洗剃须刀头。

3 关闭剃须刀。将剃须刀头支架从剃须刀头部件的底部抽离。

 
4 在水龙头下冲洗胡茬储藏室和剃须刀头支架。

也可以先冲洗剃须刀头部件，然后再冲洗剃须刀头。

冲洗剃须刀头部件时，水可能会从剃须刀底部滴出。这属于正常现象。



5 小心地甩掉多余水分并彻底晾干剃须刀头支架。


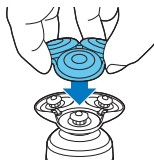


6 将剃须刀头支架安装到剃须刀头部件的底部（可听到“咔哒”一声）。


## 彻底清洁

  我们建议您每个月彻底清洁一次剃须刀头，或在剃须效果没有以前好时进行清洁。


- 1 关闭剃须刀。
- 2 将剃须刀头支架从剃须刀头部件的底部抽离。

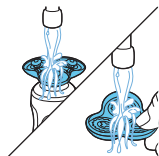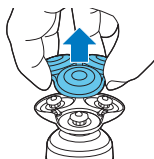

 3 在水龙头下冲洗胡茬储藏室和剃须刀头支架。也可以在冲洗前用清洁刷去除多余毛发。

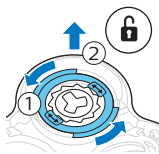


 4 逆时针转动固定环，然后将它从剃须刀头中取出。对其他固定环重复此过程。将其存放在安全的地方。

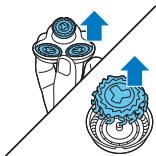


- 5 从剃须刀头支架上卸下剃须刀头。每个剃须刀头都包括刀片和网罩。

 
注意：不要同时清洁多组刀片和网罩，因为它们都是相互匹配的。如果不小心将刀片装到了错误的网罩上，则需要数周时间才能恢复产品的出色剃须性能。

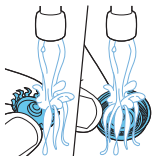

 
- 6 在水龙头下清洁刀片和网罩。  
也可以先冲洗再用清洁刷去除多余毛发。
- 7 甩掉多余的水分。
- 8 将刀片重新装回至网罩。

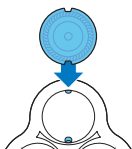


- 9 将剃须刀头装到剃须刀头支架中。

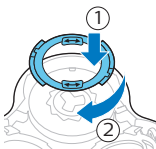 

- 10 将固定环装到剃须刀头上。

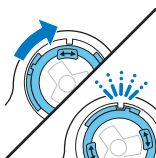 

 - 11 将固定环上的箭头与剃须刀头支架上的凸起部位对齐。顺时针旋转固定环，直至听到“咔哒”一声，表明固定环已就位。

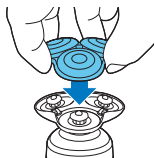


- 12 将剃须刀头支架安装到剃须刀头部件的底部（可听到“咔哒”一声）。

## 清洁修剪器附件

 **切勿用毛巾或纸巾擦干修剪器，否则可能会损坏修剪齿。**

每次使用后都要清洁修剪器附件。

- 1 打开装有精确修剪器附件的产品。
- 2 在温水水龙头下冲洗附件。
- 3 清洁完成后，关闭产品。
- 4 小心地甩干多余的水，然后将附件晾干。


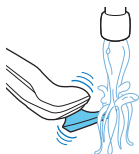


提示：为达到最佳效果，请定期用一滴缝纫机油润滑附件齿部。

## 清洗洁面刷、眼部赋活附件和按摩附件

  每次使用后都要清洁附件。

- 1 关闭产品。
- 2 从附件支架上卸下附件。

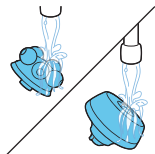

- 3 用温水彻底清洗部件。
- 4 用毛巾擦干附件。


## 更换
 
### 更换剃须刀头

为获得更好剃须效果，建议每两年更换一次剃须刀头。立即更换损坏的剃须刀头。




务必使用原装飞利浦剃须刀头 (请参见 '订购配件') 进行更换。

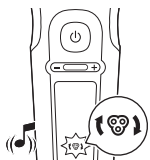


#### 更换提示

 
出现更换提醒表示需要更换剃须刀头。剃须刀头部件符号持续亮起，箭头呈白色闪烁，并在打开或关闭剃须刀时听到蜂鸣音。

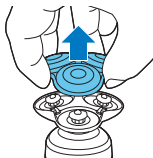

- 1 关闭剃须刀。将剃须刀头支架从剃须刀头部件的底部抽离。

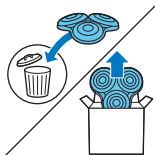 

 - 2 丢弃旧的剃须刀头支架，并将新的剃须刀头支架装回剃须刀头部件的底部（可听到“咔哒”一声）。

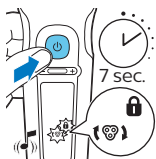

- 3 更换剃须刀头后，可通过按开/关按钮 7 秒来重置更换提醒。请等到听见 3 声蜂鸣音。

如果未重置更换提醒，剃须刀会在剃须 9 次后自动重置。

## 更换洁面刷附件

每 3 个月应更换一次刷头，或当刷毛在更短时间内出现弯曲或损坏 (请参见 '订购配件') 时更换。

## 更换眼部赋活附件



眼部赋活附件应每年更换一次，如果部件损坏 (请参见 '订购配件')，则应提前更换。

## 更换按摩附件



按摩附件应每年更换一次，如果部件损坏 (请参见 '订购配件')，则应提前更换。

## 存放



将剃须刀存放在存储袋中。

**注意：**务必确保剃须刀彻底干燥，然后再将其存放在存储袋中。

## 订购配件

要购买附件或备件，请访问 [www.shop.philips.com/service](http://www.shop.philips.com/service) 或联系您的飞利浦经销商。您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅全球保修卡了解详细联系信息）。

可选配以下附件和备件：

- SH98 飞利浦剃须刀头
- HQ110 飞利浦剃须刀头清洁喷雾剂
- RQ111 飞利浦胡须造型器附件
- RQ585 飞利浦洁面刷附件
- RQ560 飞利浦洁面刷附件
- RQ563 飞利浦洁面刷附件（三件装）
- HQ87 USB 电源部件
- HQ8509、HQ8510 Qi 充电底座

**注意：** 配件可用性可能因国家/地区而异。

## 回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。这样做将有利于环保。
- 此产品包含内置充电电池：请勿将充电电池与一般生活垃圾一起弃置。请您将产品送到官方收集中心或飞利浦服务中心，请专业人士移除充电电池。
- 遵循您的国家/地区有关分类回收电子电气产品和充电电池的规定。正确弃置产品有助于避免对环境和人类健康造成不良后果。

 
## 卸下剃须刀的充电电池

**必须在丢弃剃须刀前拆下充电电池。卸下电池之前，请确保剃须刀与电源插座断开连接并且电池电量已耗尽。**



**当您使用工具打开剃须刀时以及在您弃置充电电池时，请采取必要的安全保护措施。**




1 从产品中取出卡入式附件。

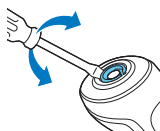

  
2 将螺丝刀插入本产品顶部的黑色柱体和银色圆环之间。强行将银色圆环从产品上撬起，然后卸下顶部面板。

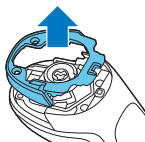


3 拧下两个螺丝，然后卸下框架。

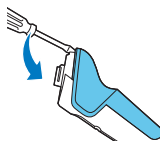 




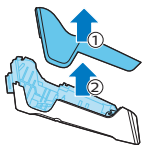 


4 卸下两个黑色背盖，然后将前壳从产品上滑出。

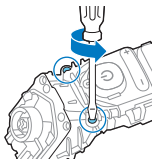 


5 拧下内侧面板顶部的两个螺丝。

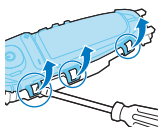 

6 将螺丝刀置于内侧面板和卡舌之间，然后将卡舌向一侧弯曲。然后卸下内侧面板。

 

7 取出带有充电电池的印刷电路板。

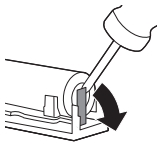 

8 用螺丝刀将电池标签向外掰。

9 卸下充电电池。

部件名称	产品中有害物质的名称及含量					
	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI) )	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	X	○	○	○	○	○
Electrical contact pins 电接触片	X	○	○	○	○	○
Power plug 电源插头	X	○	○	○	○	○
Internal metal parts 内部金属件	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

## 保修和支持

如需信息或支持，请访问 [www.philips.com/support](http://www.philips.com/support) 或阅读国际保修卡。

### 保修条款

由于剃须刀头（刀片和网罩）属于易磨损物品，因此不在国际保修条款的涵盖范围之列。

## 故障处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 [www.philips.com/support](http://www.philips.com/support) 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

### 剃须刀

问题	可能的原因	解决方法
按下开/关按钮时，产品不工作。	产品仍位于 Qi 充电基座上。	从 Qi 充电基座上取下产品，然后按开/关按钮打开产品。
	充电电池的电量已耗尽。	给电池充电 (请参见 '充电')。
	旅行锁已被激活。	按住开/关按钮 3 秒钟以禁用旅行锁。
	剃须刀头部件被污染或损坏，导致马达无法运行。	彻底 (请参见 '彻底清洁') 清洁剃须刀头或将其更换。

问题	可能的原因	解决方法
产品的剃须效果没有以前好。	剃须刀头已损坏或磨损。	更换剃须刀头 (请参见 '更换')。
	毛发或污垢堵塞了剃须刀头。	对剃须刀头进行常规式或彻底清洁。
我更换了剃须刀头, 但显示屏仍然显示更换提醒。	产品尚未重置。	按住开/关按钮大约 7 秒钟以重置产品。
显示屏上突然出现剃须刀头部件符号。	此符号提醒您更换剃须刀头。	更换剃须刀头 (请参见 '更换')。
剃须刀充电时, 通知符号闪烁且剃须刀会发出提示音。	产品过热。	在这种情况下, 剃须刀会自动停止充电。在大约 10 分钟后, 只要剃须刀温度降至正常水平, 就会继续充电。
在我尝试进行剃须时, 通知符号闪烁且剃须刀会发出提示音。	剃须刀头被污染。	清洁剃须刀头 (请参见 '清洁和保养')。
清洁剃须刀头后, 通知符号会闪烁且剃须刀会发出提示音。	剃须刀头已损坏。	更换剃须刀头 (请参见 '更换')。
水从产品底部漏出。	在清洁过程中, 水可能聚集在产品的机身内部与外壳之间。	这是正常现象, 而且没有危险, 因为所有电子元件都封闭在产品内部的密封电源部件中。

## 卡入式附件

问题	可能的原因	解决方法
我不知道本产品是否适合我的皮肤。		如果皮肤出现干燥皴裂、开放性伤口、正在愈合的伤口、皮肤处于术后恢复期或存在严重粉刺、晒伤、皮肤感染、皮肤癌、发炎、湿疹、牛皮癣等皮肤病或皮肤过敏，请勿使用本产品。如果您正在服用类固醇类药物，请勿使用本产品。
我不知道哪款面部附件可与本产品配合使用。		本产品随附的所有附件均可与本产品配合使用。要了解有关附件系列的更多信息，请参阅我们的网站 <a href="http://www.shop.philips.com">www.shop.philips.com</a> 或从您购买 Philips 产品的商店获得。如果您获取信息有困难，请联系您所在国家/地区的飞利浦客户服务中心。可在国际保修卡中找到详细的联系信息。您还可以访问 <a href="http://www.philips.com/support">www.philips.com/support</a> 。
我感觉洁面刷附件太粗糙。		从最低个人舒适度设置开始，以熟悉附件的使用方法。
我不知道洁面刷附件可与哪款清洁产品配合使用。		建议您使用自己喜爱的洁面乳清洁肌肤。您可以使用清洁凝胶、泡沫、精油、牛奶或乳液。请勿使用带微粒的磨砂膏或凝胶。
眼部赋活附件会拉扯我的皮肤。		仅以最低个人舒适度设置使用眼部赋活附件，并将其置于眼周的骨骼区域。将眼部赋活附件以 90° 角置于皮肤上。
卡入式附件不适合本产品。		安装到产品上之前，将按摩附件、洁面刷附件和眼部赋活附件安装到附件支架上。

**PHILIPS**

产品：飞利浦电动剃须刀

型号：SP9880

额定电压：220V~

额定频率：50Hz

额定输入功率：11W

生产日期：请见产品本体

整机产地：荷兰

**IPX4**

飞利浦（中国）投资有限公司  
上海市静安区灵石路718号A1幢  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,  
GB4706.9-2008制造

保留备用

发行日期: 18/5/2018

— |

| —

— |

| —

— |

| —

— |

| —

— |

| —

— |

| —





© 2018 Koninklijke Philips N.V.

All rights reserved

保留所有权利

3000.018.5402.1 (18/5/2018)

> 75% 循环再造纸



>75% recycled paper  
>75% papier recyclé