

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded shaver that has fallen into water. Unplug immediately.
2. Power plug and the accessories connected to it are not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Always unplug the shaver from the electrical outlet immediately after use, except when shaver is (re)charging.
5. Unplug and remove power supply cord from shaver before cleaning.
6. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
7. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING


To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this shaver is used by, on, or near children or invalids.
2. Use this shaver for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this shaver if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-7884.
4. Keep the shaver, cord, charging plug and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not charge or plug in shaver outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check cutter block and foil before using the shaver. Do not use the shaver if foil or cutters are damaged, as injury may occur.
9. Always attach plug to shaver first, then plug into outlet. Be certain plug is inserted firmly into shaver, up to mark indicated on plug. To disconnect, remove charging plug from outlet.
10. Never put the shaver in direct sunlight or store at a temperature above 140°F (60°C). Never clean the appliance with water above 104°F (40°C).
11. Keep the cord dry at all times. Do not handle with wet hands.
12. Only use the cord provided. To prevent possible damage to the cord, do not wrap cord around the shaver.
13. Never insert any type of material into the socket of the appliance plug.
14. Only use the power plug and the accessories supplied with the appliance.


SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Features

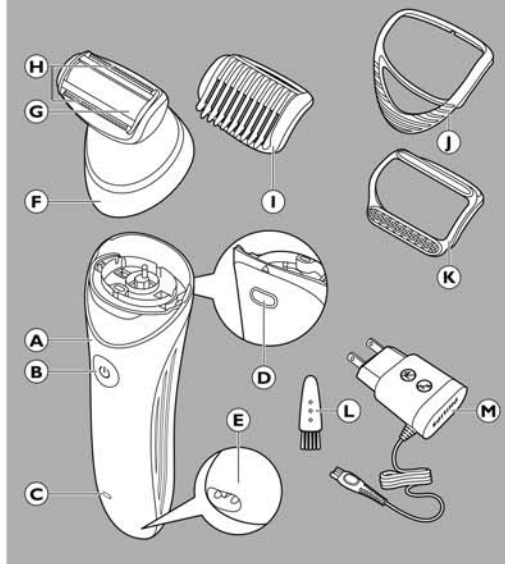

- A Handle
 - B On/Off Button
 - C Battery Indicator
 - D Release Button
 - E Socket for Small Plug
 - F Shaving Head
 - G Foil
 - H Trimmers
 - I Trimming Comb
 - J Efficiency Cap
 - K Soft Glide Cap
 - L Cleaning Brush
 - M Adapter Pouch (not shown)
- Full Two-Year Warranty
45-Day Money-Back Guarantee

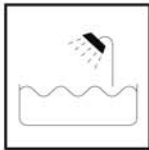

This symbol indicates that the Shaver can be used in the bath or shower.

Put It To The Test

Like many new products, your Philips SatinShave shaver may take a little getting used to. If you are using an electric shaver for the first time, or if you've been using a different brand, take time to acquaint yourself with your new electric shaver.

Your SatinShave shaver features a floating foil that follows the contours of your skin for a close shave. We guarantee smooth results or Philips will refund you the full purchase price as long as the request is received within 45 days of purchase.

To Charge/Recharge

- ▶ Fully charge shaver before using for the first time or after non-use for a long period of time.
- ▶ Charging, recharging or using the shaver at temperatures below 50°F (10°C) or higher than 95°F (35°C) adversely affects lifespan of the battery.

- 1 Be certain shaver is OFF.
 - 2 Insert the appliance plug directly into the shaver and plug the charging plug into any 120V AC outlet. Use only the cord provided.
 - 3 The battery indicator on the appliance will blink white to indicate the shaver is charging (Fig. 1).
- ▶ It will take approximately 8 hours to fully charge the shaver for a cordless operating time of 60 minutes.

- 4 After the shaver is fully charged, the battery indicator will light up white continuously (Fig. 2).
- After 30 minutes the battery indicator goes out.

- 5 If the batteries run low while using, the battery indicator will blink orange.

- 6 Disconnect the cord and unplug from electrical outlet.

NOTE: If the shaver is fully charged and connected to the electrical outlet, the battery indicator blinks a few times when you press the on/off button. This reminds you to disconnect the shaver from the electrical outlet before using.



How to Shave

- ▶ Use this shaver for its intended household use as described in this manual.
- ▶ For hygienic reasons, the shaver and attachments should only be used by one person.
- ▶ Make sure shaver is fully charged before you using. This shaver will not operate while cord is connected to an electrical outlet.
- ▶ For dry shaving, be certain your skin is clean and dry before shaving.
- ▶ For wet shaving, if desired, lather your skin with soap or shaving cream before shaving.
- ▶ Do not use deodorant or alcohol-based lotions immediately or after shaving. However, you may want to use talcum powder.

- 1 Press the shaving head onto the handle (click) (Fig. 3).

Use the shaving head to shave legs, arms, underarms, stomach and bikini line.

- 2 If desired, attach the efficiency cap onto the shaving head (Fig. 4).

The efficiency cap makes hairs stand upright while shaving so hairs are easier to remove.

Note: The attachment will only fit onto the appliance in one direction.

Tip: Attach the soft glide cap onto the shaving head to protect the skin when shaving inward curved areas, such as underarms. When attaching, make sure the soft glide cap covers the back trimmer (Fig. 5).

- 3 Press the on/off button to switch on the shaver (Fig. 6).

- 4 Hold the shaver so that the shaver head, efficiency cap or soft glide cap is in full contact with your skin (Fig. 7).

- 5 Move the shaver slowly against the direction of hair growth, while pressing lightly (Fig. 8).

Tip: When shaving sensitive areas, stretch the skin with your free hand. For shaving underarms, put your hand on the back of your head to stretch the skin (Fig. 9).

Trimming with a Comb

- ▶ Use the trimming comb to trim hairs to a length of 1/8 in./3mm.

- 1 Be certain shaver is OFF.
- 2 Attach the trimming comb onto the shaving head.
- 3 Press the on/off button to switch on the shaver (Fig. 6).
- 4 Stretch skin taut with one hand and place the comb on the skin making sure the flat part of the comb is in full contact with your skin. Move the comb slowly against the direction of hair growth.

Tip: Since not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).

- 5 Regularly remove cut hair from the comb.

- 6 Clean the shaving head and comb after each use.

Cleaning

- ▶ Always clean your shaver and attachments after each use.
- ▶ Always switch shaver OFF, unplug and remove power cord before cleaning.
- ▶ Never clean, remove or replace shaving head while motor is on.
- ▶ Do not apply pressure to shaving head. Do not touch foil with hard objects as this may dent or damage foil or cutter.
- ▶ Do not use shaver if foil is damaged or broken. Skin injury may occur.
- ▶ Do not use compressed air, abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

- 1** Be certain shaver is OFF.
- 2** Press the release button and pull the shaving head off the handle (Fig. 10).
- 3** Pull the cutting unit out of the shaving head (Fig. 11).
- 4** Clean the cutting unit, foil, cutters and inside of the shaving head with the cleaning brush. Also brush away any hairs that have collected under the trimmers.

To avoid damage, never use a brush to clean the shaving foil.

- 5** You can also rinse the cutting unit, comb, skin stretcher cap, soft glide cap and inside the shaving head under warm tap water.
- 6** Allow all parts to air dry thoroughly.
- 7** Put the cutting unit back into the shaver head (click).
- 8** For best shaving performance, it is suggested to lightly oil shaving head every six weeks by spreading a drop of mineral oil over the foil and trimmers.

Replacing the Shaving Head Cutting Unit

- ▶ If the foil and cutters are worn or damaged, do not continue to use the shaver.
- ▶ A worn or damaged cutting unit should only be replaced with an original Philips cutting unit which is available at www.philips.com/store or call 1-800-243-7884 for assistance.
- ▶ The cutting unit is a precision part. Handle with care.

- 1** Always switch shaver OFF, remove the power cord from the outlet and shaver before replacing the cutting unit.
- 2** Press the release button and pull the shaving head off the handle (Fig. 10).
- 3** Pull the cutting unit out of the shaving head (Fig. 11).
- 4** Place a new cutting unit into the shaving head (click).
- 5** Attach the shaving head back onto the handle (Fig. 3).

After replacing the cutting unit, check to make sure the cutting unit and shaving head are firmly attached before using shaver.

This shaver has no other user-serviceable parts. For assistance, call 1-800-243-7884.

Storage

- ▶ Be sure shaver is turned OFF. Remove cord from outlet and shaver before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap cord around shaver when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ Store the shaver and attachments in the pouch provided.

Accessories

- ▶ For maximum shaver performance replace the shaving head cutting unit once a year.
- ▶ Replacement Shaving Head Cutting Unit Model BRL384-Philips Replacement Shaving Head Cutting Unit
- ▶ Replacement Parts may be purchased on our website www.philips.com/store

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-7884

Online information is available 24 hours a day, 7 days a week.

PHILIPS

SatinShave



BRL140

Rechargeable Cordless
Electric Shaver



Always here to help you

Register your product and get support at www.philips.com/welcome



4222 003 0128 2

Disposal

- ▶ This Philips shaver contains a lithium-ion battery which must be disposed of properly (Fig. 12).
- ▶ Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbrcc.com for battery drop-off locations.
- ▶ For assistance, visit our website, www.philips.com/support or call: 1-800-243-7884.

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips product, Models BRL140 (except foil and cutters) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com or call 1-800-243-7884 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Consumer Lifestyle
A division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS is a registered trademark of Koninklijke Philips Electronics N.V.

© 2016 Philips Electronics North America Corporation. All Rights Reserved.

PHILIPS

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your Philips Shaver send the product back and we'll refund you the full purchase price.

The Shaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.

The Shaver must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-7884 for assistance.

Delivery of refund check will occur 6-8 weeks AFTER receipt of returned product.