

EN User manual	LV Lietotāja rokasgrāmata
RU Руководство по пользованию	IT Istruzioni d'uso
CS Původní pro uživatele	RO Manual de utilizare
DE Gebrauchsanleitung	RU Руководство по пользованию
IT Istruzioni d'uso	SK Pôvodný návod
FR Feuilleton d'utilisateur	SL Uporabniški priročnik
KU Karişimlariň uluşmasy	SR Koristićni priročnik
LT Vartotojų vadovas	UK Посібник користувача

PHILIPS



5 Additional styling tips

- You want to add more volume to your hair, wrap your hair from the roots to the tips, ensuring that hair is spread evenly across the barrel. When wrapping your hair from the roots, you can either extract the bristles to secure your hair in position, or retract the bristles for faster styling. To avoid unnecessary burns, remember to practice using with the bristles fully retracted.
- Always apply hair fixation spray after styling.
- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Remove hair and dust from the appliance.
- Clean the appliance with a damp cloth.
- Keep the appliance in a safe and dry place free from moisture.
- Do not allow hair to catch the hanging loop (D).

Specifications are subject to change without notice
© 2014 Koninklijke Philips N.V.
All rights reserved.
3140 035 3703

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not be played with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into openings to avoid electric shock.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or parts other than hot and avoid contact with the skin.

- Always place the appliance on a heat-resistant, stable flat surface.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.

- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.

- Keep the barrel clean and free of dust and styling products such as mousse, spray and gel.
- The barrel has a layer of coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Our product is designed and manufactured with high quality materials and components, which can be recycled and reused. When the crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products.

Philips 3800 styling brush allows you to quickly and easily create soft curls and waves while caring for your hair. Heated 38mm barrel releases styling results, and repairs brittle, damaged hair. Always use the brush with the correct styling technique. Please refer to the user manual for more information.

3 Overview

- Brush: Rotating Barrel
- Control: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch

4 Style your hair

Preparation for your hair: Apply a heat protection spray on wet hair before drying it.

- Apply heat hair fixation spray before styling with heated styling brush.
- Apply heat hair fixation spray before styling with heated styling brush.

Connect the plug to a power supply socket. Slide the on/off switch (D) to the 'on' position.

Place the appliance on a heat-resistant surface. After 60 seconds the appliance is ready for use.

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).



5 Additional styling tips

- You want to add more volume to your hair, wrap your hair from the roots to the tips, ensuring that hair is spread evenly across the barrel. When wrapping your hair from the roots, you can either extract the bristles to secure your hair in position, or retract the bristles for faster styling. To avoid unnecessary burns, remember to practice using with the bristles fully retracted.
- Always apply hair fixation spray after styling.
- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Remove hair and dust from the appliance.
- Clean the appliance with a damp cloth.
- Keep the appliance in a safe and dry place free from moisture.
- Do not allow hair to catch the hanging loop (D).

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not be played with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into openings to avoid electric shock.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or parts other than hot and avoid contact with the skin.

- Always place the appliance on a heat-resistant, stable flat surface.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.

- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.

- Keep the barrel clean and free of dust and styling products such as mousse, spray and gel.
- The barrel has a layer of coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Our product is designed and manufactured with high quality materials and components, which can be recycled and reused. When the crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products.

Philips 3800 styling brush allows you to quickly and easily create soft curls and waves while caring for your hair. Heated 38mm barrel releases styling results, and repairs brittle, damaged hair. Always use the brush with the correct styling technique. Please refer to the user manual for more information.

3 Overview

- Brush: Rotating Barrel
- Control: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch

4 Style your hair

Preparation for your hair: Apply a heat protection spray on wet hair before drying it.

- Apply heat hair fixation spray before styling with heated styling brush.
- Apply heat hair fixation spray before styling with heated styling brush.

Connect the plug to a power supply socket. Slide the on/off switch (D) to the 'on' position.

Place the appliance on a heat-resistant surface. After 60 seconds the appliance is ready for use.

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).


Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

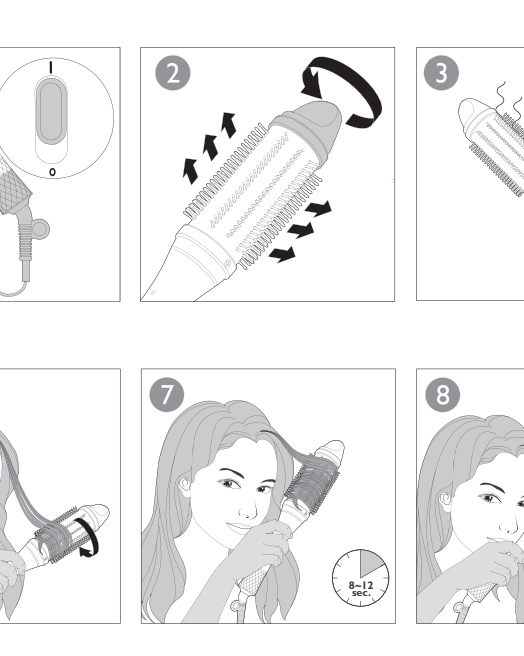

5 Additional styling tips

- You want to add more volume to your hair, wrap your hair from the roots to the tips, ensuring that hair is spread evenly across the barrel. When wrapping your hair from the roots, you can either extract the bristles to secure your hair in position, or retract the bristles for faster styling. To avoid unnecessary burns, remember to practice using with the bristles fully retracted.
- Always apply hair fixation spray after styling.
- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Remove hair and dust from the appliance.
- Clean the appliance with a damp cloth.
- Keep the appliance in a safe and dry place free from moisture.
- Do not allow hair to catch the hanging loop (D).

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not be played with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into openings to avoid electric shock.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or parts other than hot and avoid contact with the skin.

- Always place the appliance on a heat-resistant, stable flat surface.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.

- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.

- Keep the barrel clean and free of dust and styling products such as mousse, spray and gel.
- The barrel has a layer of coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Our product is designed and manufactured with high quality materials and components, which can be recycled and reused. When the crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products.

Philips 3800 styling brush allows you to quickly and easily create soft curls and waves while caring for your hair. Heated 38mm barrel releases styling results, and repairs brittle, damaged hair. Always use the brush with the correct styling technique. Please refer to the user manual for more information.

3 Overview

- Brush: Rotating Barrel
- Control: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch

4 Style your hair

Preparation for your hair: Apply a heat protection spray on wet hair before drying it.

- Apply heat hair fixation spray before styling with heated styling brush.
- Apply heat hair fixation spray before styling with heated styling brush.

Connect the plug to a power supply socket. Slide the on/off switch (D) to the 'on' position.

Place the appliance on a heat-resistant surface. After 60 seconds the appliance is ready for use.

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).


Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

Turn the barrel rotation knob (D) to 'fly extract the bristles' (D).

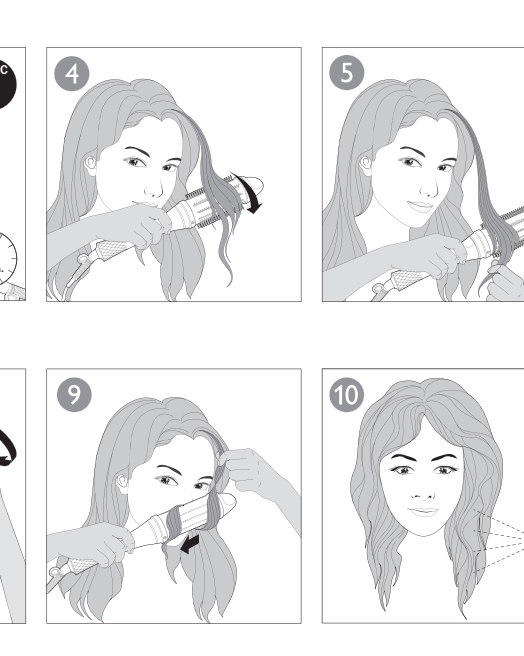

5 Additional styling tips

- You want to add more volume to your hair, wrap your hair from the roots to the tips, ensuring that hair is spread evenly across the barrel. When wrapping your hair from the roots, you can either extract the bristles to secure your hair in position, or retract the bristles for faster styling. To avoid unnecessary burns, remember to practice using with the bristles fully retracted.
- Always apply hair fixation spray after styling.
- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Remove hair and dust from the appliance.
- Clean the appliance with a damp cloth.
- Keep the appliance in a safe and dry place free from moisture.
- Do not allow hair to catch the hanging loop (D).

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not be played with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into openings to avoid electric shock.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.

- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or parts other than hot and avoid contact with the skin.

- Always place the appliance on a heat-resistant, stable flat surface.
- Avoid the mains cord from coming into contact with the hot parts of the appliance.

- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.

- Keep the barrel clean and free of dust and styling products such as mousse, spray and gel.
- The barrel has a layer of coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Our product is designed and manufactured with high quality materials and components, which can be recycled and reused. When the crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EU.

Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products. Please inform yourself about the local separate collection system for household electronic products.

Philips 3800 styling brush allows you to quickly and easily create soft curls and waves while caring for your hair. Heated 38mm barrel releases styling results, and repairs brittle, damaged hair. Always use the brush with the correct styling technique. Please refer to the user manual for more information.

3 Overview


- Brush: Rotating Barrel
- Control: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch
- Power: On/Off Switch

4 Style your hair

Preparation for your hair: Apply a heat protection spray on wet hair before drying it.

- Apply heat hair fixation spray before styling with heated styling brush.
- Apply heat hair fixation spray before styling with heated styling brush.

Connect the plug to a power supply socket. Slide the on/off switch (D) to the 'on' position.

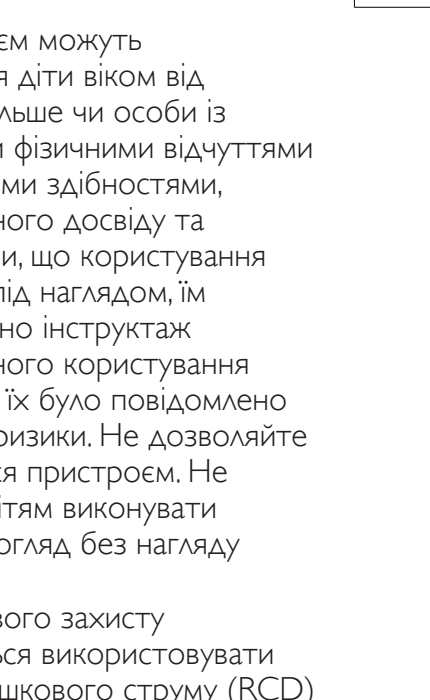

- | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|-----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 | 79 | 80 | 81 | 82 | 83 | 84 | 85 | 86 | 87 | 88 | 89 | 90 | 91 | 92 | 93 | 94 | 95 | 96 | 97 | 98 | 99 | 100 |
|---|---|---|---|---|---|---|---|---|-----|