


Register your product and get support at
www.philips.com/welcome


S520, S510



PHILIPS

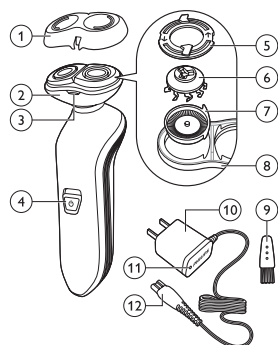

4

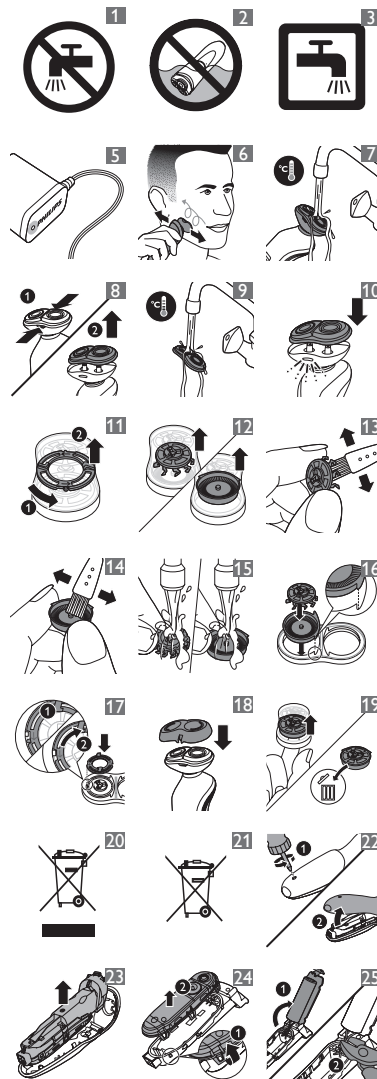

ENGLISH

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the adapter dry (Fig. 1).

Warning

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the appliance before you clean it under the tap.

Caution

- Never immerse the appliance in water (Fig. 2).
- Do not use the appliance in the bath or in the shower.
- Never use water hotter than 80°C to rinse the shaver.
- Do not use the appliance, adapter or any other part if it is damaged, as this may cause injury. Always replace a damaged adapter or part with one of the original type.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Compliance with standards

- The appliance complies with the internationally approved IEC safety regulations and can be safely cleaned under the tap (Fig. 3).
- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The adapter is equipped with an automatic voltage selector and is suitable for mains voltages ranging from 100 to 240 volts.
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.

General description (Fig. 4)

- 1 Protection cap
- 2 Shaving unit with shaving head holder
- 3 Shaving head holder release button
- 4 On/off slide
- 5 Retaining ring
- 6 Cutter
- 7 Guard
- 8 Shaving head holder
- 9 Cleaning brush
- 10 Adapter
- 11 Charging light
- 12 Small plug

Charging

It takes approx. 10 hours to fully charge the battery.

S510: a fully charged shaver provides up to 20 shaving minutes.

S520: a fully charged shaver provides up to 25 shaving minutes.

If you have a heavy beard, the shaver may provide less shaving minutes. The number of shaving minutes may also vary over time, depending on your shaving behaviour, cleaning habits and beard type.

Charging indication

- When the shaver is charging, the light on the adapter lights up (Fig. 5).

Charging

Do not charge the shaver in the packaging.

- 1 Switch off the shaver.
- 2 Put the small plug in the shaver.
- 3 Put the adapter in the wall socket.

www.philips.com

100% recycled paper
 100% 循环再生纸

4222.002.5698.1



- ▶ The light on the adapter lights up to show that the shaver is charging.

Note: The light on the adapter does not change colour and does not go out when the shaver is fully charged.

Using the shaver

Note: You can use this shaver while it is connected to the mains. However, it does not operate from the mains when the battery is empty. In this case, first charge the shaver for at least 1 hour.

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system.

We advise you to shave regularly (at least 3 times a week) for a period of 3 weeks to allow your skin to adapt to the new shaver. During this period, use your new electric shaver exclusively and do not use other shaving methods. If you use different shaving methods, it is more difficult for your skin to adapt to the new shaving system.

- 1 Move the on/off slide upwards to switch on the shaver.
- 2 Move the shaving heads over your skin. Make both straight and circular movements (Fig. 6).
- 3 Move the on/off slide downwards to switch off the shaver.
- 4 Clean the shaver after every shave (see chapter 'Cleaning and maintenance').

Cleaning and maintenance

Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance and its accessories.

- Clean the shaver after every shave.
- Clean the shaving heads frequently with Philips Shaving Head Cleaning Spray (HQ110) for optimal shaving performance.
- You can clean the outside of the shaver with a damp cloth. Do not clean the shaving unit with a cloth.

Cleaning the shaving unit

Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

- 1 Switch off the shaver.
 - 2 Rinse the shaving unit under a hot tap for some time (Fig. 7).
- Note: You can also clean the shaving unit with the cleaning brush supplied.*
- 3 After rinsing the appliance under the tap, hold it upright for 10-15 seconds to allow water to run out of the bottom.
 - 4 Press the release buttons on the shaving unit (1) and pull the shaving head holder off the shaving unit (2). (Fig. 8)

- 5 Rinse the shaving head holder under a hot tap for 30 seconds (Fig. 9).

Note: You can also clean the shaving head holder with the cleaning brush supplied.

- 6 Carefully shake off excess water and let the shaving head holder dry.

Never dry the shaving head holder with a towel or tissue, as this may damage the shaving heads.

- 7 Reattach the shaving head holder to the shaving unit ('click') (Fig. 10).

Extra-thorough cleaning method

- 1 Switch off the shaver.
- 2 Press the release buttons on the shaving unit (1) and pull the shaving head holder off the shaving unit (2) (Fig. 8).
- 3 Turn the retaining ring anticlockwise (1) and lift it off the shaving head (2) (Fig. 11).

Repeat this process for the other retaining ring.

- 4 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard. (Fig. 12)

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

- 5 Clean the cutter with the cleaning brush supplied (Fig. 13).
- 6 Clean the inside of the guard. (Fig. 14)
- 7 After cleaning with the brush, clean the cutter and guard under the tap (Fig. 15).
- 8 Place the cutter back into the guard.
- 9 Put the shaving heads back into the shaving head holder (Fig. 16).

Note: Make sure the projections of the shaving heads fit exactly into the recesses.

- 10 Place the retaining ring on the shaving head (1) and turn it clockwise (2) to reattach the retaining ring. (Fig. 17)

The retaining ring is fixed properly if the two wings of the retaining ring are located exactly under the projections of the shaving head holder.

Repeat this process for the other retaining ring.

Note: The shaving heads and retaining ring should be firmly set in place before closing the shaving unit.

- 11 Reattach the shaving head holder to the shaving unit ('click'). (Fig. 10)

Note: If the shaving unit does not close smoothly, check if you have positioned the shaving heads properly and if the retaining rings are fixed properly.

Storage

Note: Make sure the shaving unit is dry before you store the shaver.

- 1 Put the protection cap on the shaver after use to prevent damage and to avoid dirt accumulation in the shaving heads (Fig. 18).

Replacement

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads right away.

Only replace the shaving heads with original SH30 Philips shaving heads. See also chapter 'Ordering accessories'.

- 1 Switch off the shaver.
- 2 Press the release buttons on the shaving unit and pull the shaving head holder off the shaving unit (Fig. 8).
- 3 Turn the retaining ring (1) anticlockwise (2) and lift it off the shaving head (3) (Fig. 11). Repeat this process for the other retaining ring.
- 4 Remove the shavings heads from the shaving head holder and throw them away (Fig. 19).
- 5 Place new shaving heads in the holder (Fig. 16).

Note: Make sure the projections of the shaving heads fit exactly into the recesses.

- 6 Place the retaining ring on the shaving head (1) and turn it clockwise (2) to reattach the retaining ring (Fig. 17).

The retaining ring is fixed properly if the two wings of the retaining ring are located exactly under the projections of the shaving head holder.

Repeat this process for the other retaining ring.

- 7 Reattach the shaving head holder to the shaving unit ('click') (Fig. 10).

Note: If the shaving unit does not close smoothly, check if you have positioned the shaving heads properly and if the retaining rings are fixed properly.

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country.

The following accessories are available:

- SH30 Philips shaving heads
- HQ110 Philips Shaving Head Cleaning Spray

Recycling

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 20).
- The built-in rechargeable shaver battery contains substances that may pollute the environment. Always remove the battery before you discard or hand in the shaver at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way (Fig. 21).

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the shaver. Make sure the rechargeable battery is completely empty when you remove it.

Be careful, the battery strips are sharp.

- 1 Undo the screw in the back panel of the shaver with a screwdriver (1) and remove the back panel (2) (Fig. 22).
- 2 Bend the hooks aside and remove the power unit (Fig. 23).
- 3 Break the snap hooks (1) and remove the front panel of the power unit (2) (Fig. 24).
- 4 Take out the battery holder (1) and cut the battery tags with a pair of cutting pliers (2) (Fig. 25).
- 5 Remove the rechargeable battery.

Guarantee and support

If you need information or support, please visit www.philips.com/support or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see chapter 'Replacement').
	The shaving heads are dirty.	Clean the cutters and guards with the cleaning brush supplied (see chapter 'Cleaning and maintenance', section 'Extra-thorough cleaning method').
	Long hairs obstruct the shaving heads.	Clean the cutters and guards with the cleaning brush supplied (see chapter 'Cleaning and maintenance', section 'Extra-thorough cleaning method').
The shaver does not work when I press the on/off button.	The rechargeable battery is empty.	Recharge the battery (see chapter 'Charging').

Problem	Possible cause	Solution
	The temperature of the shaver is too high. In this case, the shaver does not work.	Let the shaver cool down. As soon as the temperature of the shaver has dropped sufficiently, you can switch on the shaver again.
My skin is irritated after shaving.	Your skin needs time to get used to the Philips shaving system.	Skin irritation during the first 2-3 weeks of use is possible. After this period, the skin irritation usually disappears.
	The shaving heads are damaged or worn.	Replace the shaving heads (see chapter 'Replacement').
The rotation speed of the shaving heads is lower than usual.	Too much dirt has collected in the shaving heads.	Clean the shaving heads. See chapter 'Cleaning and maintenance'.
	The rechargeable battery is low.	Recharge the battery. See chapter 'Charging'.
The shaving heads do not stay in place.	You did not fix the retaining rings properly.	The retaining ring is fixed properly if the two wings of the retaining ring are located exactly under the projections of the shaving head holder.

Problem	Possible cause	Solution
S510: After fully charging the shaver, it provides less than 20 shaving minutes.	If you have a heavy beard, the shaver may provide less than 20 shaving minutes. The number of shaving minutes may also vary over time, depending on your shaving behaviour; cleaning habits and beard type.	
S520: After fully charging the shaver, it provides less than 25 shaving minutes.	If you have a heavy beard, the shaver may provide less than 25 shaving minutes. The number of shaving minutes may also vary over time, depending on your shaving behaviour; cleaning habits and beard type.	

繁體中文

簡介

恭喜您購買本產品並歡迎加入飛利浦！請於 www.philips.com/welcome 註冊您的產品，以善用飛利浦提供的支援。

重要事項

在使用本產品前，請先仔細閱讀本使用手冊，並保留使用手冊以供日後參考。

危險

- 請保持轉換器乾燥。(圖 1)

警示

- 轉換器內含一個變壓器。請勿切斷轉換器而以其他插頭取代，否則會造成危險。
- 本產品不適合供下列人士(包括兒童)使用：身體官能或心智能力退化者，或是經驗與使用知識缺乏者。他們需要有負責其安全的人員在旁監督，或指示產品的使用方法，方可使用。
- 請勿讓孩童使用本產品或將本產品當成玩具。
- 在水龍頭下沖洗本產品之前，請先拔掉產品電源插頭。

警告

- 切勿將本產品浸泡於水中。(圖 2)
- 請勿在泡澡或淋浴時使用本產品。切勿使用超過 80°C 的熱水沖洗電鬍刀。
- 如有損壞情況，請勿繼續使用該產品、轉換器或任何其他零件，否則可能導致受傷。轉換器或零件如有受損，請務必以原型號更換之。
- 絕對不可使用壓縮空氣、鋼絲絨、磨蝕性的清潔劑或侵蝕性的液體(例如汽油或丙酮)清潔本產品。
- 在您沖洗時，水可能會從電鬍刀底部的插孔流出。此為正常現象，不會造成危險，因為所有的電子零件都密封於電鬍刀內的電源裝置中。

符合標準

- 本產品符合國際公認的 IEC 安全規範，可以直接在水龍頭之下以自來水安全清洗。(圖 3)
- 本飛利浦產品符合所有電磁波暴露的相關適用標準和法規。

一般

- 本轉換器配備有自動電壓選擇器，適用 100 到 240 伏特的插座電壓。
- 轉換器可將 100-240 伏特的電壓轉換為低於 24 伏特的安全低電壓。

一般說明 (圖 4)

- 1 保護蓋
- 2 附電鬍刀刀頭固定座的電鬍刀組
- 3 電鬍刀刀頭固定座釋放鈕
- 4 On/Off 滑動開關
- 5 固定環
- 6 刀具
- 7 刀網
- 8 電鬍刀刀頭固定座
- 9 清潔刷
- 10 轉換器
- 11 充電指示燈
- 12 小插頭

充電

產品充飽電約需要 10 小時。
S510：充飽電的電鬍刀可刮鬍 20 分鐘。
S520：充飽電的電鬍刀可刮鬍 25 分鐘。

若您的鬚鬚濃密，電鬍刀可提供的刮鬍時間可能較少。此外，取決於您的刮鬍方式、清潔習慣和鬚鬚類型，可使用時間也可能會隨著時日改變。

充電指示燈

- 電鬍刀充電時，轉換器的指示燈會亮起。(圖 5)

充電

請勿將電鬍刀置於包裝內充電。

- 1 請關閉電鬍刀電源。
- 2 將小插頭插上電鬍刀。
- 3 將轉換器插入插座。
▶ 轉換器的指示燈亮起時，表示電鬍刀正在充電中。

注意：電鬍刀充飽電力後，轉換器指示燈不會變色，也不會熄滅。

使用本電鬍刀

注意：您可在本電鬍刀連接電源的情況下使用電鬍刀。然而，當電池沒電時，連接電源將無法操作電鬍刀。在此情況下，第一次為電鬍刀充電至少需要 1 小時。

刮鬍

皮膚適應期

您第一次刮鬍的結果可能不如您所預期，皮膚甚至可能稍微刺痛。這是正常現象。您的皮膚與鬍鬚需要時間適應任何新的刮鬍系統。

我們建議您定期刮鬍 (每週至少 3 次) 為期 3 週，讓您的肌膚適應新的電鬍刀。這段期間，請只使用您的新電鬍刀，不要使用其他的刮鬍方式。如果您使用不同的刮鬍方式，您的皮膚可能較難適應新的刮鬍系統。

1 將 On/Off 開關往上推，即可開啟電鬍刀電源。

2 將電鬍刀刀頭在皮膚上移動，請同時用直線及畫圓的方式來移動。(圖 6)

3 將 On/Off 開關往下推，即可關閉電鬍刀電源。

4 每次刮鬍後，請清潔本電鬍刀 (請參閱「清潔與維護」單元)。

清潔與維護

絕對不可使用壓縮空氣、鋼絲絨、磨蝕性的清潔劑或侵蝕性的液體 (例如汽油或丙酮) 清潔本產品與其配件。

- 每次刮鬍後均需清潔電鬍刀。
- 為得到最佳的刮鬍性能，請經常使用飛利浦電鬍刀刀頭噴霧清潔劑 (HQ110) 清潔電鬍刀刀頭。
- 您可以使用濕布清潔電鬍刀外側。請勿用布清潔電鬍刀組。

清洗電鬍刀組

請小心使用熱水。隨時檢查熱水是否太燙，以避免手部燙傷。

1 請關閉電鬍刀電源。

2 將電鬍刀組以熱水沖洗一段時間。(圖 7)

注意：您也可以用品所附的清潔刷清潔電鬍刀組。

3 在水龍頭下沖洗本產品，將其直立 10-15 秒，讓水從底部流出。

4 按下電鬍刀組的釋放鈕 (1) 並將電鬍刀刀頭固定座從電鬍刀組取下 (2)。(圖 8)

5 將電鬍刀刀頭固定座放在熱水龍頭下沖洗 30 秒。(圖 9)

注意：您也可以用品所附的清潔刷清潔電鬍刀刀頭固定座。

6 仔細用乾多餘的水份之後，讓電鬍刀刀頭固定座乾燥。

切勿使用毛巾或紙巾擦乾電鬍刀刀頭固定座，因為此舉可能會造成電鬍刀刀頭損害。

7 將電鬍刀刀頭固定座重新接上電鬍刀組 (會聽見「喀噠」一聲)。(圖 10)

超徹底清潔方法

1 請關閉電鬍刀電源。

2 按下電鬍刀組的釋放鈕 (1) 並將電鬍刀刀頭固定座從電鬍刀組取下 (2)。(圖 8)

3 將固定環以逆時針方向轉動 (1)，然後將其自電鬍刀刀頭拿起 (2)。(圖 11)

就其他固定環重複此項程序。

4 從電鬍刀刀頭固定座上取下電鬍刀刀頭。每個電鬍刀刀頭均含刀片和刀網。(圖 12)

注意：因為刀片及刀網是成對的一組，請勿一次清潔多組。如果您不小心將刀片放進錯誤的電鬍刀刀網中，可能要花幾週的時間才能恢復最理想的刮鬍效果。

5 使用隨附於電鬍刀的清潔刷來清潔刀片。(圖 13)

6 清潔刀網內部。(圖 14)

7 以小刷子清潔之後，將刀片及刀網置於水龍頭下沖洗。(圖 15)

8 將刀片放回刀網中。

9 將電鬍刀刀頭裝回電鬍刀刀頭固定座。(圖 16)

注意：確定電鬍刀刀頭的凸出部分準確地安裝於凹處。

10 將固定環放在電鬍刀刀頭上 (1) 並以順時針方向轉動 (2)，以重新裝回固定環。(圖 17)

若固定環的兩翼已準確嵌入電鬍刀刀頭固定座的凸出部分下方，則表示固定環已正確固定。就其他固定環重複此項程序。

注意：應先確定電鬍刀刀頭和固定環已妥善固定，再關閉電鬍刀組。

11 將電鬍刀刀頭固定座重新接上電鬍刀組 (會聽見「喀噠」一聲)。(圖 10)

注意：若電鬍刀組無法順利關上，請檢查電鬍刀刀頭安裝位置是否正確，以及固定環是否確實固定。

收納

注意：務必等電鬍刀組乾燥之後再收納電鬍刀。

1 使用後請為電鬍刀蓋上保護蓋以防損壞，並避免污垢累積在電鬍刀刀頭中。(圖 18)

更換

為得到最佳的刮鬍性能，我們建議您請每兩年更換一次電鬍刀刀頭。有損傷的電鬍刀刀頭則請要立即更換。更換電鬍刀刀頭時，限使用原廠 SH30 飛利浦電鬍刀刀頭。亦請參閱「訂購配件」單元。

1 請關閉電鬍刀電源。

2 按下電鬍刀組的釋放鈕，將電鬍刀刀頭固定座從電鬍刀組取下。(圖 8)

3 將固定環 (1) 以逆時針方向旋轉 (2)，然後將其自電鬍刀刀頭拿起 (3)。(圖 11)

就其他固定環重複此項程序。

4 從電鬍刀刀頭固定座上取下電鬍刀刀頭並丟棄。(圖 19)

5 將新的電鬍刀刀頭放入固定座。(圖 16)

注意：確定電鬍刀刀頭的凸出部分準確地安裝於凹處。

6 將固定環放在電鬍刀刀頭上 (1) 並以順時針方向轉動 (2)，以重新裝回固定環。(圖 17)

若固定環的兩翼已準確嵌入電鬍刀刀頭固定座的凸出部分下方，則表示固定環已正確固定。就其他固定環重複此項程序。

7 將電鬍刀刀頭固定座重新接上電鬍刀組 (會聽見「喀噠」一聲)。(圖 10)

注意：若電鬍刀組無法順利關上，請檢查電鬍刀刀頭安裝位置是否正確，以及固定環是否確實固定。

訂購配件

若要購買配件或備用零件，請造訪 www.shop.philips.com/service，或者洽詢您的飛利浦經銷商。您也可以聯絡您所在國家/地區的飛利浦客戶服務中心。備有下列配件可供另外選購：

- SH30 飛利浦電鬍刀刀頭
- HQ110 飛利浦電鬍刀刀頭噴霧清潔劑

回收

- 本產品使用壽命結束時請勿與一般家庭廢棄物一併丟棄。請將該產品放置於政府指定的回收站，此舉能為環保盡一份心力。(圖 20)

- 本電鬍刀使用的充電式電池可能含有會污染環境的物質。將本電鬍刀丟棄或是送到政府指定回收站前，請務必先取出電池，並將電池送到政府指定的電池回收站。若您無法取出電池，也可將本產品帶到飛利浦授權服務中心。服務中心會為您卸下電池，並以對環境無害的方式處理電池。(圖 21)

取出電鬍刀的充電式電池

棄置本電鬍刀前，請先取出充電式電池。當您要取出充電式電池時，請確認其電力已完全耗盡。

電池固定帶非常銳利，請小心。

1 用螺絲起子 (1) 轉開電鬍刀的背板螺絲，拆下背板 (2)。(圖 22)

2 彎折旁邊的扣鉤，然後取出供電裝置。(圖 23)

3 斷開彈簧鉤 (1)，並取下供電裝置的正面護板 (2)。(圖 24)

4 取出電池固定座 (1) 並使用剪鉗 (2) 將電池拉片剪斷。(圖 25)

5 取出充電式電池。

保固與支援

如果您需要資訊或支援，請造訪：www.philips.com/support，或另行參閱全球保證書。

保固限制

電鬍刀刀頭 (刀具和刀網) 由於其耗損性，因此不在全球保固範圍內。

疑難排解

本單元概述您使用本產品時最常遇到的問題。如果您無法利用以下資訊解決您遇到的問題，請造訪 www.philips.com/support 查看常見問題清單，或聯絡您所在國家/地區的飛利浦客戶服務中心。

問題	可能原因	解決方法
電鬍刀不像平常一樣運作。	電鬍刀刀頭毀壞或磨損。	更換電鬍刀刀頭 (請參閱「更換」單元)。
	電鬍刀刀頭髒污。	使用隨附的清潔刷清潔刀具及刀網 (請參閱「清潔與維護」單元的「超徹底清潔方法」小節)。
	長鬍鬚卡住電鬍刀刀頭。	使用隨附的清潔刷清潔刀具及刀網 (請參閱「清潔與維護」單元的「超徹底清潔方法」小節)。
我按下開/關 (On/Off) 按鈕時，電鬍刀沒有反應。	充電式電池沒電。	將電池重新充電 (請參閱「充電」單元)。

電鬍刀過熱。在此情況下，電鬍刀將無法使用。

讓電鬍刀冷卻。等到電鬍刀充分降溫，您就能再度啟動電鬍刀的電源。

問題	可能原因	解決方法
刮鬚之後，皮膚感到刺痛。	您的皮膚需要一些時間才能適應飛利浦電鬚刀系統。	開始使用的第 2 到 3 週，皮膚可能會有過敏現象。過了這段時間，皮膚過敏的症狀通常會消失。

	電鬚刀刀頭毀壞或磨損。	更換電鬚刀刀頭 (請參閱「更換」單元)。
--	-------------	----------------------

電鬚刀刀頭的旋轉速度比平常緩慢。	過多污垢累積在電鬚刀刀頭中。	請清潔電鬚刀刀頭。請參閱「清潔與維護」單元。
------------------	----------------	------------------------

	充電式電池電力不足。	為電池充電。請參閱「充電」單元。
--	------------	------------------

電鬚刀刀頭不穩固。	固定環未妥善固定。	若固定環的兩翼已準確嵌入電鬚刀刀頭固定座的凸出部分下方，則表示固定環已正確固定。
-----------	-----------	--

S510 : 電鬚刀充飽電後，可提供的刮鬚時間少於 20 分鐘。	若您的鬚鬢濃密，電鬚刀的刮鬚時間可能少於 20 分鐘。此外，取決於您的刮鬚方式、清潔習慣和鬚鬢類型，可使用時間也可能會隨著時日改變。	
----------------------------------	--	--

問題	可能原因	解決方法
S520 : 電鬚刀充飽電後，可提供的刮鬚時間少於 25 分鐘。	若您的鬚鬢濃密，電鬚刀的刮鬚時間可能少於 25 分鐘。此外，取決於您的刮鬚方式、清潔習慣和鬚鬢類型，可使用時間也可能會隨著時日改變。	