

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

HP4684

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Only use the appliance on dry hair: Do not use the appliance on artificial hair.
- Keep the hot surfaces of the appliance away from your skin.
- When the appliance is connected to the power, never leave it unattended.
- Always unplug the appliance after use.
- When the appliance is hot, keep it on a heat-resistant surface and never cover the appliance with anything, such as a towel or clothing.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- If you use the appliance on color-treated hair, the curling tongs may stain.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.




EN User manual

AR دليل المستخدم

FA راهنمای کاربر

PHILIPS

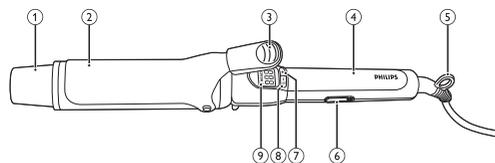

Electromagnetic fields (EMF)

This appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in an official collection point for recycling. By doing this, you help to preserve the environment.



2 Curl your hair

Ensure that you select a temperature setting that is suitable for your hair. Always select a low setting when you use the curler for the first time.

| Hair Type | Temperature Setting |
|---|--------------------------------|
| Thick or coarse | Mid to High (170 °C and above) |
| Fine or medium-textured | Low to Mid (160 °C and below) |
| Pale, blonde, bleached or color-treated | Low (Below 160 °C) |

- 1 Connect the plug to a power supply socket.
- 2 Slide the On/Off switch to | (6) to switch on the appliance.
↳ The default temperature setting is displayed.
- 3 Press the (+) (7) or (-) (8) buttons to select a suitable temperature setting for your hair.
↳ When the curling iron has heated up to the selected temperature, the indication 'READY' (9) is displayed.
- To fix the selected temperature setting, press and hold the (-) (8) button (8) until the lock icon displayed.
- To unlock, press and hold the (-) (8) button until the lock icon disappeared.
- 4 Comb your hair and divide your hair into small sections.
- 5 Press the lever (3) and place a section of hair between the barrel and clip (2).
- 6 Release the lever and slide the barrel to the hair tip.
- 7 Hold the cool tip (1) and the handle (4) of the curling iron, and then wind the section of hair round the barrel from tip to root.
- 8 Hold the curling iron in the position for max. 10 seconds, and then unwind the section of hair until you can open the clip again with the lever.

Note: Do not pull at the curler when you unwind the section, otherwise you would straighten the curl.

- 9 To curl the rest of your hair, repeat steps 5 to 8.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 Clean the appliance and curling tong by damp cloth.
- 4 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (5).

3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

العربية

تهانينا لقبامك بعملية الشراء. وأهلاً بك في Philips! للاستفادة الكاملة من الدعم الذي تقدمه Philips، قم بتسجيل المنتج في www.philips.com/welcome.

1 هام

- اقرأ دليل المستخدم بعناية قبل استخدام الجهاز واحفظه للرجوع إليه مستقبلاً.
- **تحذير:** لا تستخدم هذا الجهاز بالقرب من الماء.
 - عند استخدام هذا الجهاز في الحمام، قم بفصل الطاقة عنه مباشرة بعد استخدامه ذلك أن قربه من الماء يشكل خطراً حتى عندما يكون متوقفاً عن التشغيل.
 - **تحذير:** لا تستخدم هذا الجهاز بالقرب من حوض الاستحمام، أو مرشحة الاغتسال، أو الغسلة أو أي أوعية أخرى تحتوي على ماء.
 - قبل توصيل الجهاز بالكهرباء، تأكد من أن الفولتية المشار إليها على الجهاز متوافقة مع الفولتية المحلية.
 - لا تستخدم الجهاز لأي غرض آخر غير المبين في هذا الدليل.
 - لا تستخدم الجهاز سوى على الشعر الجاف، لا تستخدم الجهاز على الشعر الصناعي.
 - ابق أسطح الجهاز الساخنة بعيداً عن بشرتك.
 - لا تترك الجهاز من دون مراقبة أثناء توصيله بالكهرباء.
 - قم دائماً بفصل الطاقة عن الجهاز بعد الاستخدام.
 - عندما يكون الجهاز ساخناً، ضعه على سطح مقاوم للسخونة ولا تقم أبداً بتغطيته بأي شيء شأن منشفة أو قطعة قماش.



© Royal Philips Electronics N.V. 2011
All rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.



