





## Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

## General description (Fig. 1)

- Full-size hair trimmer
- On/off button
- Socket for small plug
- Nose trimmer
- Hair comb (9mm)
- Stubble comb (1mm)
- Stubble comb (2mm)
- Beard comb (3mm)
- Beard comb (5mm)
- Supply unit
- Small plug
- Cleaning brush
- Pouch

## Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

### Danger

- Keep the supply unit dry (Fig. 2).

### Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

### Caution

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap (Fig. 2).
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

### Electromagnetic fields (EMF)

- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

### General

- The appliance is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100–240 volts to a safe low voltage of less than 24 volts.

### Charging

When the appliance has charged for 16 hour, it has a cordless operating time of up to 60 minutes.

- Make sure the appliance is switched off.
- Insert the small plug into the appliance and put the supply unit in the wall socket (Fig. 3).
- After charging, remove the supply unit from the wall outlet and pull the small plug out of the appliance.

## Using the appliance

Note: Switch off and clean the appliance after each use.

### Detaching and attaching cutting elements

- To detach a cutting element, push upwards against the teeth of the cutting element and take it off the handle (Fig. 4).
- To attach a cutting element, insert the lug of the cutting element into the guiding slot at the front and push the back of the cutting element onto the appliance ('click') (Fig. 5).

### Detaching the nose trimmer

- Place your finger at the back of the attachment and push it upwards, off the handle (Fig. 6).

### Attaching and detaching combs

- To attach any type of comb onto a cutting element, slide the front part of the comb onto the teeth and push the projection at the back of the comb into the appliance ('click') (Fig. 7).
- To detach any type of comb from the cutting element, carefully pull its back part off the appliance and then slide it off the cutting element (Fig. 8).

Note: When trimming for the first time, start by using the comb with the maximum trimming length setting to familiarize yourself with the appliance.

### Turning the appliance on and off

To switch on the appliance, slide the on/off button up (Fig. 9).

To switch off the appliance, slide the on/off button down.

### Attachments for use on beard

#### Full-size hair trimmer

Use the full-size hair trimmer without a comb to trim hair close to the skin (to a length of 1/32in (0.5mm) or to create clean lines around your beard, neck and sideburns.

- To trim hair close to the skin, place the flat side of the cutting element against your skin and make strokes against the direction of hair growth (Fig. 10).
- For contouring, hold the cutting element perpendicular to the skin and move it upwards or downwards with gentle pressure (Fig. 11).

#### Beard combs

Attach a beard comb to the full-size hair trimmer to trim your beard and moustache evenly. The appliance comes with 2 beard combs and 2 stubble combs. The hair length settings are indicated on the combs. The settings correspond to the remaining hair length after trimming.

Comb	mm
Stubble comb	1mm
Stubble comb	2mm
Beard comb	3mm
Beard comb	5mm

- Attach the comb to the full-size hair trimmer.
- To trim the most effective way, move the comb against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin.

### Attachments for use on head

#### Full-size hair trimmer

Use the full-size hair trimmer without a comb to clip the hair on your head very close to the skin (0.5mm) or to contour the neckline and area around the ears.

- To contour the hairline around the ears, comb the hair ends over the ears.
- Tilt the appliance in such a way that only one edge of the cutter blades touches the hair ends when you shape the contours around the ears.
- To contour the nape of the neck or sideburns, turn the appliance and make downward strokes (Fig. 14).
- Move the appliance slowly and smoothly following the natural hairline.

#### Hair combs

Attach the hair comb to the extra-size hair trimmer to evenly trim the hairs on your head. The appliance comes with 1 hair comb. The hair length setting is indicated on the comb. The setting corresponds to the remaining hair length after trimming.

Comb	mm
Hair comb	9mm

- Attach the comb to the extra-size hair trimmer.
- Move the trimmer slowly over the crown from different directions to achieve an even result. Make sure the surface of the comb always stays in contact with the skin.
  - Always move the trimmer against the direction of hair growth (Fig. 15). Press lightly.
  - Make overlapping passes over the head to ensure that all hair that should be cut has been cut.

### Precision attachments for use on face

#### Nose trimmer

Use the nose trimmer to trim your nose hair and ear hair.

- Make sure nasal passages are clean. Make sure outer ear channels are clean and free from wax.
- Do not insert the tip more than 5mm.
- Always clean the attachment after each use.

#### Trimming nose hair

- Gently move the tip in and out of nose while turning it around to remove unwanted hairs (Fig. 17).

#### Trimming ear hair

- Slowly move the tip round the ear to remove hairs that stick out beyond the rim of the ear.

- Gently move the tip in and out of the outer ear channel to remove unwanted hairs (Fig. 17).

## Cleaning

Do not rinse the handle under the tap, only the attachments can be rinsed under the tap.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

### Cleaning after every use

- Turn off the appliance and disconnect from the power outlet.
  - Remove any comb or cutting element from the appliance.
  - Remove any hairs that have accumulated in the hair chamber with the cleaning brush supplied.
  - Clean the cutting element and comb under a warm tap (Fig. 18).
- The handle is not suitable for cleaning under the tap.
- Carefully shake off excess water and let all parts air dry completely.

### Thorough cleaning

- Turn off the appliance and disconnect from the power outlet.
  - Wipe the handle of the appliance with a dry cloth.
  - Remove any comb or cutting element from the appliance.
  - Remove any hairs that have accumulated in the hair chamber with the cleaning brush supplied.
  - Remove any hairs that have accumulated in the cutting elements and/or combs with the cleaning brush supplied.
  - Clean the cutting elements under a warm tap.
- The handle is not suitable for cleaning under the tap.
- Clean the combs under a warm tap (Fig. 19).
  - Carefully shake off excess water and let all parts air dry completely.

## Cleaning the nose trimmer

Clean the nose trimmer immediately after use and when a lot of hair or dirt has accumulated on the nose trimmer head.

- Rinse the nose trimmer head with hot water (Fig. 20).
- Carefully shake off excess water and let all parts air dry completely.

## Storage

- Store the appliance in the pouch supplied.
- Note: Make sure the appliance is dry before you store it in the pouch.

## Ordering accessories

To buy accessories or spare parts, visit [www.shop.philips.com/service](http://www.shop.philips.com/service) or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

## Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

## Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

### Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- Remove the cutting element (Fig. 4).
- Insert the screwdriver in one side in the top to loosen the top part of the housing (Fig. 21).
- Repeat this for the other side (Fig. 22).
- Insert the screwdriver into the created space of the housing. Rotate the screwdriver to open the housing (Fig. 23).
- Remove the back panel (Fig. 24).
- Cut the wires from the battery (Fig. 25).
- Remove the rechargeable battery (Fig. 26).

## Warranty and support

If you need information or support, please visit [www.philips.com/support](http://www.philips.com/support) or read the international warranty leaflet.

### Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.