

PHILIPS

HR2332




User manual	2
用户手册	35

使用产品前请仔细阅读请本用户手册
保留备用




Quick Start Guide/ 快速入门指南

Disassembling and cleaning before first use 首次使用前的拆卸和清洁

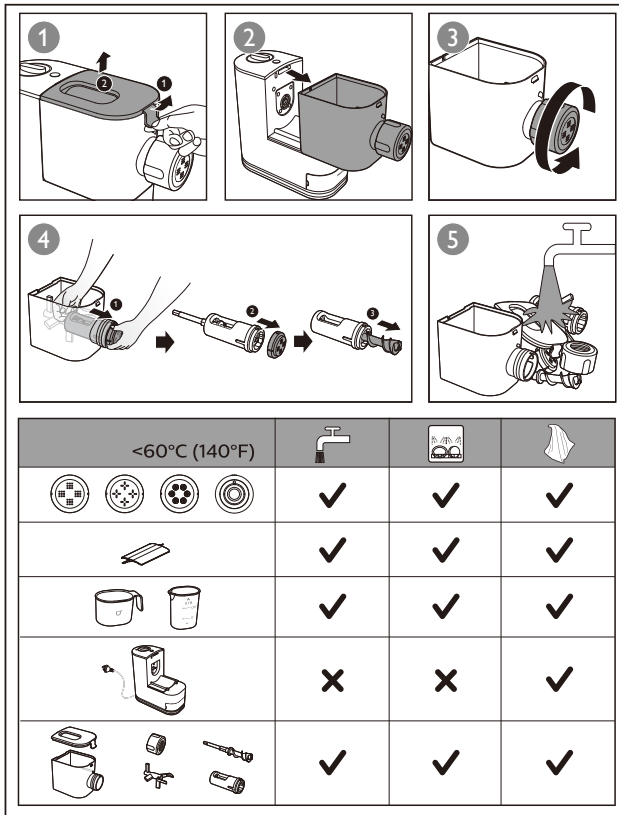

Assembling 组装

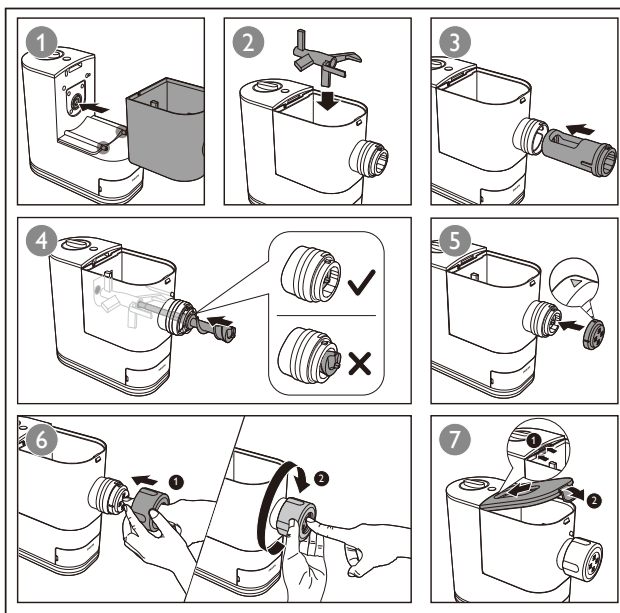

Using the Pasta and noodle maker 使用意面 / 面条机



Table of Contents

Important	6
What's in the box	9
Overview	10
Disassembling and cleaning before first use ...	12
Assembling	14
Using the Pasta and noodle maker	17
Cleaning	25
Storage	28
Troubleshooting	29
Product information	32
Recycling	33
Guarantee and service	34

Important

Safety

Read this user manual carefully before you use the appliance, and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid and do not rinse it under the tap. Use only a moist cloth to clean the motor unit.

Warning

- If the supply cord is damaged, it must be replaced by Philips, its service agent or similarly qualified persons in order to avoid a hazard.
- The maximum amount of flour for each batch is 400g. If you have put more than 400g of flour in the mixing chamber, reduce the amount and make another batch of pasta.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- This appliance is not intended for use by persons (including children) with reduced physical, mental or sensory abilities, or limited experience and knowledge, unless supervised or instructed in the use of the appliance by a person responsible for its safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance if the plug, the mains cord or other parts are damaged or have visible cracks.
- Unplug the appliance when not in use.
- Do not put heavy objects on the appliance.
- Do not move the appliance while it is operating.
- Do not use a dishwasher to clean the appliance.
- Make sure to tighten the front panel knobs during assembly.
- Make sure the appliance is not plugged in when assembling the appliance.
- Pour in the liquid slowly through the water slot after the appliance starts mixing.

Warning

- Do not put any ingredients that are 60°C / 140°F or above into the pasta maker, nor place the pasta maker in surroundings with high temperature (60°C / 140°F), for instance in a high temperature sterilization. This will damage the appliance.
- Never pour water into the mixing chamber before you place the chamber lid onto the chamber.
- Do not pour any liquids into the safety switch hole.
- Do not select the extrusion only program before the dough is mixing complete. Otherwise, this will damage the pasta maker.
- Do not use a scourer, caustic cleaner, or cleaners (for example, gasoline, alcohol, and propanol) to clean the appliance.
- Clean the appliance after each use or the appliance might not operate properly.
- Do not insert any objects into the appliance.
- Take extra caution when cleaning the appliance to avoid getting cut by any sharp edges.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Never reach into the mixing chamber when the appliance is plugged in.
- To prevent a short circuit or an electric shock, do not pour water or any liquid onto the display.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- Before you insert the plug into the power outlet, make sure that the appliance is assembled correctly.

Caution


- Always disconnect the appliance from the supply if it is left unattended and before you assemble, disassemble, store or clean it.
- This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time. Refer to the instructions in the manual.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not use the appliance on an unstable or uneven surface.
- Only use this appliance for its intended purpose as shown in the user manual.
- Do not exceed the quantities and processing times indicated in the table.
- To better protect the lifetime of the appliance, we recommend to stop the device for 15 minutes, if it was used for 45 minutes continuously.
- If you intend to use the appliance continuously, clean the shaping disc with the supplied cleaning tool each time after use. For cleaning ease, do not soak the shaping disc into the water directly.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not put less than 200g or more than 400g of flour in the chamber.
- Noise level: LC – 73dB(A)

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.



Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.
Read this user manual carefully before you install and use the appliance. Save it for future reference.

What's in the box

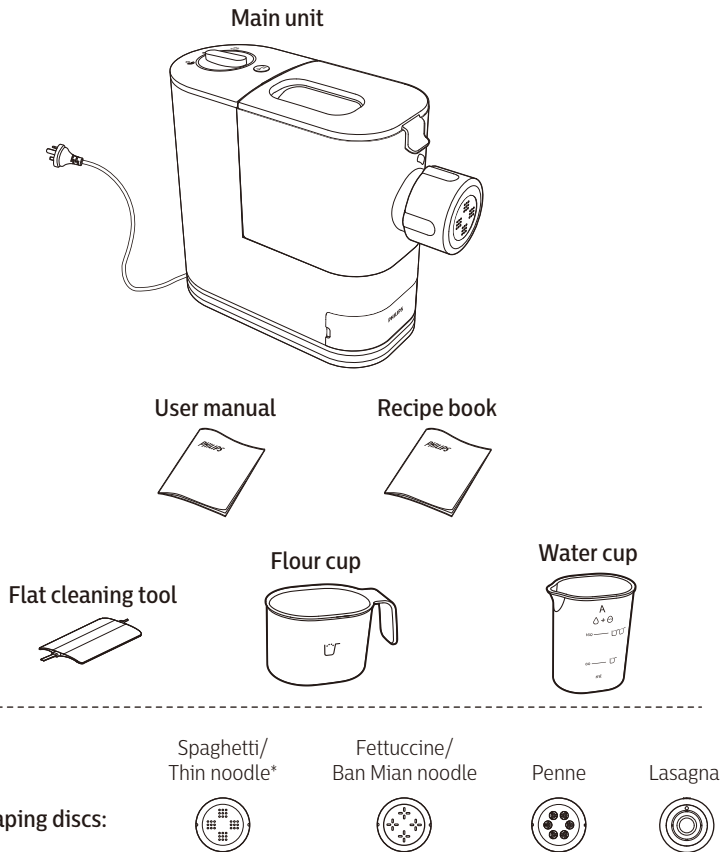


* The spaghetti/thin noodle shaping disc is assembled on the appliance upon purchase.


Overview

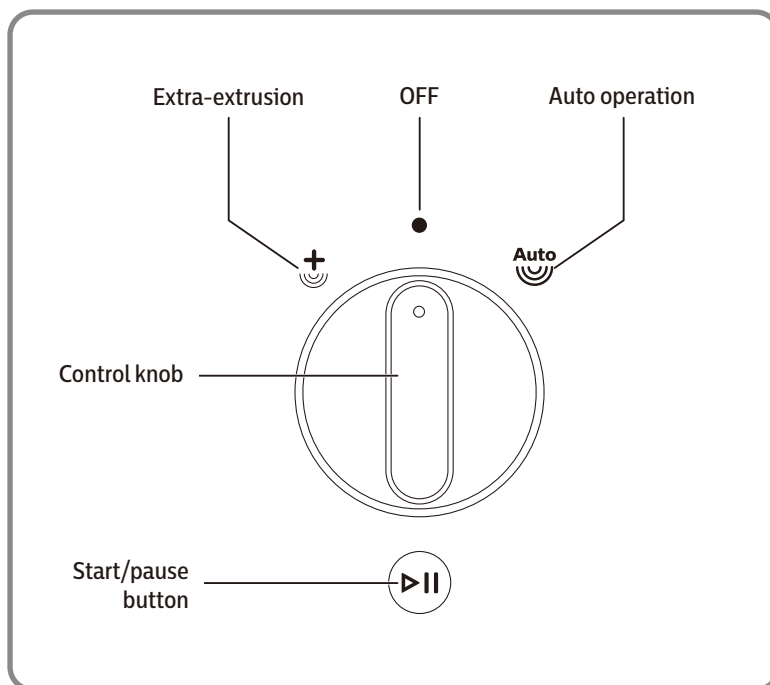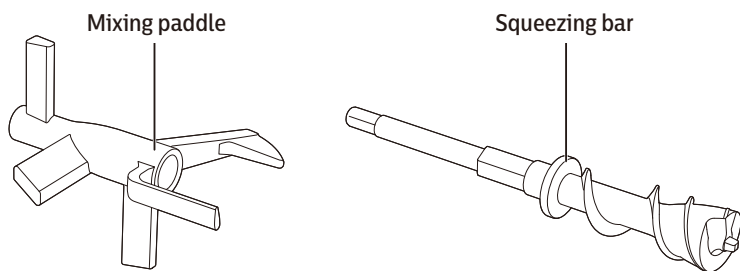



Squeezing tube

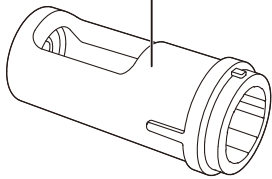

Shaping disc

 

Shaping disc holder

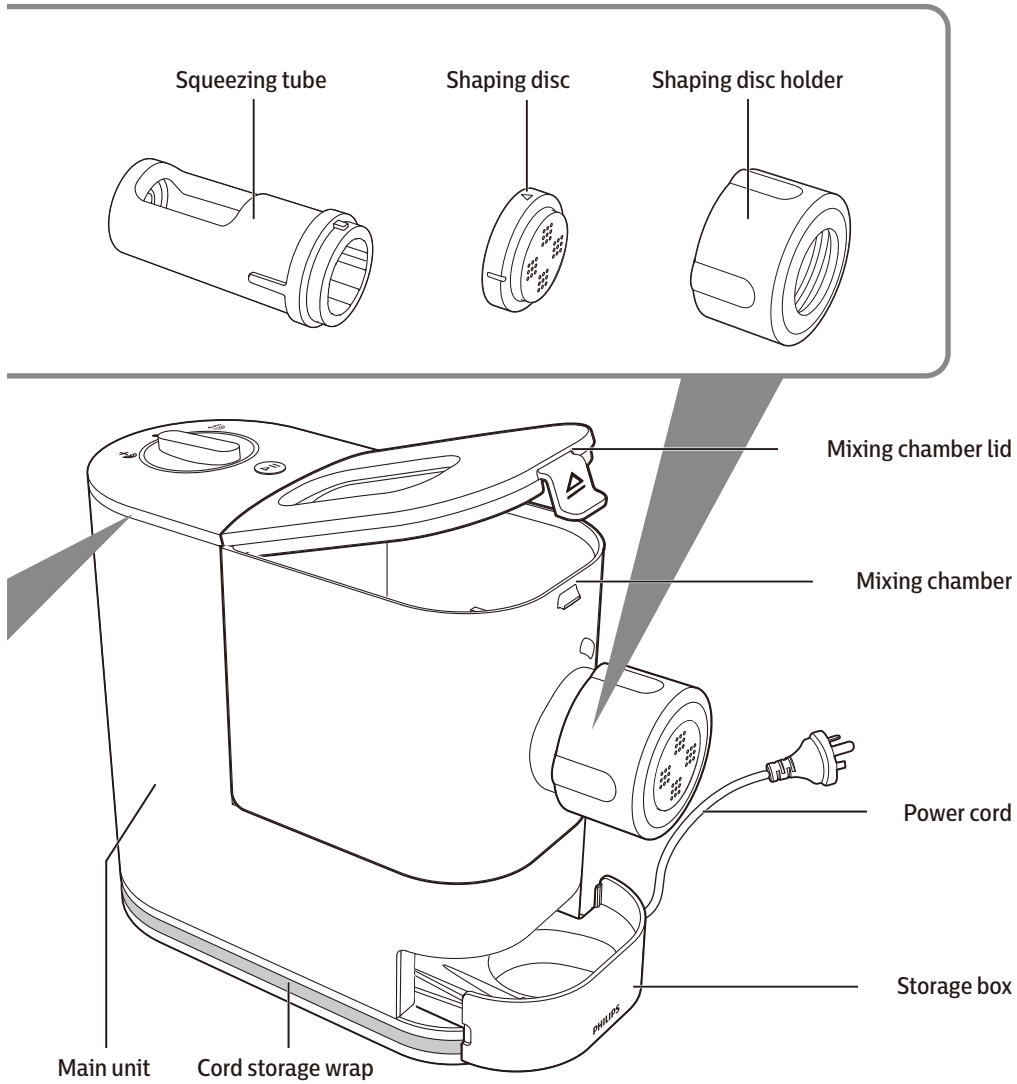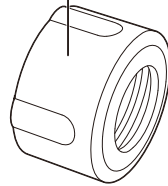

Mixing chamber lid

Mixing chamber

Power cord

Storage box

Main unit


Cord storage wrap

Disassembling and cleaning before first use


Important

- Before using the appliance for the first time, remove and safely discard any packing material and /or promotional labels.
- Take out all detachable parts and accessories, wash and thoroughly dry all parts and accessories (refer to the chapter "Cleaning").
- Do not use water to rinse or soak the main unit, the power cord, or the power plug.
- Do not use a scouring pad or similar cleaners as these will scratch the plastic surface and affect the lifetime of the Pasta and noodle maker.
- The shaping discs and all detachable parts of the appliance are dishwasher safe. When you clean them in a dishwasher, make sure to select the proper program which has a maximum temperature at no higher than 60°C (140°F).
- This appliance is intended for household use only.


- 1 Pull the lid to unlock it and then remove the lid from the mixing chamber.

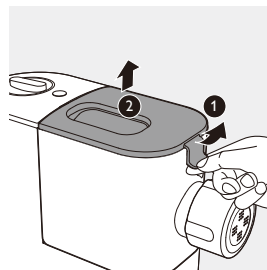


- 2 Slide the mixing chamber off the main unit.

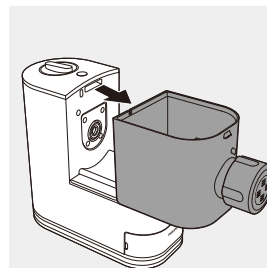


- 3 Turn the shaping disc holder counterclockwise to remove it from the mixing chamber outlet.

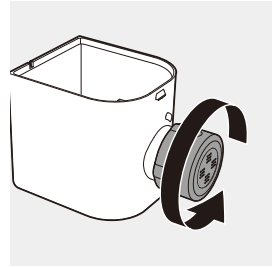


- 4 Put your finger in the mixing chamber and push the squeezing tube outwards to slide it out of the mixing chamber outlet. Detach the shaping disc, and then pull the squeezing bar out of the squeezing tube.

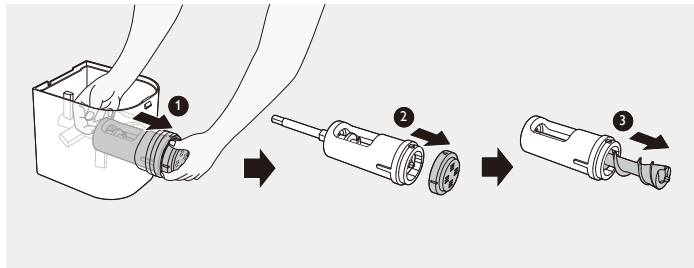

- 5 Take the mixing paddle out of the mixing chamber.

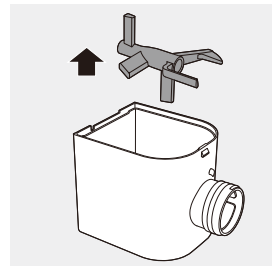

- 6 Clean all detachable parts and accessories, and then wipe them dry.

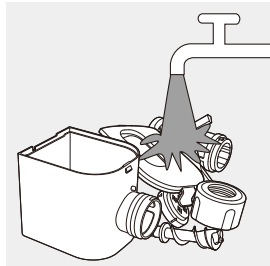

Assembling

Follow below assembling steps to install the Pasta and noodle maker.


Important

- Make sure the appliance is not plugged in during assembly.


- 1 Slide the mixing chamber onto the main unit.

Note:

- Make sure the fixing levers ❶ on the main unit are fitted with the openings on the bottom of the mixing chamber.

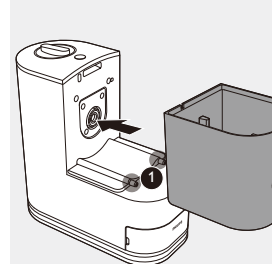


- 2 Put the mixing paddle in the mixing chamber as shown in the illustration.

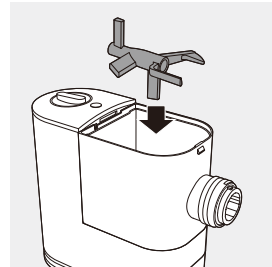

- 3 Insert the squeezing tube into the mixing chamber.

Note:


- Make sure the big opening on the squeezing tube faces up when you insert the tube into the chamber.

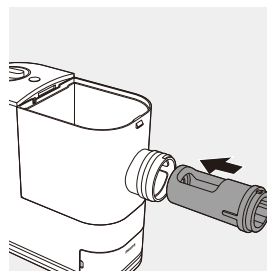

- 4 Insert the squeezing bar into the mixing chamber. Make sure the squeezing bar slides all the way through both the squeezing tube and the mixing paddle and into the shaft in the main unit.

Note:


- Slightly turn the mixing paddle to make sure the squeezing bar is connected correctly with the shaft ① in the main unit.

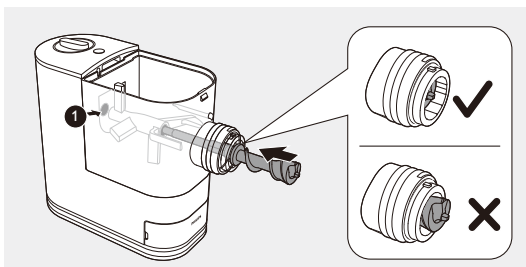


- 5 Attach the shaping disc on the mixing chamber outlet.

Note:


- Make sure the flat side of the shaping disc is facing out.
- Make sure the shaping disc fits into the fixing point on the squeezing bar.
- Make sure the arrow on the shaping disc face upwards when you attach it on the mixing chamber outlet.

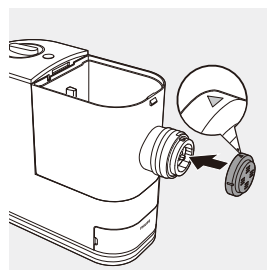

- 6 Press the shaping disc through the opening of the shaping disc holder, and then assemble the holder on the mixing chamber outlet. Turn the holder clockwise to firmly lock it in place.

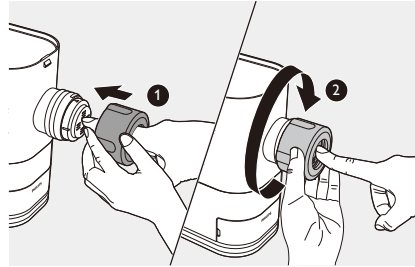


Always attach the shaping disc on the mixing chamber outlet before you assemble the shaping disc holder. Never put the shaping disc in the shaping disc holder and assemble them on the mixing chamber outlet at the same time.

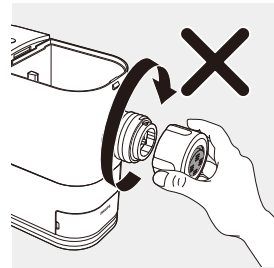

- 7 Attach the lid onto the mixing chamber.

Note:

- If the mixing chamber lid is not properly installed, the safety switch will prevent the appliance from working.

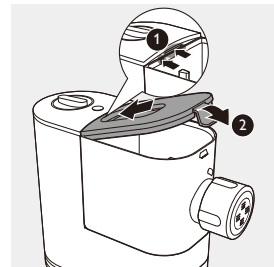


Using the Pasta and noodle maker

Important

- Place the product on a flat surface and prevent table shaking or vibration.
- Make sure all the parts are well assembled before plugging in.
- Do not put less than 200g (1 flour cup) or more than 400g (2 flour cups) of flour in the chamber.
- Pour in the liquid slowly through the water slot after the appliance starts kneading.
- If you want to dispose of the weighed flour before processing with the next batch, empty the chamber and restart the appliance by unplugging and plugging in again.
- Do not put any ingredients that are 60°C / 140°F or above into the Pasta and noodle maker, or place the Pasta and noodle maker in surroundings at high temperature (60°C / 140°F), for instance in a high temperature sterilization environment. This will deform the appliance.
- Do not pour liquid into the mixing chamber before the Pasta and noodle maker starts running.
- Make sure the shaping disc and shaping disc holder are assembled properly before plugging in the appliance.


Preparing and measuring the flour

- 1 Scoop one full cup of flour using the flour cup. Scrape off any excessive flour from the cup edge with the supplied flat cleaning tool. 1 full cup of flour weighs around 200g, and 2 full cups of flour weigh around 400g.

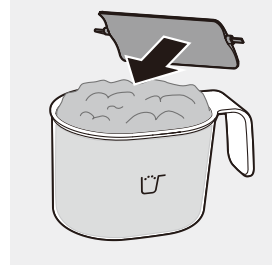


Note:


- Do not shake or hit the flour cup to remove excessive flour. This will affect the flour weight.
- Use a kitchen scale to measure the weight more accurately.
- 200g of flour makes about 200g fresh pasta/noodles. 400g of flour makes about 450g fresh pasta/noodles.

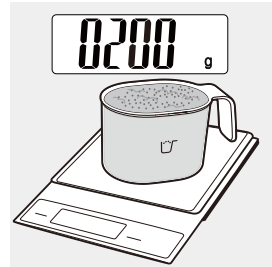

- 2 Pull the lid to unlock it and then remove the lid from the mixing chamber.


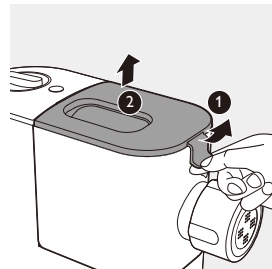


- 3 Pour the flour into the chamber. If you want to make 2-3 servings, add a second cup of flour as you will need 2 cups (~400g) of flour in total.

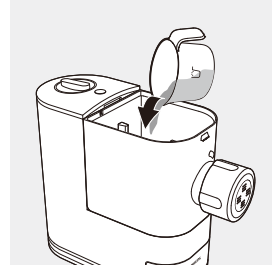

Note:

- Do not pour liquid into the mixing chamber at this point. Only pour liquid after the Pasta and noodle maker starts running.
- Do not put **less than 200g** or **more than 400g** of flour in the chamber. If you put too little or too much flour in the chamber, the appliance may not operate.
- Do not pour the flour into the opening of the squeezing tube, otherwise the flour in the squeezing tube will not be mixed evenly.

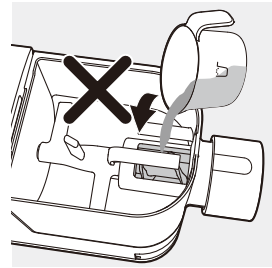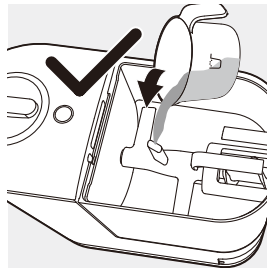


Preparing and measuring the liquid

1 Measure the liquid volume at eye level on a flat surface.

Note:


- Do not pour liquid into the mixing chamber before the Pasta and noodle maker starts running.

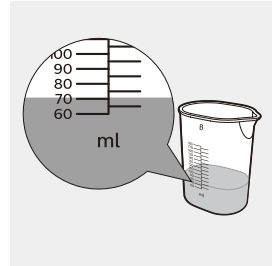


There are 2 sets of water markings on the supplied water cup.

When using **all-purpose flour and egg mixture** to make **plain egg pasta**, refer to **side A** with two liquid levels.

- Level 1 (80ml): required egg mixture amount for 1 cup of flour.
- Level 2 (160ml): required egg mixture amount for 2 cups of flour.

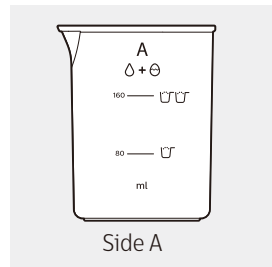


To make egg mixture for plain egg pasta, crack 1 egg into the water cup. Add water up to the required amount as shown on **side A**, and then whisk the water and egg to combine.

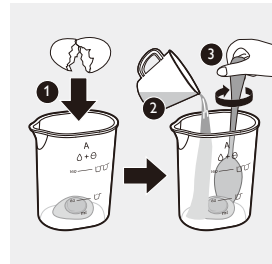

When using the following combinations of flour and liquid to make pasta, refer to **side B** with specific volume.

- **All-purpose flour** mixed with **pure water/vegetable juice mixture**.
- **Various other flours** (as shown in the following tables) mixed with **egg mixture/pure water/vegetable juice mixture**.

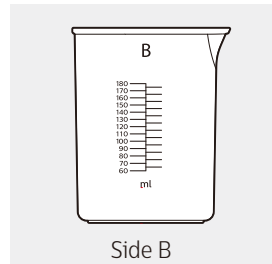


Check the following tables for detailed water and flour ratio.

Note:

- These tables show the flour-liquid ratio base on 200g of flour. When using 400g of flour to make pasta, double the liquid volume (including egg) to get the right flour-liquid ratio.

When using **egg mixture** to make pasta, crack 1 egg into the water cup. Add water up to the required amount as shown below, and then whisk the water and egg to combine.

Flour	Egg mixture (ml)	Water cup
Durum (Semolina flour 150g + all-purpose flour 50g)*	75	Side B
Whole wheat 200g	90	
Spelt 200g	90	
Bread flour 200g	80	
Soba (buckwheat flour 130g + all-purpose flour 70g)*	80	

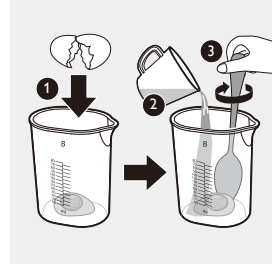

When using **pure water** to make pasta, add water to the required amount as shown below.

Flour	Pure water (ml)	Water cup
All-purpose flour 200g	70	Side B
Durum (Semolina flour 150g + all-purpose flour 50g)*	65	
Whole wheat 200g	80	
Spelt 200g	65	

When using **vegetable juice (including 1 egg)** to make pasta, crack 1 egg into the water cup. Add vegetable juice up to the required amount as shown below, and then whisk the juice and egg to combine.

Flour	Spinach juice (including 1 egg) (ml)	Beet juice (including 1 egg) (ml)	Carrot juice (including 1 egg) (ml)	Water cup
All-purpose flour 200g	75	80	80	Side B
Durum (Semolina flour 150g + all-purpose flour 50g)*	75	75	75	

* Use a kitchen scale to measure the weight more accurately.

Important

- The pasta recipes provided in the recipe book have been tested for success. If you experiment with or use other pasta recipes, the flour and water/egg ratios will need to be adjusted to the flour and water cup ratios included with the Pasta and noodle maker. The Pasta and noodle maker will not operate successfully without adjusting the new recipe accordingly.

Note:

- For best results, use all-purpose flour with the recommended liquid proportions indicated on the cup.
- Seasonal changes, using ingredients from different regions may affect the flour/water ratio.
- "Gluten" is a binder which ensures the pasta does not break easily. Gluten-free flour does not contain a binder, therefore it needs a thickener to act as a "binder" eg. Xanthan gum or Guar. Various kinds of gluten-free flour perform differently when making pasta. Some flours are not suitable for making varieties pasta such as coconut flour and white rice flour; some flour varieties work well, such as quinoa and buckwheat.
- See the recipe book provided for more delicious pasta and noodle ideas.

Starting the pasta making program


Important

- Do not select the extra extrusion program before the dough mixing is complete. Otherwise, this will damage the Pasta and noodle maker and its lifetime.
- Do not disconnect the power cord before the processing is complete. If you have to stop the pasta making process, turn the control knob to "OFF" to stop the working process and then disconnect the power cord from outlet before performing other operations.
- Do not exceed the maximum operation cycle of 2 cycles continuously at all applications. To better protect the lifetime of the appliance, you can restart using the appliance after 30 minutes upon 2 continuous operation cycles.
- If you intend to use the appliance continuously, clean each shaping disc with the supplied cleaning tool each time after the pasta making session. For easy cleaning, do not soak the shaping disc directly in water.

- 1 Put the plug of the appliance into the power outlet. The Pasta and noodle maker will sound once.

Note:


- Make sure all the parts are well assembled before plugging in.

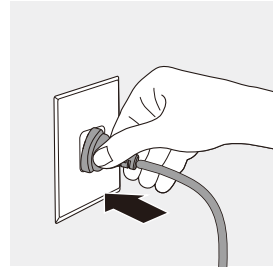

- 2 Attach the lid onto the mixing chamber.

Note:


- The appliance will not start working if the chamber lid is not properly closed. During the pasta making process, if the chamber lid becomes loose, the appliance will automatically stop working.

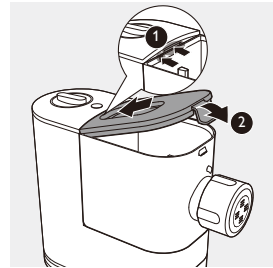

- 3 Turn the control knob to select the automatic pasta making process, and then press the Start/Pause button.

Note:


- The whole working process (including kneading and extruding) takes around 12 minutes for 200g of flour and 18 minutes for 400g of flour.

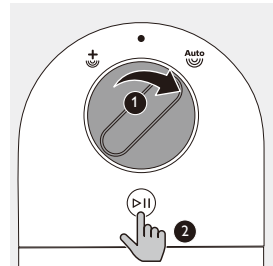

- 4 After the kneading starts, slowly pour in the liquid along the entire length of the slot in the lid.

Note:

- During dough mixing, do not add other ingredients after you have poured in the liquid. Otherwise, it will affect the results of the pasta texture.

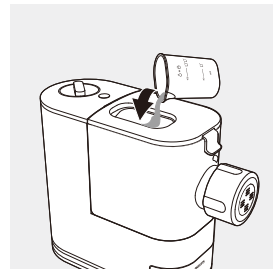

- 5 After the Pasta and noodle maker finishes kneading, it will beep a few times and the pasta extrusion will start after a few seconds. Place a container right under the outlet. Cut the pasta into the desired length with the cleaning tool.

Note:

- If the ratio of liquid and flour is not correct, the extrusion will not succeed. In this case, prepare the ingredients again.
- Move the cleaning tool downwards to cut the pasta.



- 6 When the extrusion process is complete, the appliance will beep a few times.


Note:

- Do not turn the control knob to the “OFF” position before the whole process is over (you will hear the “beep” sound).

- 7 After the pasta making is complete, if you notice some leftover dough inside the chamber, you can turn the control knob to the OFF position first, and then turn the control knob to the extra-extrusion position. Press the Start/Pause button to start the extra-extrusion program.

Note:

- You may find some fine pasta threads on the pasta surface. This is normal.
- The cooking time of the pasta varies depending on personal preferences, pasta shapes, and number of servings.

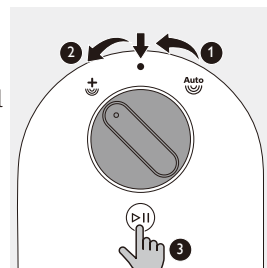


Cleaning


Important

- Turn the control knob to "OFF", disconnect the power and remove the power cord before cleaning or disassembling this appliance.
- Do not immerse the main unit in water.
- Do not use a scouring pad, caustic cleaners, or abrasive cleaners (for examples, gasoline, alcohol, and propanol) to clean the appliance.
- Clean the appliance each time after use, or the appliance might not operate properly.
- Take extra caution when cleaning the appliance to avoid getting cut by any sharp edges.
- The shaping discs and all detachable parts of the appliance are dishwasher safe. When you clean them in a dishwasher, make sure to select the proper program which has a maximum temperature at no higher than 60°C (140°F).


- 1 Turn the control knob to "OFF" and disconnect the plug from the power outlet.

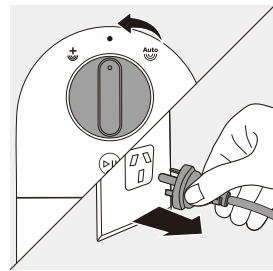


- 2 Pull the lid to unlock it and then remove the lid from the mixing chamber.

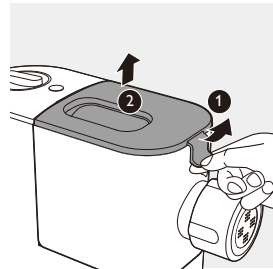


- 3 Slide the mixing chamber off the main unit.

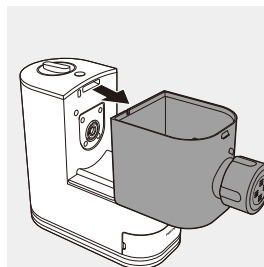


- 4 Turn the shaping disc holder counterclockwise to remove it from the mixing chamber outlet.

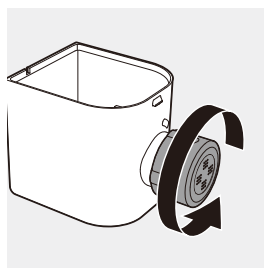



- 5 Put your finger in the mixing chamber and push the squeezing tube outwards to slide it out of the mixing chamber outlet. Detach the shaping disc, and then pull the squeezing bar out of the squeezing tube.

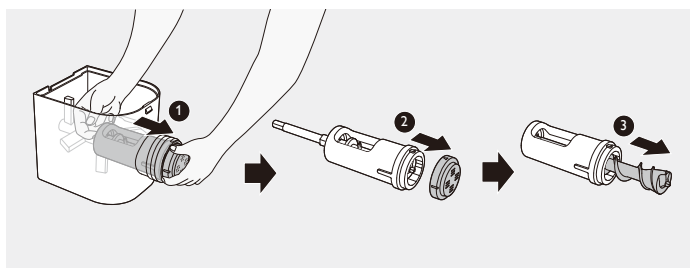

- 6 Take the mixing paddle out of the mixing chamber.

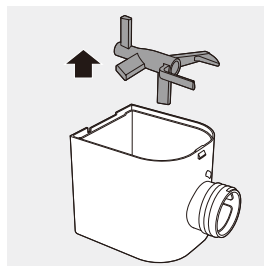

- 7 Clean the shaping disc with the supplied cleaning tool to remove the dough residues. After that, you can clean it with water.

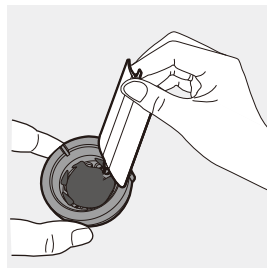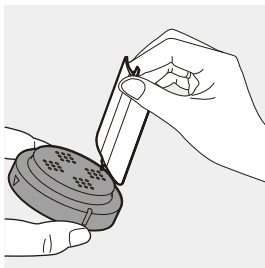

- 8 Clean all detachable parts with dishwashing liquid and warm water or clean in the dishwasher. After that, wipe all parts dry.

- 9 Use a dry cloth to clean the main unit, control knob, and the exterior of the Pasta and noodle maker.


Note:

- After cleaning, make sure all parts and the shaping disc air dry thoroughly before storing. Assemble the Pasta and noodle maker back for next use.



Storage


- 1 Wind the power cord around the cord storage wrap.

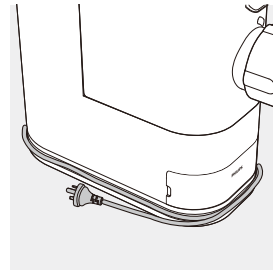

- 2 Dry the shaping discs and store them in the storage box.

The small groove in the storage box is designed for the cleaning tool of the angel hair shaping disc, which is not included in this Pasta and noodle maker. It will be launched and sold separately.

- 3 Store the Pasta and noodle maker in a dry, well ventilated place after use.

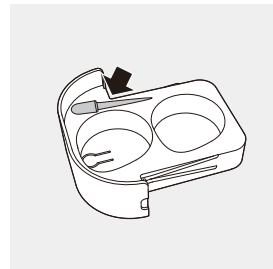



Troubleshooting

This chapter summarizes the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit www.philips.com/support.

The appliance does not sound after the plug is put in the wall outlet.

- **The plug is not connected properly, or the outlet is not connected to power source.**
Check whether the power plug is plugged correctly and the outlet is working properly.

The appliance does not start the pasta making process after the plug is put in the wall outlet.

- **You have not chosen a pasta making program or pressed the start button .**
Choose a pasta making program and press the start button .

After pressing the start button , the appliance makes alarm sounds and does not work.

- **The chamber lid is not assembled properly.**
Make sure you follow the user manual to assemble the chamber lid properly.

The chamber lid is pushed open from the inside.

- **There's too much flour in the mixing chamber.**
The maximum amount of flour for each batch is 400g. If you have put more than 400g of flour in the mixing chamber, reduce the amount and make another batch of pasta.
- **The ratio of flour and water provided in the "Flour/water ratio table" was not followed. The dough is too wet.**
Disconnect from the power source, clean the Pasta and noodle maker, and follow the user manual again to restart the pasta making.
- **The chamber lid is not assembled properly.**
Make sure you follow the user manual to assemble the chamber lid properly.

During processing, the appliance stops working when you open the lid.

- **For safety reasons, the appliance always stops working when the lid is opened during processing.**
If you need to resume the previous operation, close the lid properly, and press the Start/pause button.

During the pasta making process, the appliance stops working, and there is no alarm sound.

- **The Pasta and noodle maker has overheated due to long and continuous working time.**
Disconnect from the power source, and allow the Pasta and noodle maker to cool down. Do not exceed the maximum operation cycle of 2 cycles continuously at all applications. To better protect the lifetime of the appliance, you can restart using the appliance after 30 minutes upon 2 continuous operation cycles.

During the pasta making process, the appliance stops working, and makes alarm sounds.

- **The ratio of flour and water provided in the "Flour/water ratio table" was not followed. The dough may be too dry.**
- **The mixing paddle may be blocked by some foreign objects.**
- **The wrong program is selected.**
Disconnect from the power source, clean the Pasta and noodle maker, and follow the user manual again to restart the pasta making.

The mixing paddle is running idle, and there is no pasta coming out.

- **The ratio of the flour and water is incorrect.**
Disconnect the plug from the power source and discard dough. Clean the Pasta and noodle maker, measure ingredients correctly (use a kitchen scale to measure the flour weight more accurately), and follow the user manual again to restart the pasta making
- **The flour becomes damp after longtime storage.**
Use flour that is fresh or properly stored.

The pasta breaks easily.

- **The ratio of the flour and water is incorrect.**
Disconnect the plug from the power source and discard dough. Clean the Pasta and noodle maker, measure ingredients correctly (use a kitchen scale to measure the flour weight more accurately), and follow the user manual again to restart the pasta making.
- **You did not use the correct type of flour.**
Use all-purpose flour or flour with higher protein content (refer to the chapter 'Using the Pasta and noodle maker' in the user manual or the supplied recipe book).

The pasta sticks together.

- **The ratio of the flour and water is incorrect, too much water is poured in the mixing chamber.**
Measure flour and water with the provided flour and water cup and according to the "flour/water ratio table". Use a kitchen scale to measure the flour weight more accurately.

Too much leftover dough inside the chamber.

- **The flour is either exposed to moisture before use, or the dough is too wet.**
Keep your flour dry during storage. Follow the user manual instructions to restart the pasta making.
- **The chamber, the mixing paddle, the shaping disc are not cleaned properly before use.**
Make sure all parts are clean before use.
- **The mixing paddle or the chamber is still wet.**
Make sure all parts are completely dry before use.
- **Water is not added in the right order.**
The flour type is not suitable.
Follow the user manual instructions to make pasta.

Small amount of water is leaking out from the appliance.

- **Water is added before the program starts.**
Follow the user manual instructions to add water right after the program starts.

After pasta making, the squeezing tube cannot be pushed out of the mixing chamber.

- **The appliance is stopped during extrusion before the pasta making process is finished completely.**
 1. Restore the disassembled parts back in place until the appliance is assembled properly, and turn the control knob to the OFF position.
 2. Plug in, select the automatic pasta making program, and press the start button. Keep the mixing paddle rotating for around 10 seconds, and then turn the control knob to the OFF position.
 3. Unplug the appliance, disassemble and clean the appliance as described in the user manual (see chapter "cleaning").

Product information

Model	HR2332
Motor power	150W
Rated voltage	AC220-240V (50Hz)
Dimensions (L x W x H)	350 mm x 135 mm x 287 mm
Net weight	4.7 kg

- For rated voltage and frequency information, refer to the type plate on the product. Product information is subject to change without prior notice.

Components	Mixing chamber	Lid	Mixing paddle / squeezing bar	Shaping discs
Material	Tritan	Tritan	POM	POM



Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Guarantee and service

If you have a problem, need service or need information, see www.philips.com/support or contact the Philips Consumer Care Center in your country.

Abbreviations
g = grams
~ = approximately
ml = milliliters
mm = millimeters
kg = kilogram

目录

重要信息	36
包装盒内物品	39
概览	40
首次使用前的拆卸和清洁	42
组装	44
使用意面 / 面条机	47
清洁	55
存储	58
故障排除	59
产品信息	62
回收	62
保修和服务	63

重要信息

安全

使用本产品之前，请仔细阅读本用户手册，并妥善保管以备日后参考。

危险

- 切勿将马达装置浸入水或其他液体中，也不要在水龙头下冲洗。只能用湿的抹布擦洗马达装置。

警告

- 如果电源线损坏，为避免危险，必须由飞利浦、其服务代理商或类似的专职人员进行更换。
- 每次可用最大面粉量为 400 克。如果您放入搅拌室中的面粉量超过 400 克，请减少面粉量并制作另一批意面。
- 为避免因不慎重置过热保护装置而发生危险，切勿通过外部切换设备为本产品供电（例如定时器），也不要连接到具有定期开关切换功能的电路。
- 本产品不适合由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责其安全的人对他们使用本产品进行监督或指导。
- 应照看好儿童，确保他们不玩耍本产品。
- 不要让儿童在无人监督的情况下进行清洁和保养。
- 如果插头、电源线或其它部件受损或有明显破裂，则不要使用此产品。
- 不用时要拔下产品的插头。
- 请勿将重物放在产品上。
- 请勿在使用期间移动本产品。
- 切勿使用洗碗机清洁本产品。
- 组装时确保拧紧前面板旋钮。
- 组装时产品不要通电。
- 产品开始和面后，通过水槽缓慢倒入液体。
- 请勿将 60°C / 140°F 或以上温度的原料放入意面机，也不要将意面机放在高温（60°C / 140°F）环境中，例如高温消毒。这样会损坏您的产品。
- 在盖好搅拌容器盖之前，请勿向搅拌容器注水。

警告

- 切勿将任何液体倒入安全开关孔。
- 在和面完成前，请不要选择仅挤出程序。否则会损坏意面机。
- 请勿使用钢丝绒、碱性洗洁剂或磨蚀性清洁剂（例如汽油、酒精和丙醇）清洁产品。
- 每次使用后都要清洁产品，否则产品可能无法正常运行。
- 切勿将任何物体插入产品。
- 清洁产品时要加倍小心，以免被任何锋利边缘割伤。
- 更换附件或接触使用中的活动部件之前，请先关闭产品并断开电源。
- 当产品插上电源时，不要将手伸进搅拌室。
- 为防止短路或触电，请勿让水或任何液体流入显示屏中。
- 在将本产品连接至电源之前，确保产品底部标示的电压与当地的电源电压相符。
- 将插头插入电源插座之前，确保正确组装产品。

注意

- 产品无人看管时和拆装、存储或清洁之前，务必断开产品电源。
- 本产品仅限于普通家用。不得用于商店、办公场所、农场或其他工作环境的员工食堂。也不得由酒店、汽车旅馆、提供住宿和早餐的场所及其他住宿环境中的客人使用。
- 在初次使用产品之前，请彻底清洗与食品接触的部件。请参阅手册中的说明。
- 切勿使用由其他制造商生产或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 请勿在不稳固或不平坦的表面上使用本产品。
- 只能将本产品用于用户手册中所示的原定用途。
- 不要超出表中所示的份量和加工时间。
- 为了更好地保护产品的使用寿命，如果产品连续使用 45 分钟，我们建议将其停止 15 分钟。
- 如果要连续使用产品，请在每次使用后随附的清洁工具清洁塑形模块。为便于清洗，请不要将塑形圆盘直接浸入水中。
- 不要使用钢丝球、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁本产品。
- 请勿将不足 200 克重或超过 400 克重的面粉放入搅拌室。
- 噪音强度：LC - 73 dB(A)


电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

感谢您的惠顾，欢迎光临飞利浦！
 为了让您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。
 在安装和使用产品之前，请仔细阅读本用户手册。妥善保管以供日后参考。

包装盒内物品

主装置

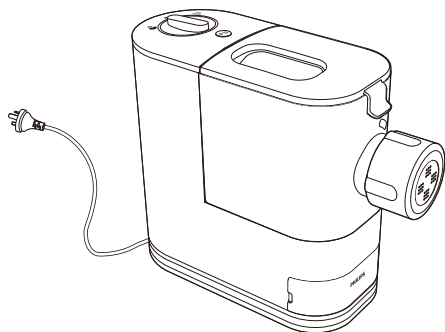


用户手册



食谱



 扁平清洁工具



面粉杯



水杯



意大利面 / 细面 *

塑形模块



意大利宽面 / 板面



意大利通心粉





干层面




*意大利面 / 细面塑形模块在您购买产品时已经组装在产品上。


概览

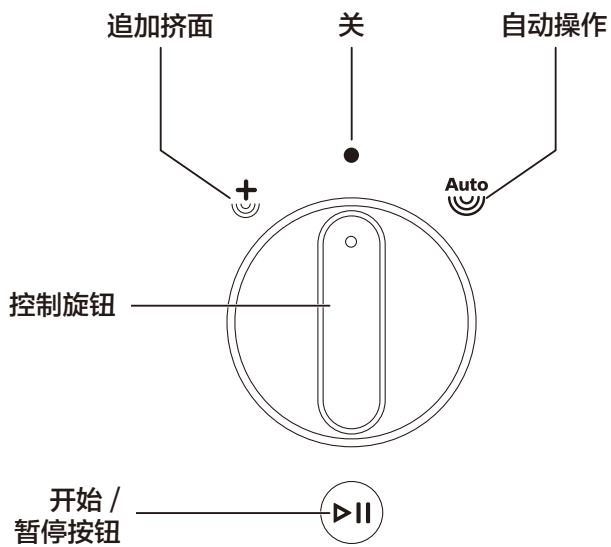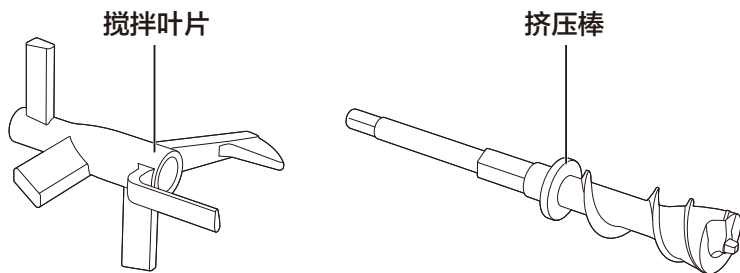


挤压管

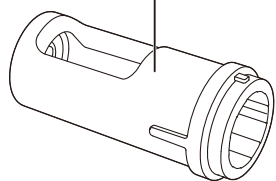

塑形模块

 

塑形模块支架

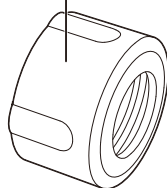

搅拌容器盖

搅拌容器

电源线

存储盒

主装置


电线储藏
绕线装置

首次使用前的 拆卸和清洁


重要信息

- 第一次使用产品前，请拆下并安全弃置任何包装材料和 / 或促销标签。
- 取出所有可拆卸部件和附件，清洗并彻底干燥所有部件和附件(请参阅“清洁”一章)。
- 请勿用水冲洗或浸泡主装置、电源线或电源插头。
- 请勿使用钢丝绒或类似的清洁工具，以免刮花意面 / 面条机的塑料表面和影响使用寿命。
- 产品的塑形模块及所有可拆卸部件均可用洗碗机清洗。用洗碗机清洗时，确保选择最高温度不超过 60°C (140°F) 的合适程序。
- 本产品仅限于家用。


- 1 拉开盖子将其解锁，然后从搅拌容器上取下盖子。

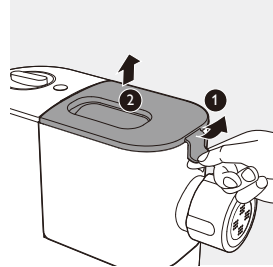


- 2 将搅拌容器从主装置上滑出。

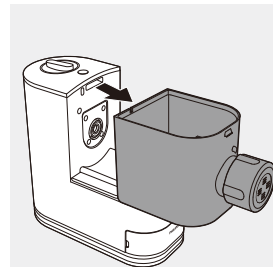


- 3 逆时针转动塑形模块支架，将其从搅拌容器出门口上卸下。

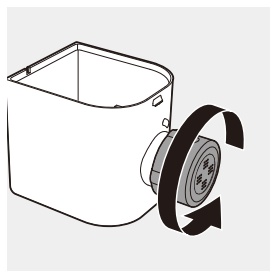


- 4 将您的手指放入搅拌容器中，并向外推动挤压管，将其从搅拌容器出门口滑出。拆下塑形模块，然后将挤压棒从挤压管中拉出。

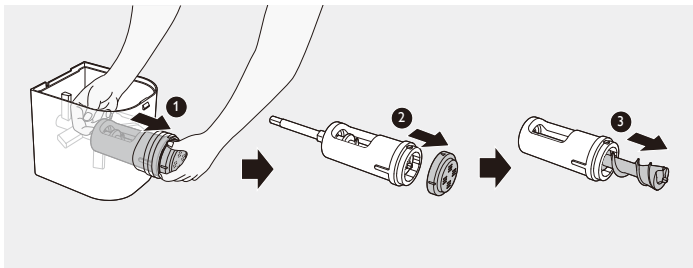

- 5 将搅拌叶片从搅拌容器取出。

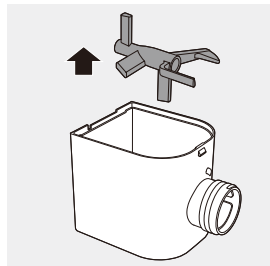

- 6 清洁所有可拆卸部件和附件，然后将其擦干。

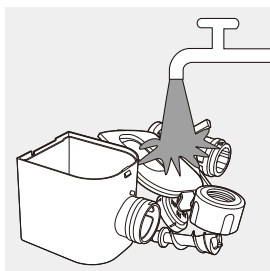

组装

按照以下组装步骤安装意面 / 面条机。


重要信息

- 组装时确保产品不要通电。


- 1 将搅拌容器滑到主装置上。

注意：

- 请确保主装置上的①固定杆正确插入搅拌容器底部的开口。

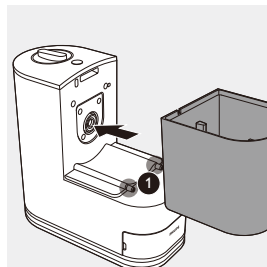


- 2 如图所示，将搅拌叶片放入搅拌容器中。

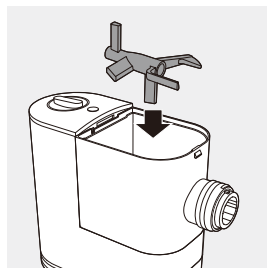

3 将挤压管插入搅拌容器中。

注意：


- 在将挤压管插入搅拌容器中时，请确保挤压管上的大开口朝上。

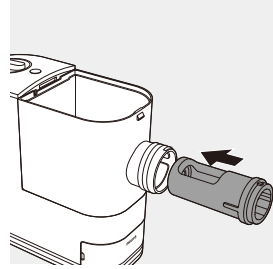

4 将挤压棒插入搅拌容器中。确保挤压棒穿过挤压管和搅拌叶片一直滑入到主装置中的驱动轴中。

注意：


- 轻轻转动搅拌叶片，确保挤压棒正确连接到 ① 主装置的驱动轴上。

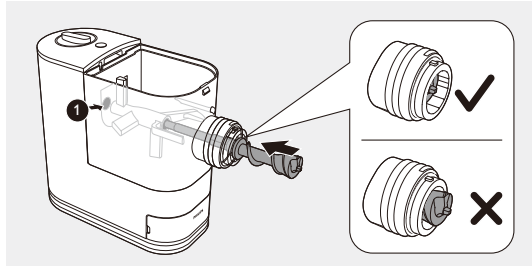


5 将塑形模块固定到搅拌容器出面口上。

注意：


- 确保塑形模块的平面朝外。
- 确保塑形模块装入挤压棒的固定点。
- 在将塑形模块固定到搅拌容器出面口上时，确保塑形模块的箭头面朝上。

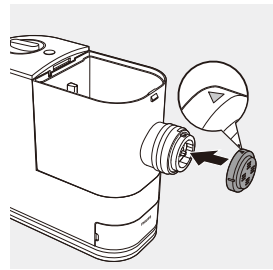

- 6 用手指穿过塑形模块支架并按住塑形模块，然后将支架组装在搅拌容器出面上。顺时针旋转支架将其牢固地锁定就位。

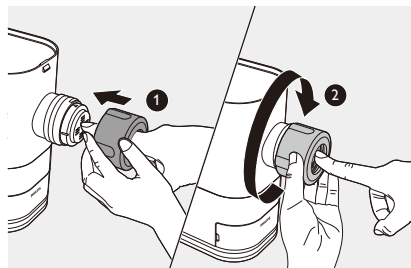


在组装塑形模块支架前，始终将塑形模块固定在搅拌容器出面上。请勿同时将塑形模块放入塑形模块支架并将其安装在搅拌容器出面上。

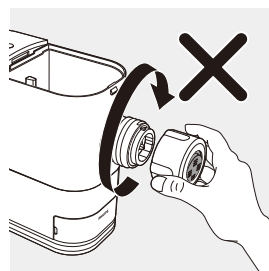

- 7 盖好搅拌容器盖。

注意：

- 如果搅拌容器盖安装不正确，安全开关会阻止产品工作。

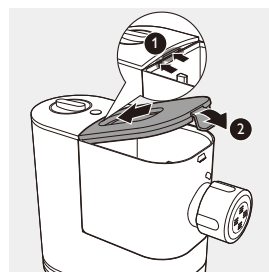


使用意面 / 面条机

重要信息

- 将产品置于平坦的表面上并防止桌子晃动或振动。
- 产品通电之前，确保所有部件均已装好。
- 请勿将不足 200 克（1 面粉杯）或超过 400 克（2 面粉杯）的面粉放入搅拌容器。
- 产品开始和面后，通过水槽缓慢倒入液体。
- 如果要弃置已称量的面粉，然后再加工下一批面粉，请清空搅拌容器并拔下电源插头，然后再次插入插头，重启产品。
- 请勿将 60°C / 140°F 或以上温度的原料放入意面 / 面条机，也不要将意面 / 面条机放在高温 (60°C / 140°F) 环境中，例如高温消毒环境。这样会使产品变形。
- 在盖好搅拌容器盖之前，请勿向搅拌容器注入液体。
- 插入产品电源插头前，确保塑形模块和塑形模块支架均已正确组装。


准备并称取面粉

- 1 使用面粉杯舀一满杯面粉。使用提供的扁平清洁工具，沿杯缘刮去多余的面粉。一满杯面粉重约 200 克，两杯面粉重约 400 克。

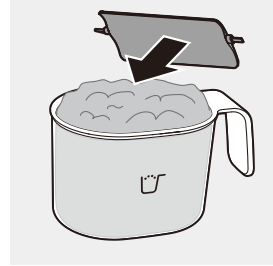


注意：


- 不要通过晃动或击打面粉杯来去除多余的面粉。这会影响面粉重量。
- 使用厨房秤，称量结果会更加准确。
- 200 克面粉可制作大约 200 克新鲜意大利面 / 面条；400 克面粉可制作大约 450 克新鲜意大利面 / 面条。

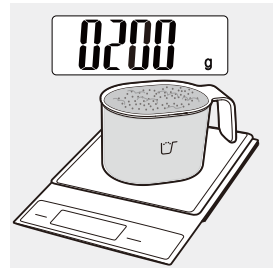

- 2 拉开盖子以将其解锁，然后从搅拌容器上取下盖子。


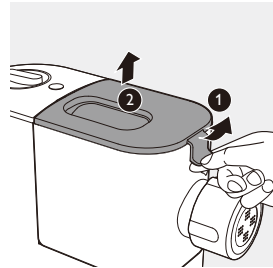


- 3 将面粉倒入搅拌容器。如果要制作 2-3 人份，请再添加一杯面粉，因为总共需要 2 杯（约 400 克）面粉。

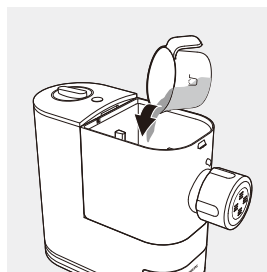

注意：

- 此时请勿将液体加入搅拌容器。只有在运行意面 / 面条机之后才能加入液体。
- 请勿将**不足 200 克重**或**超过 400 克重**的面粉放入搅拌容器。如果搅拌容器中的面粉量过少或过多，机器可能无法运行。
- 请勿将面粉倒入挤压管的开口中，否则挤压管中的面粉无法混合均匀。

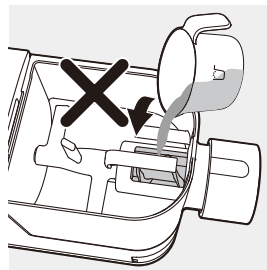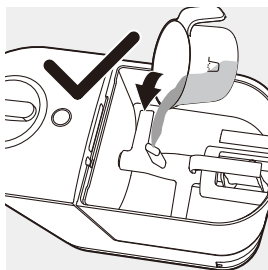


准备并量取液体

1 在平坦表面上以齐眼高度量取液体容量。

注意：

- 运行意面 / 面条机之前，请勿将液体倒入搅拌容器。

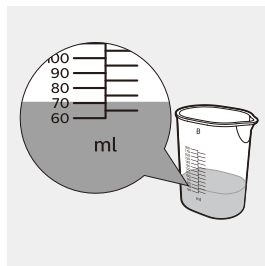


随附的水杯上有 2 种水位标记。

使用家用面粉和蛋糊来制作普通鸡蛋意面时，参考水杯 A 面的水位标记。

- 刻度 1 (80 毫升)：使用 1 杯面粉所需的蛋糊容量。
- 刻度 2 (160 毫升)：使用 2 杯面粉所需的蛋糊容量。




为普通鸡蛋意面制作蛋糊时，将一个鸡蛋打碎，倒入水杯中。根据水杯 A 面显示的水位标记加入所需水量，然后将水和鸡蛋搅拌混合。

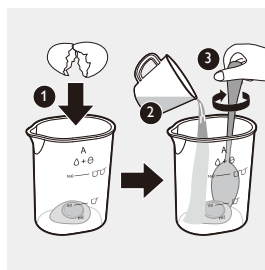

使用以下面粉和液体搭配制作意面时，请参考 B 面的详细水位标记。

- 家用面粉和纯净水 / 蔬菜汁混合而成。
- 其它种类面粉（如下页表格所示）和蛋糊 / 纯净水 / 蔬菜汁等混合而成。

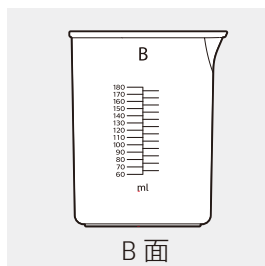


查看以下表格以了解详细的水和面粉比例。

注意：

- 以下表格提供的面粉与液体比例基于 200 克面粉。在使用 400 克面粉制作意面时，将液体容量（包括鸡蛋）加倍以获得正确的面粉与液体比例。

使用**蛋糊**来制作意面时，将一个鸡蛋打碎，倒入水杯中。根据下表加入所需水量，然后将水和鸡蛋搅拌混合。

面粉	蛋糊容量 (毫升)	水杯
硬粒小麦（粗粒面粉 150 克 + 家用面粉 50 克）*	75	B 面
全麦面粉 200 克	90	
斯佩尔特小麦 200 克	90	
面包粉 200 克	80	
荞麦面（荞麦粉 130 克 + 家用面粉 70 克）*	80	

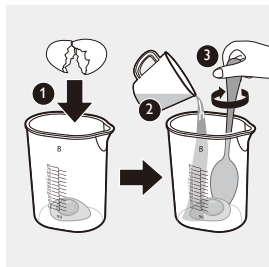

使用**纯净水**来制作意面时，根据下表加入所需水量。

面粉	纯净水 (毫升)	水杯
家用面粉 200 克	70	B 面
硬粒小麦（粗粒面粉 150 克 + 家用面粉 50 克）*	65	
全麦面粉 200 克	80	
斯佩尔特小麦 200 克	65	

使用**蔬菜汁（含鸡蛋一个）**来制作意面时，将一个鸡蛋打碎，倒入水杯中。根据下表加入所需蔬菜汁量，然后将蔬菜汁和鸡蛋搅拌混合。

面粉	菠菜汁 (含鸡蛋一个) (毫升)	甜菜汁 (含鸡蛋一个) (毫升)	胡萝卜汁 (含鸡蛋一个) (毫升)	水杯
家用面粉 200 克	75	80	80	B 面
硬粒小麦（粗粒面粉 150 克 + 家用面粉 50 克）*	75	75	75	

* 使用厨房秤，称量结果会更加准确。

重要信息

- 食谱中提供的意面配方均已经过测试，可成功制作一份成品。如果您试验或使用其他意面配方，那么面粉和水 / 蛋比例需要调整到意面 / 面条机随附的面粉和水杯比例。若不相应调整新配方，意面 / 面条机将不会成功运转。

注意：

- 为获得最佳品质，请使用中筋面粉并根据水杯上推荐的液体比例制作意面。
- 时令和使用不同地区所用的原料可能会影响面 / 水比例。
- “麦麸”是确保意面不易断裂的粘结剂。无麦麸面粉不含粘结剂，因此需要一种增稠剂（例如黄原胶、瓜尔豆等）充当“粘结剂”的角色，在制作意面时各种无麦麸面粉的表现不同。有些面粉不适合制作各种意面，如椰子粉和白面粉；有些面粉品种则非常适合，如藜麦、荞麦等。
- 请参阅随附的食谱了解更多美味意面的做法。

启动意面制作程序


重要信息

- 在和面完成前，请勿选择追加挤面程序。否则，这会损坏意面 / 面条机，缩短其使用寿命。
- 加工完成之前，请勿拔掉电源线。如果必须停止意面制作过程，请将控制旋钮转至关闭位置 (OFF) 以停止制作过程，然后从插座上拔下电源线，之后再执行其他操作。
- 在所有工作状态下，最长运转周期不得超过 2 个连续周期。为更好地延长产品使用寿命，您可以在 2 个连续运转周期后休息 30 分钟再重新启动本产品。
- 如果要连续使用产品，请在每次制作意面后，用随附的清洁工具清洁塑形模块。为便于清洗，请不要将塑形模块直接浸入水中。

- 1 将产品插头插入电源插座。意面 / 面条机会响一声。

注意：


- 产品通电之前，确保所有部件均已装好。

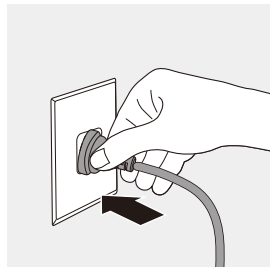

- 2 盖好搅拌容器盖。

注意：


- 如果搅拌容器盖未盖好，产品不会开始工作。在意面制作期间，如果搅拌容器盖出现松动，产品会自动停止工作。

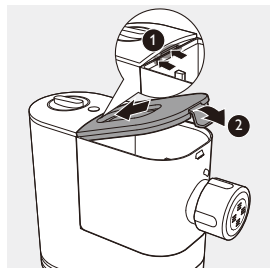

- 3 转动控制旋钮可选择自动制作意面流程，然后按下开始 / 暂停按钮。

注意：


- 加工 200 克面粉时，整个工作过程（包括和面和挤压成形）需要 12 分钟；加工 400 克面粉时，整个工作过程（包括和面和挤压成形）需要 18 分钟。

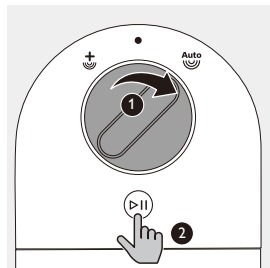

- 4 和面开始后，沿着盖中的整个槽沟缓慢倒入液体。

注意：


- 和面过程中，倒入液体后就不要再加入其他原料。否则，会影响最终的意面质地。

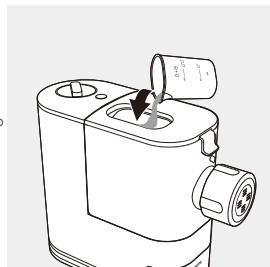

- 5 意面 / 面条机完成和面后，会发出几声蜂鸣音，几秒钟后将开始挤出意面。将容器放在出面口正下方。用清洁工具将意面切至所需的长度。

注意：

- 如果液体和面粉的比例不正确，挤出不会成功。这种情况下，请重新准备原料。
- 向下移动清洁工具可切割意面。

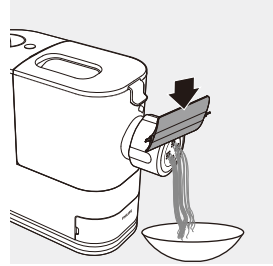

- 6 挤出过程完成后，产品会发出几声蜂鸣音。


注意：

- 在整个过程完成前（您将会听到蜂鸣音），请勿将控制旋钮转至关闭位置 (OFF)。

- 7 意面制作完成后，如果发现搅拌容器中有一些剩面，您可以先将控制旋钮转至关闭位置 (OFF)，然后将控制旋钮转到追加挤面位置。按下开始 / 暂停按钮以启动追加挤面程序。

注意：

- 意面表面可能会有一些意面细丝。这是正常的。
- 意面的烹饪时间不固定，具体应取决于个人偏好、意面形状以及份量。

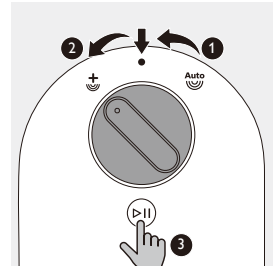


清洁


重要信息

- 清洁或拆卸本产品之前，请将控制旋钮转至关闭位置 (OFF)，断开电源并拔出电源线。
- 请勿将主装置浸入水中。
- 请勿使用钢丝绒、碱性洗洁剂或磨蚀性清洁剂（例如汽油、酒精和丙醇）清洁产品。
- 每次使用后都要清洁产品，否则产品可能无法正常运行。
- 清洁产品时要加倍小心，以免被任何锋利边缘割伤。
- 产品的塑形模块及所有可拆卸部件均可用洗碗机清洗。用洗碗机清洗时，确保选择最高温度不超过 60°C (140°F) 的合适程序。


- 1 将控制旋钮转至关闭位置 (OFF)，断开电源并拔出电源线。

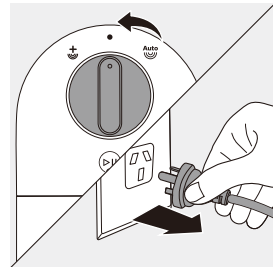


- 2 ① 拉开盖子以将其解锁，然后 ② 从搅拌容器上取下盖子。

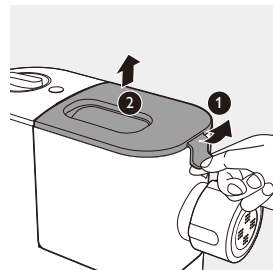


- 3 将搅拌容器从主装置上滑出。

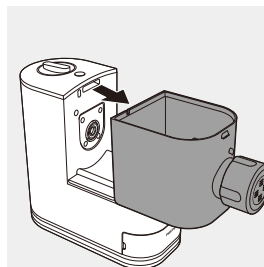


- 4 逆时针转动塑形模块支架，将其从搅拌容器出面口上卸下。

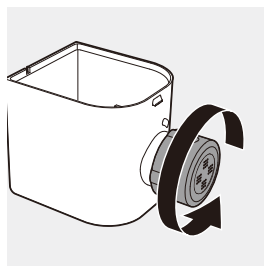



- 5 将您的手指放入搅拌容器中，并向外推动挤压管，将其从搅拌容器出面口滑出。拆下塑形模块，然后将挤压棒从挤压管中拉出。

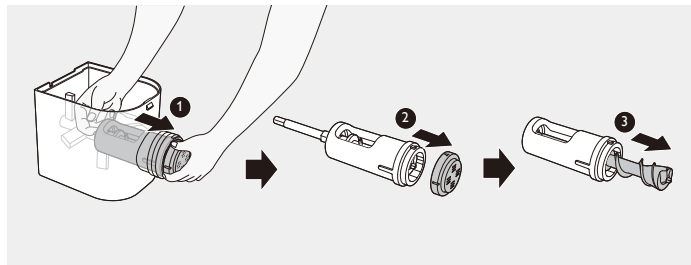

- 6 将搅拌叶片从搅拌容器取出。

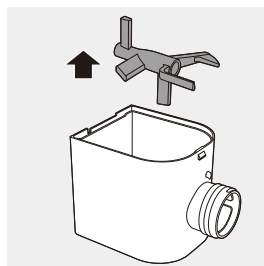

- 7 使用随附的清洁工具清洁塑形模块，清除残留的面。之后可以用水进行清洗。

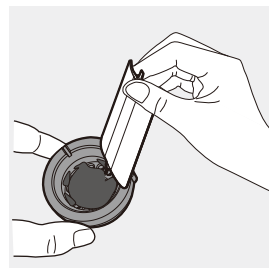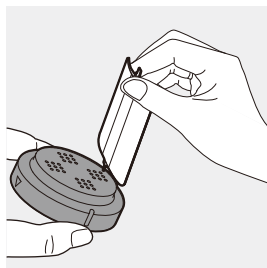

- 8 用清洁剂和温水清洗所有可拆卸部件，或在洗碗机中清洗。接下来，擦干所有部件。

- 9 使用干布清洁主装置、控制旋钮以及意面 / 面条机的外表面。


注意：

- 清洁后，确保将所有部件和塑形模块完全晾干后再进行存储。重新组装意面 / 面条机以备下次使用。



存储

- 1 将电源线缠绕在电源线储藏绕线装置中。

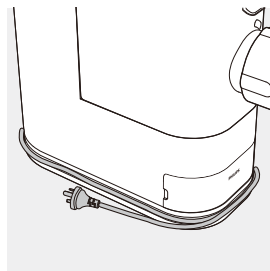

- 2 晾干塑形模块并将其存放在存储盒中。

存储盒中较小的沟槽专为天使细面条塑形模块的清洁工具而设计，该工具未包含在此意面 / 面条机中。它将单独推出与出售。



- 3 使用后，请将意面 / 面条机存放在干燥、通风良好的地方。

故障排除

本章归纳了您在使用产品时最常遇到的问题。如果根据以下信息无法解决问题，请访问 www.philips.com/support。

将插头插入墙上插座后，产品不会发出声音。

- **未正确连接插头，或插座未连接至电源。**
检查电源插头是否插好，插座是否可以正常使用。

必须先将插头插入墙上插座，本产品才能开始意面制作过程。

- **您未选择意面制作程序或未按下开始按钮 **。
选择意面制作程序，然后按下开始按钮 。

按下开始按钮后 ，若产品发出警报声便无法工作。

- **搅拌容器盖没有正确组装。**
确保按照用户手册正确组装搅拌容器盖。

搅拌容器盖从内侧推开。

- **搅拌容器中面粉过多。**
每次可用最大面粉量为 400 克。如果您在搅拌容器中放入超过 400 克面粉，请减少面粉量并制作另一批意面。
- **未按照“面 / 水比例表”中的面粉和水的比例。面团太湿。**
断开电源，清洁意面 / 面条机，再次按照用户手册中的说明重新开始制作意面。
- **搅拌容器盖没有正确组装。**
确保按照用户手册正确组装搅拌容器盖。

意面制作过程中打开盖子，产品停止工作。

- **出于安全考虑，本产品在执行期间如果有开盖行为，会自动停止工作。**
如需继续之前的工作，将盖子盖好，然后按开始 / 暂停按钮。

意面制作过程中，产品停止工作，并且没有发出警报声。

- **意面 / 面条机因长时间连续工作而过热。**
断开电源，让意面 / 面条机冷却。在所有工作状态下，最长运转周期不得超过 2 个连续周期。为更好地延长产品使用寿命，您可以在 2 个连续运转周期后休息 30 分钟再重新启动本产品。

意面制作期间，产品停止工作，并发出警报声。

- **未按照“面 / 水比例表”中的面粉和水的比例。面团可能太干。**
- **搅拌叶片可能被一些异物阻塞。**
- **选择了错误的程序。**
断开电源，清洁意面 / 面条机，再次按照用户手册中的说明重新开始制作意面。

搅拌叶片空转，不出意面。

- **面 / 水比例不正确。**
从电源插座上拔出插头，弃置面团。清洁意面 / 面条机，正确称量原料份量（使用厨房秤可以更准确地称量面粉重量），再次按照用户手册中的说明重新开始制作意面
- **面粉在长期存放后变得潮湿。**
使用新鲜或正确存放的面粉。

意面轻易断裂。

- **面 / 水比例不正确。**
从电源插座上拔出插头，弃置面团。清洁意面 / 面条机，正确称量原料份量（使用厨房秤可以更准确地称量面粉重量），再次按照用户手册中的说明重新开始制作意面。
- **您没有使用正确类型的面粉。**
使用家用面粉或蛋白质含量较高的面粉（请参阅用户手册“使用意面 / 面条机”一章或随附的食谱）。

意面粘在一起。

- **面和水的不比例不正确，搅拌容器中的水太多。**
根据“面 / 水比例表”使用随附的面粉和水杯测量面粉和水。使用厨房秤可以更准确地称量面粉重量。

搅拌容器中剩面过多。

- **面粉在使用前已受潮或面团太湿。**
存储时使面粉保持干燥。按照用户手册中的说明重新开始制作意面。
- **使用之前未正确清洁搅拌容器、搅拌叶片、塑形模块。**
使用之前，确保所有部件洁净。
- **搅拌叶片或搅拌容器仍然是湿的。**
使用之前，确保所有部件完全干燥。
- **未按正确的顺序加水。**
面粉种类不正确。
按照用户手册中的说明制作意面。

产品有少量漏水。

- **程序开始之前已经加水。**
按照用户手册说明，在程序开始后再加水。

意面制作完成后，无法将挤压管从搅拌容器中推出。

- **在意面制作过程完成之前，在挤出过程中产品停止运行。**
 1. 将已拆卸部件复原到位直到产品正确组装，然后将控制旋钮转至关闭位置 (OFF)。
 2. 将插头接入插座，选择自动意面制作程序，然后按下开始按钮。保持搅拌叶片旋转约 10 秒钟，然后将控制旋钮转至关闭位置 (OFF)。
 3. 拔下产品插头，然后按用户手册（请参阅“清洁”一章）所述拆卸并清洁产品。

产品信息

型号	HR2332
电机功率	150 瓦
电压	交流 220 - 240 伏 (50 赫兹)
尺寸 (长 x 宽 x 高)	350 毫米 x 135 毫米 x 287 毫米
净重	4.7 千克

· 有关额定电压和频率信息，请参阅产品上的铭牌。产品信息如有更改，恕不另行通知。

产品部件	搅拌容器	搅拌容器盖	搅拌叶片 / 挤压杆	塑形模块
制造材料	Tritan	Tritan	POM	POM

回收

弃置产品时，请不要将它与一般生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。

请遵循您所在国家 / 地区的电器及电子产品分类回收规定。正确弃置产品有助于避免对环境和人类健康造成负面影响。

保修和服务

如果您需要服务或信息，或者有任何疑问，请访问飞利浦网站：
www.philips.com/support。您也可与所在地的飞利浦客户服务中心联系。

PHILIPS

产品 : 飞利浦全自动面条机
型号 : HR2332
额定电压 : 220V~
额定频率 : 50Hz
额定输入功率 : 150 W
生产日期 : 请见产品底部
产地 : 中国江苏苏州

飞利浦家电（中国）投资有限公司
上海市静安区灵石路 728 弄 20 号 201 室
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005,
GB4706.30-2008 制造

出版日期：2021 年 4 月 16 日



Specifications are subject to change without notice

技术规格如有变更恕不另行通知

© 2021 Philips Domestic Appliances Holding B.V.

All rights reserved.

保留所有权利

3000 023 35242 A



100% recycled paper
100% 循环在造纸