






www.philips.com/support





• ----

© 2018 Koninklijke Philips Electronics N.V. All rights reserved. 4222.002.5834.4 (04/2018)

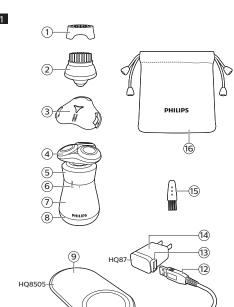

4222 002 5834 4 DFU-Leaflet A7 v3.indd 1-7

ENGLISH

General description (Fig.1)

- Protection cap for cleansing brush Cleansing brush
- Protection cap for shaving unit
- 4 Shaving unit
- On/off ring On/off indications
- Handle Battery low indicator
- Charging pad (type HQ8508)
- O Charging platform I1 Charging indicator
- 12 USB plug
- 13 Socket for USB plug 14 Supply unit (adapter, type HQ87)
- 15 Cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- The appliance is a Class III construction (Fig. 3).
- To charge the battery, only use the detachable supply unit (supply unit, type HQ87. Charging pad, type HQ8508) provided with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children
- by children without supervision. - Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

appliance. Cleaning and user

maintenance shall not be made

shall not play with the

- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the charging pad in water.
- Always make sure the charging pad is completely dry before you connect it to the wall socket.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- The charging pad is not intended for use in a car. It may interfere with the automotive electronic systems.
- For safety reasons, do not use the shaver while you drive a car.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- Water may trickle out of the shaver after your rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This shaver is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance before you use it for the first time and when the battery low indicator indicates that the battery is almost empty

Note: The shaver is Qi compliant. Charging takes approx. 2 hours. A fully charged appliance has a operating time of up to 30 minutes Tip: If your smartphone is compatible with Qi charging, you can also use the charging pad to charge your smartphone.

- 1 Put the adapter in the wall socket and place the appliance onto the charging platform of the charging pad (Fig. 5)
- The charging pad bleeps when the appliance is correctly placed onto the charging platform
- 2 After charging, remove the adapter from the wall socket.

Battery charging

When the shaver is charging, the charging indicator flashes white (Fig. 6).

Battery fully charged When the battery is fully charged, the charging indicator lights up white continuously.

When the battery is almost empty, the battery low indicator flashes orange (Fig. 7).

Using the appliance

Switching the appliance on and off

- 1 To switch on the appliance, turn the on/off ring anticlockwise to the ,on' indication (I) (Fig. 8).
- 2 To switch off the appliance, turn the on/off ring clockwise to the ,off' indication (0).

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of

Dry shaving

- 1 Switch on the appliance.
- 2 Move the shaving heads over your skin in circular movements to catch all hairs growing in different directions (Fig. 9). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave
- Note: Do not press too hard, as this can cause skin irritation.
- 3 Switch off the appliance. 4 Clean the appliance after every use.

Wet shaving

this appliance on a wet face with shaving foam or shaving gel. To shave with shaving foam or shaving gel, follow the steps below: 1 Apply some water to your skin.

2 Apply shaving foam or shaving gel to your skin. **3** Rinse the shaving unit under the tap to ensure that

For a more comfortable shave, you can also use

- the shaving unit glides smoothly over your skin. 4 Switch on the appliance. **5** Move the shaving heads over your skin in circular movements to catch all hairs growing in different
- directions (Fig. 9). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.
- Note: Rinse the shaving unit regularly to ensure that it continues to glide smoothly over your skin. **6** After use, rinse and dry your face gently
- and clean the appliance (see ,Cleaning and maintenance') Note: Make sure you rinse all foam or shaving gel off the appliance.

Using click-on attachments

Removing or attaching the click-on attachment

- 1 Make sure the appliance is switched off. 2 Pull the attachment straight off the appliance
- Note: Do not twist the attachment while you pull it off the appliance.

3 Insert the lug of the click-on attachment into the slot in the top of the appliance (Fig. 12). Then press down the attachment to attach it to

Using the click-on cleansing brush Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin

- 1 Make sure the appliance is switched off. 2 Remove the shaving unit from the appliance
- and attach the click-on brush (Fig. 12) 3 Moisten the brush with water (Fig. 13)

Caution: Do not use the appliance with a dry

- brush, as this can irritate the skin. 4 Moisten your face with water and apply a
- cleanser to your face (Fig. 14). 5 Switch on the appliance
- 6 Gently move the brush across your skin from the nose towards the ear (Fig. 15). Do not push the attachment to hard onto the skin to make sure the treatment remains comfortable.
- 7 After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face (Fig. 16).

Do not cleanse the sensitive area around your eyes.

8 After approx. 20 seconds, move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer

- **9** After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine.
- 10 Clean the click-on brush after use (see ,Cleaning the click-on attachment').

Cleaning and maintenance

Cleaning the appliance

Clean the shaver after every shave for optimal performance.

- 1 Switch off the appliance
- 2 Rinse the shaving unit under a warm tap (Fig. 10). Be careful with hot water. Always check if the water is not too hot, to prevent burning your
- **3** Pull the shaving head holder off the bottom part of the shaving unit (Fig. 21Fig. 17).
- 4 Rinse the shaving head holder under a warm 5 Carefully shake off excess water and let the
- shaving head holder air-dry completely. Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

6 Reattach the shaving head holder to the bottom part of the shaving unit (,click') (Fig. 19).

Cleaning the charging pad

- 1 Wipe the surface of the charging pad with a slightly damp cloth to remove any dirt (Fig. 20). 2 Dry the surface with a dry cloth after cleaning.
- Caution: Always make sure the charging pad is completely dry before you connect it to the power outlet.

Cleaning the click-on attachment Cleaning the click-on brush

- 1 Make sure the appliance is switched off.
- 2 Detach the brush head from the attachment Note: Do not twist the brush head while you pull
- it off the brush base. 3 Clean both parts thoroughly with warm water and mild soap.
- **4** Dry the cleansing brush with a towel.

Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the appliance does not shave as well as it used to.

Note: The shaving heads are locked by a blue (Fig. 23) or an orange (Fig. 24) retaining ring. Follow the correct instructions.

- 1 Switch off the appliance.
- 2 Pull the shaving head holder off the bottom part
- of the shaving unit (Fig. 21, Fig. 17). holder under the tap (Fig. 22).
- off the shaving head (Fig. 25, Fig. 26). Repeat this process for the other retaining rings. Place them aside in a safe place. **5** Remove the shaving heads from the shaving

head holder (Fig. 27). Each shaving head

4 Turn the retaining ring anticlockwise and lift it

- consists of a cutter and guard. Note: Do not clean more than one cutter and guard at a time, since they are all matching sets If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before
- optimal shaving performance is restored. 6 Clean the cutter and guard under the tap (Fig. 28). 7 Shake off excess water
- 8 Put the cutter back into the guard. **9** Place the shaving heads in the shaving head holder (Fig. 29)
- Note: Make sure the notches on both sides of the shaving heads fit exactly onto the projections in the shaving head holder. **10** Blue retaining ring: Place the retaining ring
- on the shaving head and turn it clockwise to reattach the retaining ring (Fig. 29). Place the arrows on the ring in line with the projections in the shaving head holder (Fig. 30). Turn the ring clockwise until it clicks to indicate that the ring is fixed.
- Orange retaining ring: Place the retaining ring on the shaving head and turn it clockwise to reattach the retaining ring (Fig. 31). Repeat this process for the other retaining rings.

Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

Each retaining ring has two recesses that fit exactly into the projections of the shaving head holder. Turn the ring clockwise until your hear a click to indicate that the ring is fixed (Fig. 32).

11 Attach the shaving head holder to the bottom part of the shaving unit ('click') (Fig. 19).

Replacement

Replacing the cleansing brush head

The cleansing brush attachment should be replaced every 3 months or earlier if the brush hairs are bent or damaged (see ,Ordering accessories'). Switch off the appliance.

- 2 Detach the brush head from the attachmen
- 3 Throw away the used brush head (see chapter Recycling').
- 4 Attach the new cleansing brush head to the

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads (see ,Ordering accessories') Replacement reminder

The replacement reminder indicates that the shaving heads need to be replaced (fig. 33). The shaving unit symbol lights up continuously, the arrows flash white and you hear a beep when you switch off the shaver. 1 To replace the shaving heads, remove the

- shaving heads from the shaving head holder one by one. See chapter Thorough Cleaning for the instructions on how to remove the retaining rings and shaving heads. Note: The shaving heads are locked by a blue
- Follow the correct instructions. 2 To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds.

(Fig. 23) or an orange (Fig. 24) retaining ring.

Ordering accessories

Wait until you hear two beeps.

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details). The following accessories and spare parts are available

- SH90 Philips shaving heads
- RQ560 Philips cleansing brush head
- RQ111 Philips beard styler HQ110 Philips Shaving head Cleaning Spray

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environmen
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposa helps prevent negative consequences for the environment and human health

Removing the rechargeable battery Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is disconnected from the wall socket and that

the battery is completely empty Take any necessary safety precautions when you handle tools to open the shaver and when

- you dispose of the rechargeable battery. 1 Check if there are screws in the back of the
- shaver or in the hair chamber. If so, remove them 2 Remove the outer panels of the shaver with a screwdriver or other tool. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- Warranty and support

Troubleshooting

3 Remove the rechargeable battery.

If you need information or support, please visit www.philips.com/support or read the international

This chapter summarizes the most common problems you could encounter with the product If you are unable to solve the problem with the information below. visit www.philips.com/support

the Consumer Care Center in your country.

for a list of frequently asked questions or contact

Problem	Possible cause	Solution
The charging indicator on the charging pad lights up red.	Wrong adapter used or adapter malfunction (e.g. no original Philips adapter is used)	Use the original Philips 7.5W adapte
	Metal objects are placed on the pad during charging (e.g.	Remove any metal objects from the page

coins, etc)

Possible Solution cause If the first and second solution do pad charge malfunction not solve the issue. (e.g. either return the appliance pad or shaver to Customer Care not working Centre in your

	properly)	country.
The appliance does not charge.	appliance is not placed correctly onto the	Place the applianc onto the charging platform of the charging pad. Whe placed correctly, the charging pad will make a sound and the charging indicator on the charging pad starts flashing white (see

'Charging'). Verify whether there The wall is a power failure and socket into which you if the wall socket to have inserted which you connect the adapter the charging plate is live. If you use a wall is not live. socket in a bathroom cabinet, you may need to switch on the light to activate the

If the charging light on the charging plate still does not light up or if the appliance still does not charge take it to your Philips dealer or the nearest The appliance The battery is Charge the appliance

heads or replace

heads before you

(see 'Cleaning and

together. After rinsing

place the cutter back

into its guard. Finally,

heads back into the

shaving head holder

For a more detailed

surgery or if you suffer

from a skin disease or

skin irritation, such as

severe acne, sunburn,

skin infection, skin

softer bristles. We

Sensitive brush head

for sensitive skin and

brush head for extra sensitive and dry skin.

the Extra Sensitive

recommend the

put the shaving

continue shaving

does not work. empty. (see 'Charging'). switched off. 'on' indication (I) (see 'Switching the appliance on and off')

The shaving Clean the shaving

them. Also see 'Hairs is soiled or or dirt obstruct the damaged to such an shaving heads' extent that the motor The appliance Turn the on/off ring does not back and forth, the switch 'on' appliance should

head holder

after charging now switch 'on'. The appliance The shaving Replace the shaving heads are heads. does not shave as well damaged or as it used to. worn Hairs or dirt Clean the shaving

obstruct

the shaving

We advise you to clean the shaving heads more thoroughly by rinsing them under the tap. To do this, first remove the shaving heads from the shaving head holder one by one. Then separate the cutter from its guard and rinse each matching set under the tap. Make sure you keep each set of a cutter and guard

description of how to remove and place back the shaving heads, see chapte The cleansing brush cleansing types. However, do brush is not use the brush suitable for on dry, chapped use on my skin, open wounds, healing wounds, skin recovering from

cancer, inflammation, eczema, psoriasis etc. Do not use the cleansing brush if you are taking steroidbased medication. The brush If you experience feels too the brush head as harsh on the too harsh, we advise you to start using the Sensitive or Extra Sensitive brush head. The Sensitive and Extra Sensitive brush heads have

Solution Problem Possible I don't know We advise you to with which cleanse your skir with your favorite cleansing cleanser. You can products I can use the brush use cleansing gel, foam, oil, milk or lotions. Please do not use scrub cream or gel with particles. Place the smartphone smartphone smartphone onto the charging does not is not placed platform of the charge when correctly charging pad. When placed onto onto the the charging charging pad. charging pad will make a sound and the charging indicator on the charging pad starts flashing white (see 'Charging'). Verify whether there smartphone socket into is a power failure and does not which you if the wall socket to charge when have inserted which you connect placed onto the adapter the charging plate is the charging is not live. socket in a bathroom cabinet, you may need to switch on the light to activate the Your smartphone smartphone might not be compatible with Qi



compatible

with Qi

charging.


charging; contact


manufacturer or


smartphone's


retailer.

 


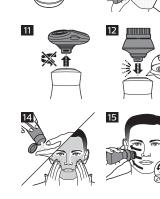

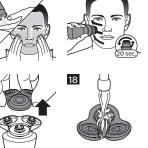

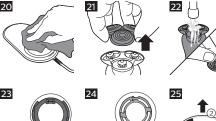

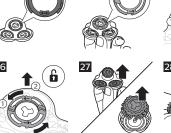







10/04/18 15:57

简体中文

一般说明(图 1)

- 1 洁面刷保护盖
- 2 洁面刷
- 3 剃须刀头部件保护盖 4 剃须刀头部件
- 5 开/关环
- 6 开/关指示
- 8 电池电量不足指示灯
- 9 充电基座(类型 HQ8508)
- 10 充电架
- 11 充电指示灯
- 12 USB 插头 13 USB 插头接口
- 14 电源部件(适配器, 类型 HQ87) 15 清洁刷 16 存储袋

重要安全信息

使用本产品及其附件之前, 请仔细阅读本 重要信息,并妥善保管以供日后参考。 随附的附件可能因产品而异。

- 保持电源部件干燥 (图 2)。
- 警告符号注释: 禁止在打开的水龙头 下进行清洗(图 2)。

- 本产品为 Ⅲ 级构造 (图 3)。
- 要给电池充电,请仅使用该产品随附 的可拆卸电源部件(电源部件,类型 HQ87。 充电基座,类型 HQ8508)
- 本产品也可以由8岁或以上年龄的儿 童以及肢体不健全、感觉或精神上有障 碍或缺乏相关经验和知识的人士使用, 但前提是有人对他们使用本产品进行监 督或指导,以确保他们安全使用,并且 让他们明白相关的危害。 切勿让儿童 玩弄本产品。 不要让儿童在无人监督 的情況下对本产品进行清洁和保养。
- 使用前,请务必检查产品。 请勿使用损 坏的产品, 否则可能对人体造成伤害。 请务必用原装型号更换损坏的部件。
- 切勿拆开本产品更换充电电池。

警告

• ----

- 切勿将充电基座浸入水中。
- 务必确保充电基座完全干燥后,再将其 连接至电源插座。
- 切勿使用温度高于 60°C 的热水冲洗
- 只能将本产品用于用户手册中所示的原 定用途。
- 充电基座不适用于车载充电。 它可能 会干扰汽车的电子系统。
- 出于安全原因,请勿在驾车时使用剃
- 须刀。 - 出于卫生的目的,本产品只能供一个人
- 使用。 切勿使用压缩气体、钢丝绒、研磨性清 洁剂或腐蚀性液体(例如汽油或丙酮) 来清洁产品。
- 请勿在包含电动空气清新器的墙壁插座 上或其周围使用电源部件,以免电源部 件受到不可修复的损坏。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁 场的适用标准和法规。

概述

- 符号注释: 适合于在洗澡或淋浴时使用 (图 4)。 允许在盛水的浴缸、淋浴、 洗脸盆或其他器皿附近使用本器具。
- 该剃须刀具有防水性能 (图 4)。 话合在 沐浴或淋浴时使用, 也可以放在水龙头 下清洗。
- 电源部件适合在 100 240 伏的电源电
- 压下工作。 - 该电源部件可将 100-240 伏的电压转 换为 24 伏以下的安全低电压。

第一次使用本产品之前,以及当电池电量 不足指示灯指示电池电量快要耗尽时,

请先为本产品充电。

注意: 剃须刀兼容 Qi。 充电约需 2 小时。 充满电的产品最长可 使用 30 分钟。

提示: 如果您的智能手机与 Qi 充电兼 容,您还可以使用充电基座为您的智能手 机充电。

- 1 将适配器插入插座,并将本产品放到充 电垫 (图 5)的充电架上。
- 当本产品正确放到充电架上时, 充电基座会发出短促的信号音。
- 2 充电之后,请断开适配器与插座的连接。

电池正在充电

剃须刀充电时,充电指示灯会呈白色 (图 6)闪烁。

电池已完全充满

电池充满电时,充电指示灯将呈白色持续 亮起。

电池电量不足

当电池的电量几乎耗尽时, 电池低电量指 示灯会呈橙色 (图 7)闪烁。

使用本产品

打开或关闭产品

- 1 要打开本产品,请将开/关环逆时针转 至"开"指示处(I)(图 8)。
- 2 要关闭本产品,请将开/关环顺时针转 至"关"指示处(0)。

剃须

皮肤适应期

前几次剃须可能不会带给您预期效果, 并且您的皮肤可能会受到轻度刺激。 这 是正常的。 您的皮肤和胡须需要时间适 应任何新的剃须系统。 为了让您的皮肤 适应这款新产品,我们建议您在3周时间 内定期(至少每周3次)仅使用本产品 剃须。

干剃

- 1 启动产品。
- 2 将剃须刀头部件在皮肤上以划圈形式移 动 (图 9)。
- 注意: 划圈动作比直线动作的剃须效 果更好。
- 3 关闭产品。
- 4 每次使用后均应清洁产品。

湿剃

要获得更舒适的剃须体验,您也可以先用 剃须泡沫或剃须啫喱将脸弄湿,然后再用 本产品进行剃须。要用剃须泡沫或剃须啫 喱剃须,请按照下面的步骤执行操作:

- 1 用水润湿皮肤。
- 2 在皮肤上涂抹剃须泡沫或剃须啫喱。
- 3 在水龙头下冲洗一下剃须刀头部件, 确保剃须刀头部件可以在您的皮肤上顺 畅滑动。
- 4 启动产品。
- 5 将剃须刀头部件在皮肤上以划圈形式移 动 (图 9)。
- 注意:定期冲洗剃须刀头部件,确保 其能够继续在您的皮肤上顺畅滑动。
- 6 使用后,冲洗并轻轻擦干脸部,然后清 洁本产品 (请参见 '清洁和保养')。

注意: 确保冲洗干净本产品上的所有 泡沫或剃须啫喱。

使用卡入式附件

拆卸或安装卡入式附件

- 1 确保产品电源已关闭。
- 2 将附件竖直抽离产品(图 11)。
- 注意: 将附件从产品上抽出时, 不要旋转。
- 3 将卡入式附件的凸缘插入本产品 (图 12)顶部的槽内。 然后,按下附件将其 安装到本产品上(可听到"咔哒" 一声)。

使用卡入式洁面刷

- 将旋转洁面刷与日常洁面产品一起使用。 洁面刷可去除油脂和污垢,焕发健康无油 脂的肌肤。
- 1 确保产品电源已关闭。
- 2 取下本产品的剃须刀头部件并连接卡入 式洁面刷 (图 12)。
- 3 用水 (图 13)湿润洁面刷。

警告: 切勿在洁面刷干燥的情况下使 用产品,否则可能会刺激皮肤。

- 4 用水润湿面部,并将洁面乳涂抹到脸 (图 14)上。
- 5 启动产品。
- 6 在鼻子至耳朵 (图 15)的皮肤上轻轻地 移动刷头。 请勿用力地将附件压在皮
- 肤上,以确保舒适护理。 7 约 20 秒后,可将本产品移至另一侧面 颊, 开始清洁这部分面部皮肤 (图 16)。
- 切勿清洁眼部周围的敏感区域。 8 约 20 秒后,可将本产品移至前额, 开始清洁这部分面部皮肤。 轻轻将刷 头从左向右移动。
- 注意: 建议您不要过度清洁, 任何部 位的清洁时间不要超过 20 秒钟。 9 护理后, 洗脸并擦干。现在您可以进行
- 日常面部护肤的下一步了。 10使用 (请参见 '清洁卡入式附件')

后,请清洁卡入式洁面刷。

清洁和保养

清洁产品

每次剃须后请清洁剃须刀, 以获得出色

- 性能。
- 1 关闭产品。 2 用温水 (图 10)冲洗剃须刀头部件。
- 使用热水要当心。 切记先检查水温是 否太高,以防烫手。
- 3 将剃须刀头支架从剃须刀头部件 (图 图 17)的底部抽离。
- 4 用温水 (图 18)冲洗剃须刀头支架。
- 5 小心地甩掉多余水分并彻底晾干剃须刀 头支架。
- 不要用毛巾或纸巾擦拭剃须刀头部件, 因为这样可能会损坏剃须刀头。

6 将剃须刀头支架重新装回剃须刀头部件的 底部(可听到"咔哒"一声)(图 19)。

- 清洁充电基座 1 使用微湿的布擦拭充电基座表面以清除 所有尘垢 (图 20)。

再将其连接至电源插座。

2 清洁后,用干布干燥表面。 警告: 务必确保充电基座完全干燥,

清洁卡入式附件

- 清洁卡入式洁面刷
- 1 确保产品电源已关闭。 2 从附件基座上卸下刷头。
- 注意: 将刷头从洁面刷基座上拉下时, 不要旋转刷头。
- 3 用温水和中性肥皂彻底清洁两个部件。 4 用毛巾擦干洁面刷。

彻底清洁 我们建议您每个月彻底清洁一次剃须刀头, 或在剃须效果没有以前好时进行清洁。 注意: 剃须刀头被蓝色 (图)或橙色 (图)

- 固定环锁住。 按照正确的说明操作。
- 1 关闭产品。 2 将剃须刀头支架从剃须刀头部件
- (图 17) 的底部抽离。 3 逆时针转动固定环,然后将它从剃须刀 头 (图 22)中取出。 对其他固定环重复此过程。 将其存放
- 在安全的地方。 4 从剃须刀头支架上卸下剃须刀头。
- 每个剃须刀头都包括刀片和网罩。 5 在水龙头 (图 25)下清洁刀片和网罩。
- 6 将刀片重新装回至网罩。 7 将剃须刀头装到剃须刀头支架 (图 29)
- 中。 注意: 确保剃须刀头两侧的槽口正好 卡入剃须刀头支架上的凸起部位。
- 8 蓝色固定环: 将固定环放在剃须刀头 上, 顺时针旋转以重新安装固定环。 将剃须刀头上的箭头与剃须刀头支架 (图 29)上的凸起部位对齐。 顺时针旋 转固定环,直至听到"咔哒"一声,表
- 明固定环已就位(图 30)。 - 橙色固定环: 将固定环放在剃须刀头 上, 顺时针旋转以重新安装固定环 (图 31)。 对其他固定环重复此过程。 每个固定环均具有两个凹槽,正好能够 装入剃须刀头支架的凸缘上。 顺时针 旋转固定环,直至听到"咔哒"一声, 表明固定环已就位 (图 32)。
- 当您重新插入剃须刀头并重新安装固定 环时,请将剃须刀头支架握在手中。 当您执行此操作时, 切勿将剃须刀头支 架放在平面上, 否则可能会造成损坏。
- 9 将剃须刀头支架安装到剃须刀头部件的 底部(可听到"咔哒"一声)(图 19)。 10要重置更换提醒,请按住开/关按钮约 7秒钟。请等到听见两声蜂鸣音。

更换

更换洁面刷头

每3个月应更换一次刷头,或当刷毛在更 短时间内出现弯曲或损坏 (请参见 '订购配 件')时更换。

- 1 关闭产品。 2 从附件基座上卸下刷头 (图 34)。 3 丢弃用过的刷头(请参阅"回收"
- 一章)。 4 将新的洁面刷刷头连接到洁面刷基座。

更换剃须刀头 为获得更好剃须效果,建议每两年更换一 次剃须刀头。 立即更换损坏的剃须刀头。 务必使用原装飞利浦剃须刀头 (请参见'订 购配件')进行更换。

更换提示

出现更换提醒表示需要更换剃须刀头。 剃须刀头部件符号持续亮起,箭头呈白色 闪烁,并且在关闭剃须刀时您将听到蜂鸣 音 (图 33)。

- 1 要更换剃须刀头,请将剃须刀头从剃须 刀头支架上逐一卸下。 有关如何拆卸 固定环和剃须刀头,请参阅"彻底清
- 洁"一章中的说明。 注意: 剃须刀头被蓝色(图)或橙色(图) 固定环锁住。按照正确的说明操作。
- 2 要重置更换提醒,请按住开/关按钮约 7 秒钟。请等到听见两声蜂鸣音。

订购配件

如需购买附件或备件,请访问 www.shop.philips.com/service 或联系您 的飞利浦经销商。 您还可以联系所在国 家/地区的飞利浦客户服务中心(请参阅) 国际保修卡了解详细联系信息)。

- 可选配以下附件和备件: - SH90 飞利浦剃须刀头
- RQ560 飞利浦洁面刷头
- RQ111 飞利浦胡须造型器
- HQ110 飞利浦剃须刀头清洁喷雾剂

回收

- 弃置本产品时,请不要将其与一般生活 垃圾放在一起,应将其交给政府指定的 回收中心。 这样做将有利于环保。

拆下充电电池

必须在丢弃剃须刀前拆下充电电池。 拆下电池之前,请确保剃须刀与插座断开 连接,并且电池电量已耗尽

在您使用工具打开剃须刀时,以及在您丢 弃充电电池时,请采取必要的安全保护

- 1 检查剃须刀背面或胡茬储藏室中是否有
- 螺钉。如果有,请将其拆下。 2 使用螺丝刀或其他工具拆下剃须刀的外 面板。 必要时还需要拆下更多的螺丝 和/或部件,直到您看见装有充电电池 的印刷电路板为止。

3 拆下充电电池。 保修和支持

support 或阅读国际保修卡。 故障处理方法 本章归纳了使用本产品最常遇到的问题。 如果您无法根据以下信息解决问题, 请访

问 www.philips.com/support 查阅常见问

题列表,或联系您所在国家/地区的客户

如需信息或支持,请访问 www.philips.com/

服务中心。

问题	可能的原因	解决方法
充电基 率上的 充灯点 工色。 起。	使用错误的 适配器故障(如没我飞利 原装飞利 适配器)	使用原装飞利浦 7.5W 适配器
	充电期间, 有金属物电 放置在充电 基座上(硬币	从充电基座上取 下所有金属物体

纸夹、硬币 等)	
	如果前两个解决 方案不能解决此问题,则将本产 品返回您所在国 家的客户服务中 心。

		201 - 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
	常工作)	心。
品不能	本产品未正	将本产品放到充
色。	确放到充电	电基座的充电架
	基座上。	上。 正确放置
		时, 充电基座将
		发出信号音,且
		充电基座上的充
		电指示灯开始呈
		白色 (请参见 '充
		由小瓜性

		电')闪烁。
	适配器插入 的电源插座 未通电。	检查是否存在电源 故障,以及连接充电板的插座是否通 电。如果您使用 浴室柜中的墙壁插 座,则可能需要通 过开灯来接通插座 电源。

可能的原因 解决方法 本产品未 如果充电板的充电 正确放到 指示灯仍未亮起, 或者如果产品仍无 充电基座 法充电,请将其送 往飞利浦经销商处 或附近的飞利浦服 务中心。 产品不能 电池已耗 为产品(请参见' 充电')充电。 工作。 电池已耗 产品已关闭 将开/关环逆时针 转至"开"指示 电源。 处 (I) (请参见 '打 开或关闭产品')。 将开/关 剃须刀头支 清洁剃须刀头或将 环逆时针 架被污染或 其更换。另外, 损坏,导致 确认是否是"毛发 "开"指 马达无法运 或污垢堵塞了剃须 示处 (I) 行。 刀头"。 (请参见) 打开或关 闭产品')。 充电后, 来回切换开/关

产品的剃 剃须刀头已 更换剃须刀头。 须效果没 损坏或磨 有以前 损。

产品无

法"打

好。

毛发或污垢 请先清洁剃须刀 堵塞了剃须 头,然后再继续

剃须 (请参见 '清 洁和保养')。 建议您在水龙头下

环, 现在应该可

以"打开"产

冲洗剃须刀头,以 便更彻底地进行清 洁。为此,首先 将剃须刀头从剃须 刀头支架上逐一卸 下。然后,分离 刀片和网罩,并在 水龙头下冲洗每个 刀片和网罩套装。 务必一起冲洗每个 套装中的刀片和网 罩。冲洗后,将刀 片放回网罩中。 最 后,将剃须刀头装 回到剃须刀头支架 中。有关如何卸下 和装回剃须刀头的 更详细说明,请参 阅"更换"一章。

本洁面刷适合各

种皮肤类型。但

是,如果皮肤存在

干燥、皲裂、开口

我不知道 本洁面刷 是否适 合我的皮 肤。

伤处、正在愈合的 伤口、处于术后恢 复期,或者存在严 重粉刺、晒伤、皮 肤感染、皮肤癌、 发炎、湿疹、牛皮 癣等皮肤病或皮肤 过敏症状, 请勿使 用本洁面刷。如果 您正在服用类固醇 类药物,请勿使用

本洁面刷。

敏感或超敏感刷

头。敏感和超敏

软。 建议您在敏

感觉刷头 太粗糙。

我不知道 刷头可与 哪款清洁 产品配合 使用。

干性皮肤上使用超 敏感刷头。 建议您使用自己喜 爱的洁面乳清洁肌 肤。您可以使用清 洁凝胶、泡沫、精 油、牛奶或乳液。 请勿使用带微粒的 磨砂膏或凝胶。

PHILIPS

产品: 飞利浦电动剃须刀 额定电压: 220V 额定频率: 50Hz 额定输入功率: 11 W

问题 可能的原因 解决方法

上无法充

电。

我的智能 智能手机未 请将智能手机放

手机放在 正确放到充 到充电基座的充

充电基座 电基座上。 电架上。 正确放

置时, 充电基座

且充电基座上的

充电指示灯开始

呈白色(请参见

电板的插座是否通

电。 如果您使用

浴室柜中的墙壁插

座,则可能需要通

过开灯来接通插座

容,请联系智能

手机的制造商或

充电')闪烁。

适配器插入 检查是否存在电源

的电源插座 故障,以及连接充

电源。

智能手机与 您的智能手机可

Qi 充电不 能与 Qi 充电不兼

零售商。

将发出信号音,

生产日期: 请见产品本体 珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,

发行日期:10/04/2018

GB4706.9-2008制造

保留备用

产品中有害物质的名称及含量 有害物质 部件名称 多溴联苯 多溴二苯醚 六价铬 (Pb) (Hg) (Cd) (Cr (VI)) (PBDE) (PBB) PCB's Χ 0 0 0 0 0 集成电路板 Electrical contact pins 0 0 0 0 0 电接触片 Power plug 0 0 0 0

电源插头 本表格依据SJ/T 11364的规定编制。 O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。



4222 002 5834 4 DFU-Leaflet A7 v3.indd 8-14 10/04/18 15:57