



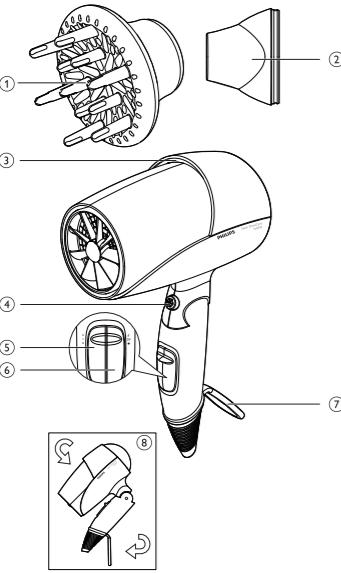

HP8212
HP8213
HP8215
HP8218
HP8219

EN User manual	ZH-HK 使用手册
MS-MY Manual pengguna	دليل المستخدم
PT Manual do utilizador	Руководство пользователя
ZH-CN 用户手册	

PHILIPS

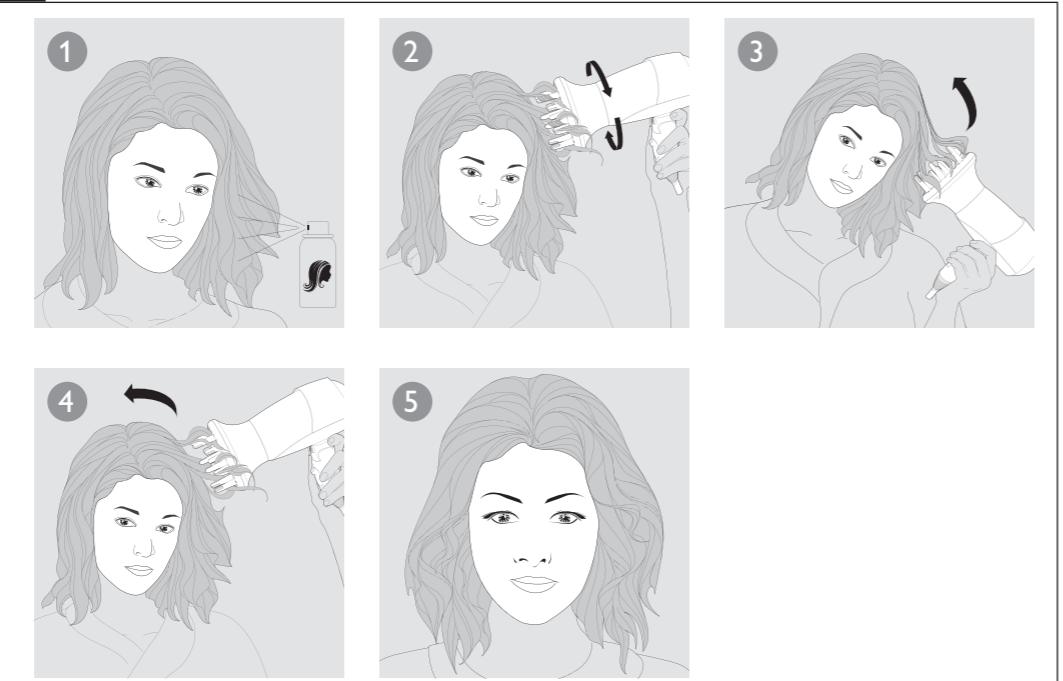

Specifications are subject to change without notice
© 2013 Koninklijke Philips N.V.
All rights reserved.

3140 035 37281



English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING:** Do not use this appliance near water.



When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Always unplug the appliance after use. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

(RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.

Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

- Do not use the appliance for any other purpose than described in this manual.

- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

2 Dry your hair

- Connect the plug to a power supply socket.

- For precise drying, attach the concentrator (②) onto the hairdryer.
- To enhance volume for curly and bouncy style, attach the volume diffuser (①), only for HP8215 and HP8219 onto the hairdryer.
- To disconnect the attachment, pull it off the hairdryer.

- Adjust the airflow switch (④) and temperature switch (⑤) to suitable positions. Press the Cool Shot button (⑥) for cool airflow to fix your style.

Switch	Setting	Function
② Quick-Dry		Dry shower-wet hair quickly
TP Thermoprotect		Gently dry the hair at a constant temperature of 55°C
● Cool Care		Dry the hair with care and seal in shine
Airflow	II	Strong airflow and fast drying
	I	Gentle airflow and styling
	O	Switch off

The ionic function is activated when the appliance is switched on, which provides additional shine and reduces frizz, and the ionic indicator (⑦) lights up.

When the function is on, a special odor may be smelt. It is normal as it is caused by the ions which are generated.

Using the diffuser (Only for HP8215, HP8219)

Diffuser is an attachment that diffuses the air. Instead of straight air flow, you will get a rounded air flow with the diffuser. When it applies on curly hair, it provides more curly definition, and keeps hair from frizzing.

1 Attach the diffuser to the hair dryer.

2 Apply styling product to your wet hair to ensure your curls stay in place.

3 Turn the hair dryer to setting I for best results as this will enhance the diffuser's ability to minimize air flow and preserve your curls.

4 You could position the diffuser into the hair and push upward. If you have longer hair, place the diffuser at the ends of your hair and swirl your hair up into the diffuser as you move up towards your roots. Once you have curled up a section, let it stay for 15 seconds before the next section. This will help you set the style.

5 When you finish all sections, place the diffuser at the roots of your hair and move it in circular motion, it will give the roots volumizing effect.

After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Clean the appliance with damp cloth.
- Fold the appliance (⑧).
- Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (⑨).

3 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly.
The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.	
The appliance may not be suitable for the voltage to which it has been connected.	Adjust the dual voltage switch to match the local power voltage.	

Bahasa Melayu

Tahniah atas pembelian anda dan selamat menggunakan Philips! Untuk memanfaatkan sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

1 Penting

Baca dan teliti manual pengguna ini sebelum anda menggunakan perkakas dan simpan untuk rujukan masa depan.

- AMARAN:** Jangan gunakan perkakas ini dekat dengan air.

Apabila anda menggunakan perkakas ini dalam bilik mandi, cabut plagnya setelah digunakan kerana kehirianannya dengan air juga adalah risiko, walaupun setelah perkakas dimatikan.

- AMARAN:** Jangan gunakan perkakas ini berhampiran dengan tab mandi, pancur air, sinki atau bekas lain yang mengandungi air.

Cabut plag perkakas setiap kali selepas digunakan.

Jika perkakas menjadi terlalu panas, ia dimatikan secara automatik. Cabut plag perkakas dan biarkan sejuk selama beberapa minit. Sebelum anda menghidupkan perkakas itu semula, periksa gril untuk memastikan ia tidak tersoket oleh gumpalan bulu, rambut dll.

Jika kord sesalur kuasa rosak, ia mestilah digantikan oleh Philips, pusat servis yang dibenarkan oleh Philips ataupun pihak lain seumpamanya yang layak bagi mengelakkan bahaya.

Perkakas ini boleh digunakan oleh kanak-kanak berumur 8 tahun dan ke atas dan orang yang kurang keupayaan fizikal, deria atau mental, atau kekurangan pengalaman dan pengetahuan jika mereka diberi

pengawasan dan arahan berkaitan penggunaan perkakas secara selamat dan memahami bahaya yang mungkin berlaku. Kanak-kanak tidak sepatutnya bermain dengan perkakas ini. Pembersihan dan penyenggaraan oleh pengguna tidak sepatutnya dilakukan oleh kanak-kanak tanpa pengawasan.

- Untuk perlindungan tambahan, kami mengesyorkan agar anda memasang peranti arus baki (RCD) dalam litar elektrik yang membekali bilik air tersebut. RCD ini mestilah mempunyai arus operasi baki berkadar yang tidak melebihi 30mA. Tanya pemasang anda untuk mendapat nasihat.

- Jangan masukkan objek logam ke dalam gril udara untuk mengelakkan kejutan elektrik.
- Jangan menghalangi gril udara.
- Sebelum anda menyambungkan perkakas ini, pastikan voltan yang dinyatakan pada perkakas selaras dengan voltan kuasa tempatan anda.
- Jangan gunakan perkakas untuk sebarang tujuan lain selain daripada yang diterangkan dalam buku panduan ini.
- Jangan gunakan perkakas pada rambut palsu.

- Apabila perkakas telah disambungkan kepada kuasa, jangan sekali-kali dibiarakan tanpa diawasi.
- Jangan sekali-kali gunakan sebarang perkakas atau bahagian dari manapun pengilang atau yang tidak disyorkan secara khusus oleh Philips. Jika anda menggunakan aksesori atau bahagian yang sedemikian, jaminan anda menjadi tidak sah.
- Jangan lilit kord sesalur mengelilingi perkakas.
- Tunggu sehingga perkakas sejuk sebelum menyimpannya.

Medan elektromagnet (EMF)

Perkakas Philips mematuhi semua piawaian dan peraturan berkaitan dengan pendendaan kepada medan elektromagnet.

Alam sekitar

Jangan buang perkakas ini dengan sampah rumah biasa di akhir hayatnya, sebaliknya bawanya ke pusat pengutusan rasmii untuk dikitar semula. Mengikut maklumat ini, anda membantu memelihara alam sekitar.

2 Keringkan rambut anda

- Sambungkan plag kepada soket bekalan kuasa.

- Untuk pengeringan persis, pasang penutup (②) pada pengering rambut.
- Untuk menambah kekembangan bagi gaya keriting dan melantun, pasang penyebar kekembangan (①), hanya untuk HP8215 dan HP8219 pada pengering rambut.
- Untuk menanggalkan alat tambahan, cabutkan dari pengering rambut.

- Laraskan suis aliran udara (③) dan suis suhu (⑥) kepada kedudukan yang sesuai. Tekan (④) tetapi buang Pancutan Dingin (⑤) untuk alir udara sejuk bagi menetapkan gaya anda.

Desligue sempre da corrente após cada utilização.

Se o aparelho aquecer excessivamente, desliga-se automaticamente. Desligue o aparelho e deixe-o arrefecer durante alguns minutos. Antes de voltar a ligar o aparelho, verifique as grelhas e certifique-se de que não estão bloqueadas com pêlos, cabelos, etc.

Se o fio estiver danificado, deve ser sempre substituído pela Philips, por um centro de assistência autorizado da Philips ou por pessoal devidamente qualificado para se evitarem situações de perigo.

Este aparelho pode ser utilizado por crianças com idade igual ou superior a 8 anos e por pessoas com capacidades físicas, sensoriais ou mentais reduzidas, ou com falta de experiência e conhecimento, caso tenham sido supervisionadas ou lhes tenham sido dadas instruções relativas à utilização segura do aparelho e se tiverem sido alertadas para os perigos envolvidos. As crianças não podem brincar com o aparelho. A limpeza e a manutenção do utilizador não podem ser efectuadas por crianças sem supervisão.

Para maior segurança, aconselhamos a instalação de um dispositivo de corrente residual (disjuntor) no circuito eléctrico que abastece a casa de banho. Este disjuntor deve ter uma corrente residual nominal não superior a 30 mA. Aconselhe-se com o seu electricista.

Não introduza objectos metálicos nas grelhas de ar para evitar choques eléctricos.

Nunca obstrua as grelhas de ventilação.

Selepas digunakan:

- Matikan perkakas dan cabut plagnya.
- Letakannya di atas permukaan yang tahan panas sehingga menjauh.
- Bersihkan perkakas dengan kain lembap.
- Lipat perkakas (⑦).
- Simpan di tempat yang selamat dan kering, bebas daripada habuk. Anda boleh juga mengantungnya dengan gelang gantung (⑧).

3 Jaminan dan perkhidmatan

Sekiranya anda memerlukan maklumat mengenai penggunaan alat tambahan atau jika anda mempunyai masalah, sila layari laman web Philips di www.philips.com atau hubungi Pusat Layanan Pelanggan Philips di negara anda (anda boleh mendapatkan nombor telefonnya di dalam risalah jaminan serata dunia). Jika tiada Pusat Layanan Pelanggan di negara anda, pergi ke penjual Philips tempatan anda.

4 Menyelesaikan masalah

Masalah	Sebab	Penyelesaian
Alat ini tidak berfungsi	Soket kuasa yang tersambung dengan perkakas mungkin telah rosak.	Pastikan bahawa perkakas telah diplaig masuk.
Perkakas mungkin telah menjadi terlalu panas lalu mati dengan sendirinya.	Cabut plag perkakas dan biarkan sejuk selama beberapa minit. Sebelum anda menghidupkan perkakas itu semula, periksa gril untuk memastikan ia tidak tersoket oleh gumpalan debu, rumput dll.	
Perkakas mungkin tidak sesuai dengan voltan yang digunakan.	Laraskan suis dua voltan agar sesuai dengan voltan kuasa setempat.</	

