

## English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com.cn/welcome](http://www.philips.com.cn/welcome).

## 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING: Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by , a service centre or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.

- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.

## Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



## 2 Dry your hair

- Connect the plug to a power supply socket.
  - Adjust the airflow switch (Ⓔ) to **I** for gentle airflow and styling, or **II** for strong airflow and fast drying.
- Tip:** You can also use the turbo button (Ⓕ) for extra powerful airflow.
- You can use the speed setting **I** for a more convenient quiet drying.
- Adjust the temperature switch (Ⓙ) to **☺** for hot airflow, **☹** for warm airflow, or **☺** for efficiently drying your hair at a constant caring temperature. Press the Cool shot button (Ⓢ) for cool airflow to fix your style.

The appliance with ionic function provides additional shine and reduces frizz.

- To turn the ionic function on or off, adjust the ionic slide switch (Ⓡ) to **I** or **O**.
  - The ionic function may produce a special odor. It is normal and caused by the ions which are generated.

### Nozzle

A nozzle enables you to direct the airflow straight at the brush or comb with which you are styling your hair, and to get perfect styling results and a shiny, polished look.

- To connect the nozzle (Ⓙ), snap it onto the appliance.
- To disconnect the nozzle, pull it off the appliance.

### Volume diffuser

The volume diffuser is specially developed to gently dry both straight and curly or wavy hair.

The volume diffuser has a unique asymmetric design that is contoured to the head, making it easier and more intuitive to use.

- To connect the volume diffuser (Ⓙ), snap it onto the appliance.
- To disconnect the volume diffuser, pull it off the appliance.
- To enhance your natural volume and maintain your curls, hold the dryer vertically to dry your hair.
- To add volume at the roots, insert the pins into your hair in such a way that they touch your scalp.
- Make rotating movements with the appliance to distribute the warm air through your hair.

### After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Take the air inlet grille (Ⓔ) off the appliance to remove hair and dust.
- Rotate the air inlet grille anti-clockwise to take it off the appliance.
- Rotate the air inlet grille clockwise to reattach it to the appliance.
- Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (Ⓢ).

## 3 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at [www.philips.com.cn/support](http://www.philips.com.cn/support) or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

## 4 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

Problem	Cause	Solution
There is bad smell for the first-time of use.	The smell may come from the new appliance.	The smell will gradually disappear after a few uses. Please try to dry/style your hair in a well-ventilated room.
There is burning smell when drying/styling my hair.	If there is some dust or residue left in the appliance, it may be burnt due to the high temperature and produce odor.	Turn off the appliance and wait until it cools down. Check if any residues left. Remove the dirty stuffs from the appliance and keep it clean.

## 简体中文

感谢您的惠顾，欢迎光临 Philips！  
为了您能充分享受 Philips 提供的支持，请在[www.philips.com.cn/welcome](http://www.philips.com.cn/welcome) 注册您的产品。

## 1 重要信息

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- 警告：**请勿在靠近水的地方使用本产品。
- 本产品在浴室内使用时，使用后拔下插头，因为即使本产品开关断开后，接近水仍存在危险。
- 警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 警告符号注释：**禁止在洗澡或淋浴时使用。
- 使用后务必拔下产品的插头。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
- 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似专职人员来更换。




- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上  
有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用  
本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的  
危害。不得让儿童玩耍本  
产品。不要让儿童在无人监督的情况下进行清洁和保养。

- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作  
电流不超过 30mA 的剩余电流装置 (RCD)。向 RCD 安装商咨询。
- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。
- 切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或  
部件。如果使用此类附件或部件，您的保修将失效。
- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。

## 电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。



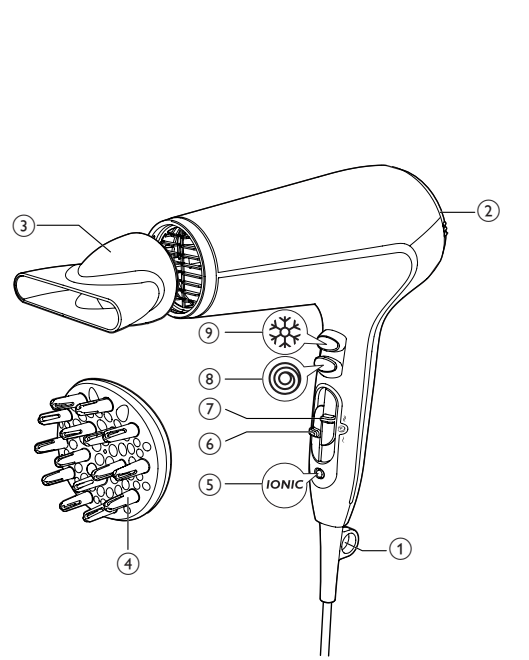

PHILIPS

产品：飞利浦电吹风  
型号：HP8235  
额定电压：220V~  
额定频率：50Hz  
额定输入功率：2200 W  
生产日期：请见产品本体  
产地：中国广东东莞

珠海经济特区飞利浦家庭电器有限公司  
中国珠海市三灶镇琴石工业区  
全国顾客服务热线：4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.15-2008, GB4343.1-2018 及GB17625.1-2012制造

回收

- 弃置产品时，请不要将它与普通生活垃圾一同丢弃，应将其交给官方指定的回收中心。这样做有利于环保。

- 请遵循您所在国家/地区的电器及电子产品分类回收规定。正确弃置本产品有助于避免对环境和人类健康造成负面影响。

2吹干头发

- 1 将插头连接至电源插座。

2 将风速开关 ( ⑥ ) 调至 I 可获得暖风用于造型，调至 II 可获得强风用于快速吹干。
- 提示：您也可以使用强风按钮 ( ⑧ ) 以获得更强劲的风速。

您可以使用速度设置 I 来更加方便安静地吹干头发。

3 将温度开关 ( ⑦ ) 调至 Ⅱ 可获得热风，调至 I 可获得暖风，或调至 Ⅲ 可让您以恒定的护发温度高效地吹干头发。按冷风按钮 ( ⑨ ) 可获得冷风用于定型。

该产品具有负离子功能，可令秀发更加闪亮、顺滑。

4 要打开或关闭负离子功能，请将负离子滑动开关 ( ⑤ ) 调至 I 或 O。

➡ 负离子功能可能会发出一种特殊气味。这是正常情况，是由所产生的负离子导致的。

集风嘴

集风嘴可以将气流集中到您用于制作发型的发梳上，为您打造闪亮完美的造型。

- 要连接集风嘴 ( ③ )，只需将其扣合到产品上即可。
- 要卸下集风嘴，将其从产品上拔出即可。

弧形扩散风嘴

弧形扩散风嘴能轻柔地吹干直发、卷发或波浪形头发而设计。

弧形扩散风嘴采用独特的流线形设计，贴合头部线条，使用更方便简单。

- 1 要连接弧形扩散风嘴 ( ④ )，只需将其扣合到产品上面。

要卸下弧形扩散风嘴，将其拔出即可。

2 要增强您头发自然丰盈的效果，并保持卷发造型，请垂直握住电吹风以吹干头发。

3 要塑造发根蓬松的效果，可将梳齿插入头发并触碰到头皮。

4 握住本产品做旋转运动，用暖风均匀的吹风造型。

使用后：

1 关闭产品并拔下电源插头。

2 将产品置于隔热表面上，直至其冷却。

3 将进风口 ( ② ) 从产品上卸下，清除毛发和灰尘。

4 逆时针旋转进风口，可将其从产品上卸下。

5 顺时针旋转进风口，可将其重新安装到产品上。

6 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环 ( ① ) 将产品挂起存放。

3保修与服务

如果您需要了解信息或有任何疑问，请访问飞利浦网站 [www.philips.com.cn/support](http://www.philips.com.cn/support)。您也可以与您所在地的飞利浦客户服务中心联系（可从保修卡中找到其电话号码）。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

4故障种类和处理方法

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。 检查您家中电源插座的保险丝。
	产品可能过热，因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查出风口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。
首次使用时有异味。	气味可能来自新产品。	使用几次后，气味将逐渐消失。请尝试在通风良好的房间内吹干头发/造型。
吹干头发/造型时有烧焦的气味。	如果产品中残留了一些灰尘或残留物，则可能会因高温而燃烧，并产生气味。	关闭产品电源，等待其冷却。检查是否有残留物。 从产品中取出脏物，并保持清洁。

保留备用

出版日期： 2021-09-06

产品中有害物质的名称及含量		有害物质			
部件名称	电源线 马达	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	本表格依据SJ/T 11364的规定编制。 O：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。 X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
		O	O	O	

\*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

\*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。