


H9823410

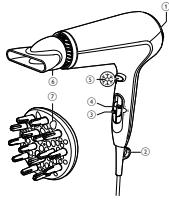

Inr. User manual	IT. Manuale utente
DA. Brugervejledning	NL. Gebruiksaanwijzing
DE. Benutzerhandbuch	NO. Brukerhåndbok
EL. Εγγραφή χρήσης	PT. Instruções de uso
ES. Manual del usuario	RO. Manual de utilizare
FI. Käytäntö	SV. Användarhandbok
FR. Mode d'emploi	TR. Kullanım kılavuzu

PHILIPS

**Do not pull on the power cord after using. Always unplug the appliance by holding the plug.**

#### Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

#### Environment

The symbol means that this product shall not be disposed of with normal household waste (DSTV/ELWU). Follow your local regulations and take the product to an approved electronic products disposal point. Correct disposal helps prevent negative consequences for the environment and human health.

#### 2 Dry your hair

- 1 Connect the plug to a power point.
- 2 Adjust the airflow switch (①) for gentle airflow and styling.
- 3 Adjust the temperature switch (②) for hot air,  $\lambda$  for warm air or  $\lambda$  for efficiently drying your hair at a constant temperature.
- 4 Turn the appliance with the cold button (③) for cool airflow to your style.
- 5 Make rotating movements with the appliance to distribute the warmth evenly.
- 6 Hold the appliance with a general hold. Detach it from the cord when the appliance is switched off.

**Volume diffuser (④)**  
The volume diffuser is specially developed to gently dry both straight and wavy hair.

1 To ensure your natural volume and maintain your curls, hold the dryer vertically and take the diffuser into your hair in such a way that they touch each other.

2 Make rotating movements with the appliance to distribute the warmth evenly.

3 Bend hairknots in (retaining the bends) for a dry and neat result.

**After use**

1 Switch off the appliance and unplug it.

2 Place it on a heat-resistant surface until it cools down.

3 Turn the air intake grille (⑤) to the position to remove hair and dust.

4 Rotate the air grille clockwise to switch it to the opposite position.

5 Keep it in a safe and clean place, free of dust. You can also hang it with the hanging loop (⑥).

#### 3 Garantie og service

Tillykke med dit køb og velkommen til Philips! Hvis du har fået udtale fra en ejer, som Philip's tilbyder, kan du registrere dit produkt på [www.philips.com/welcome](http://www.philips.com/welcome).

#### 1 Vigtigt

Les denne vejevejledning grundigt før du tager apparatet i brug. For information om hvordan du skal håndtere dit apparat, se vores vejledning om håndtering af elektriske produkter.

**• WARNING: Do not use this appliance near water.**

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

**• WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

• Always unplug the appliance after use.

If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.

If the mains cord is damaged, you must have it replaced by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• Always unplug the appliance after use. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair etc.

**• ADVARSEL: Anvend ikke dette apparat i nærheden af vand.**

Hvis du anvender apparatet i et badeværelse skal du stække stikket ud efter brug, da vand udgør en risiko, selvom apparatet er slukket.

**• ADVARSEL: Brug ikke dette apparat i nærheden af badekar, børnebadkar, kummer eller andre kar der indeholder vand.**

Tag alt stikket ud, efter du har brugt apparatet.

Hvis apparatet bliver overophedet, slukker det automatisk. Tag stikket ud af stikkontakten, og lad apparatet afkøle i et par minutter. For du tænder apparatet igen, skal du kontrollere gitterne for at sikre, at de ikke er blokeret af fluff, hår osv.

Hvis netledningen beskadiges, må den kun udskiftes af Philips, et autoriseret Philips-serviceværksted eller en tilsvarende kvalificerede fagmand for at undgå enhver risiko.

Dette apparat kan bruges af børn fra 8 år og opover, men med verringede fysiske, sensoriske eller mentale evner eller manglende erfaring og viden, hvis der er blevet instrueret i sikker brug af apparatet og forstået de medfølgende risici. Lad ikke børn lege med apparatet. Rengøring og vedligeholdelse må ikke foretages af børn uden opsyn.

Son et ekstra sikkerhedsforskrift angående det, at installationen skal ske ved en tekniker, der ikke overstiger 30mA.

Kontakt eventuelt en el-installator:

• Stik aldrig metalstangen ind i luftgaffel, når du tænder apparatet.

Før du tilsætter apparatet, skal du sikre dig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.

Bug ikke apparatet til andre formål end dem, der er beskrevet ved ledningen.

Før du tilsætter apparatet, skal du sikre sig, at den spænding, der er angivet på apparatet, svarer til den lokale spænding.

Bug ikke apparatet til andre formål end dem, der er beskrevet ved ledningen.

Bug ikke apparatet til kunstigt hår.

Bug ikke apparatet på kunstigt hår.

