




フィリップス ボディークルーマー 保証書

CERTIFICATE OF PURCHASE

この保証書は、「無料修理規定」記載内容で無料修理を行うことを約束するものです。お買い上げの日から下記期間中に故障が発生した場合は、フィリップスサポートセンターにお問い合わせください。お客様にご記入いただいた個人情報(保証書の控え)は、株式会社フィリップス・ジャパンのホームページ(<http://www.philips.co.jp>)に掲載させていただきます。お客様の個人情報の取扱いについての当社の方針に基づき適切に管理いたします。


品 名	ボディークルーマー				
品 番	BG3012/15				
保 証 期 間	お買い上げ日より2年				
対 象 部 分	本体、充電アダプタ(丸、コームを除く)				
お買い上げ日	年	月	日		
お 客 様	ご住所 〒				
	ご氏名				
	電話番号				
	販売店名・住所・電話番号				
★ 販 売 店					

★ 保証書は再発行いたしませんので、大切に保管してください。

★ ご返品時等、この保証書はお客様のオプターズボックスの実施と責任を明確にするものです。賞品券、記念品の場合も含めて必ず捺印捺印してお客様にお渡ください。

2019_BG3012-15_cs6_0215.indd 1

2019/02/18 11:58

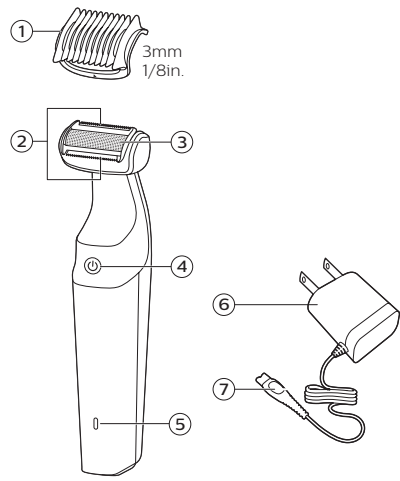

Charging

- Charging takes approx. 8 hours. Charge the appliance before you use it for the first time and when the display indicates that the battery is almost empty.
- Charging, recharging or using the product at temperatures below 40°F (4,5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery.
 - If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- 1 Make sure the appliance is switched off.
 - 2 Insert the small plug into the shaver and put the supply unit in the wall socket (Fig. 3)
 - 3 After charging, remove the supply unit from the wall outlet and pull the small plug out of the appliance.

Operating time BG3012

When the appliance is fully charged, it has a cordless operating time of up to 50 minutes.

Using the appliance

You can use the appliance wet or dry to shave hair on all parts of your body below the neckline (Fig. 5), (Fig. 6).

Always check the appliance and all accessories before you use them. Do not use the appliance or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

- Use this appliance for its intended household use as described in this manual.
- For hygienic reasons, the appliance should only be used by one person.
- Trimming is easier when the skin and hair are dry

Note: This appliance is for cordless use only.

Switching the appliance on and off

- 1 Press the on/off button once to switch the appliance on or off (Fig. 7).

Attaching and detaching combs

- 1 To attach a comb, snap the front part of the comb onto the teeth of the shaving unit and push the projection at the back of the comb into the appliance ('click') (Fig. 8).
- 2 To detach a comb, carefully pull the back part off the appliance and then remove it from the shaving unit (Fig. 9).

Trimming

Trimming

- 1 Snap the trimming comb onto the appliance (Fig. 8).
- 2 Press the on/off button to turn on the appliance (Fig. 7).
- 3 Move the appliance against the direction of hair growth (Fig. 11), (Fig. 12).

Note: Make sure that the flat part of the trimming guard is always fully in contact with the skin.

- 4 Switch off and clean the appliance after each use (see 'Cleaning').

- If you are trimming for the first time, be careful. Do not move the appliance too fast. Make smooth and gentle movements
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and be sure the surface of the comb always stays in contact with your skin.
- Body hair can be trimmed wet or dry, however dry is preferable because wet hair tends to stick to the body.
- When trimming sensitive areas, always use a trimming comb.

Trimming length settings

The trimming comb allows you to cut hair to a length of 3 mm (1/8 in.)

Shaving

This product is only intended for shaving and trimming body parts below the neckline. Do not use it to shave or trim facial or scalp hair.

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- If your hair is longer than 10mm, trim hair to a length of 3mm first for optimum shaving results.
- For dry use, make sure that your skin is clean and dry before using the shaving unit.
- For wet use, prepare your skin with lathered soap or shaving foam before you use the appliance.

- 1 Remove any trimming comb from the appliance (Fig. 9)
- 2 Press the on/off button to switch on the appliance (Fig. 7)
- 3 Stretch your skin taut with your free hand (Fig. 13). Gently press the shaving unit onto skin and move it slowly and smoothly against the direction of hair growth (Fig. 14), (Fig. 15).
- Do not press too hard. Too much pressure can distort the foil and cause skin irritation.
- Make sure the shaving unit is always in full contact with your skin.
- The shaver is bi-directional, which means that you can shave by moving the appliance up and down. Shave against the hair growth for optimal performance.
- 4 Switch off and clean the appliance after each use (see 'Cleaning').

Cleaning

Clean the appliance after every use. Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Never dry trimmer or shaving foil head with a towel, brush or tissue, as this may cause damage.

- 1 switch off the appliance (Fig. 7).
- 2 Remove any trimming comb from the appliance (Fig. 9).
- 3 Remove the shaving unit by pulling it off the appliance (Fig. 16).
- Hold the shaving foil head by the plastic housing only
- 4 Rinse the shaving foil head with warm running tap water (Fig. 17).
- 5 Allow the shaving unit to air dry completely.
- Never dry trimmer or shaving foil head with a towel, brush or tissue, as this may cause damage.
- 6 Rinse the hair chamber under warm running tap water to remove any residues (Fig. 18).
- 7 Reattach the shaving unit by snapping it back onto the appliance (Fig. 19). ('click')

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

- Model TT2000 Philips replacement shaving unit.

Replacement

Replacing the shaving foil head

For maximum shaving performance, we advise you to replace the shaving unit every year (TT2000). If the shaving unit is worn or damaged, do not use the appliance and replace the shaving unit immediately. Always replace the shaving unit with original Philips TT2000 shaving unit. Accessories (Fig. 20).

- 1 Switch off the appliance and disconnect it from the wall socket (Fig. 7).
 - 2 Pull the shaving unit out of the appliance (Fig. 16).
- Note:** The foil is delicate. Handle the shaving unit with care.
- 3 Snap the new shaving unit into the appliance ('Click') (Fig. 19).
 - 4 Check if the shaving unit is firmly attached before you use the appliance.

Recycling

- This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).
- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC). Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- 1 Place a flathead screwdriver in the hole above the socket for the small plug. Twist the screwdriver to create a gap between the front and back panel of the appliance (Fig. 21).
- 2 Place a flathead screwdriver between the front and back panel. Twist the screwdriver to remove front panel of the appliance (Fig. 22)
- 3 Place a flathead screwdriver between the inner body and the back panel. Twist the screwdriver to remove the back panel of the appliance (Fig. 23).
- 4 Remove the two screws in the back of the appliance (Fig. 24).
- 5 Pull the panel with the on-off button from the inner body (Fig. 25).
- 6 Remove the transparent inner cover by bending the transparent flaps away from the hooks (Fig. 26).
- 7 Pull the printed circuit board off the inner body (Fig. 27)
- 8 Cut the wires that connect the batteries to the printed circuit board and remove the batteries (Fig. 28).

Warranty and support

If you need information or support, please visit www.philips.com/support or read the international warranty leaflet.

Warranty restrictions

Cutting units are not covered by the terms of the international warranty because they are subject to wear.

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (Fig. 1)

- 1 Trimming comb(3mm/ 1/8in.)
- 2 Shaving unit
- 3 Shaving foil
- 4 On/off button
- 5 Battery status light
- 6 Supply unit
- 7 Small plug

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry.

Warning

- To charge the battery, only use the detachable supply unit (HQ850) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always unplug the appliance before you clean it under the tap.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the charging stand in water and do not rinse it under the tap.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use water hotter than 60°C to rinse the appliance.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- This appliance is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the appliance can therefore only be used without cord.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100–240 volts to a safe low voltage of less than 24 volts.

Charging

Battery status indications

- When the battery is almost empty, the battery status indicator flashes orange (Fig. 2).
- When the appliance is charging, the battery status indicator flashes green (Fig. 3).
- When the battery is fully charged, the battery status indicator lights up green continuously.

Note: After approx. 30 minutes, the light goes out automatically.