

ENGLISH

IMPORTANT
SAFETY
INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a clipper that has fallen into water. Unplug immediately.

2. Use clipper only in dry condition. Do not use while bathing or in a shower.

3. Do not submerge clipper in water.

4. Do not place or store clipper where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

5. Always unplug this clipper from the electrical outlet immediately after using, except when clipper is (re)charging.

6. Unplug clipper before cleaning.

7. When discarding clipper, unplug clipper to remove rechargeable battery. See Battery Removal instructions.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.

2. Use this clipper for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.

3. Never operate this clipper if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. For assistance visit our website www.philips.com/norelco or call 1-800-243-3050.

4. Do not rinse or immerse the clipper handle in water or any other liquid.

5. Keep the clipper, cord and any attachments away from heated surfaces.

6. Never drop or insert any object into any opening.

7. Do not operate, charge or plug in clipper outdoors or where aerosol (spray) products are being used or where oxygen is being administered.

8. Always check cutters, cutting unit and comb before using the clipper. Do not use the clipper if cutters, cutting unit or comb are damaged, as injury may occur.

9. Always attach plug to clipper first, then to outlet. To disconnect, turn on/off switch to "OFF" position, then remove plug from outlet.

10. To prevent possible damage to the cord, do not wrap cord around the clipper.

11. Use only the cord provided to charge and (re)charge clipper.

12. Never put clipper in direct sunlight or store at a temperature above 140°F.

13. This clipper is for use on human hair only. Do not use this clipper for any other purpose.

14. Only use the power plug and other accessories supplied with the clipper.

SAVE THESE
INSTRUCTIONS

Features

The diagram illustrates the components of the Philips SH5185 electric shaver system. The main shaver unit is shown vertically, with a detailed view of the shaver head at the top. The shaver head features a sliding trimmer guard (A) and a main shaver head (B). The main shaver head has a sliding trimmer guard (C) and a main shaver head (D). The main shaver head has a sliding trimmer guard (E) and a main shaver head (F). The main shaver head has a sliding trimmer guard (G) and a main shaver head (H). The main shaver head has a sliding trimmer guard (I) and a main shaver head (J). The main shaver head has a sliding trimmer guard (K) and a main shaver head (L). The main shaver head has a sliding trimmer guard (M) and a main shaver head (N). The main shaver head has a sliding trimmer guard (O) and a main shaver head (P). The main shaver head has a sliding trimmer guard (Q) and a main shaver head (R). The main shaver head has a sliding trimmer guard (S) and a main shaver head (T). The main shaver head has a sliding trimmer guard (U) and a main shaver head (V). The main shaver head has a sliding trimmer guard (W) and a main shaver head (X). The main shaver head has a sliding trimmer guard (Y) and a main shaver head (Z).

-

Throw your scissors away and put your new Hair Clipper to the test. We guarantee precise results or Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.