 




EN User manual ZH-CN 用户手册

PHILIPS

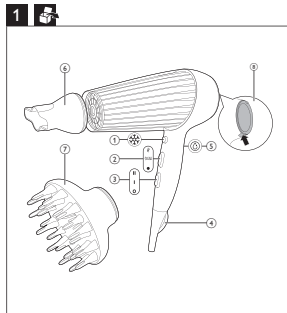

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com.cn/welcome.

 
1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the main cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years

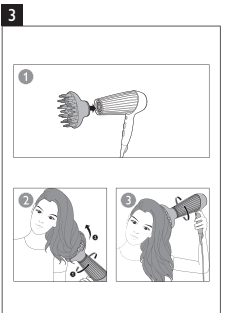

- and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must

- have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the main cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.
- Do not operate the appliance with wet hands.

- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an extremely hazardous situation for the user.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.



2 Introduction

The MoistureProtect dryer has an innovative new sensor technology called the Moisture Protect sensor. This technology has been specifically designed to preserve the natural hydration of your hair. The infrared sensor measures the temperature of your hair while drying it, diagnoses your hair and adapts the temperature to preserve its natural hydration. This gives advanced protection to your hair and scalp from overheating and therefore keeps your hair healthier and shinier. We've already turned the sensor on so you can enjoy maximum protection right from the start. When the appliance is powered on, ions are automatically and continuously dispersed, reducing frizz and providing additional shine.

3 Overview

- 1 Cool shot button
- 2 Temperature settings
- 3 Airflow settings
- 4 Hanging loop
- 5 Moisture protect button
- 6 Nozzle
- 7 Diffuser
- 8 Air inlet grille

4 Dry your hair

- 1 Connect the plug to a power supply socket.
- 2 Attach the nozzle (6) or volume diffuser (7) for your styling needs.

- For precise drying, attach the nozzle on the hair dryer. The nozzle enables you to direct the airflow straight at the brush or comb with which you are styling your hair.
- To enhance volume for curls and bouncy style, attach the diffuser on the hair dryer. Hold the hairdryer vertically and place the hair in a circular motion in between pins and move towards scalp slowly.
- To add volume at the roots, insert the pins into your hair by making rotating movements. It helps to dry your hair roots and scalp without hot spot.
- 3 Adjust the airflow switch (3) and temperature switch (2) to suitable positions.
- 4 Switch on MoistureProtect (5) for more protection. The moisture protect is on when using for the first time.
 - ↳ The purple LED light on the product indicates the moisture protect sensor is on.

Switch	Settings	Function
MoistureProtect	⑤	Protect the hair from overheating and preserve the natural hydration of your hair
Temperature	②	Dry shower-wet hair quickly
	恒温 Thermoprotect	Dry your hair at a constant caring temperature
	●	Gently dry the hair
Airflow	③	Strong airflow and fast drying
	①	Gentle airflow and styling
	○	Switch off

- 5 Press the cool shot button (1) for cool airflow to fix your style.

After use:

- 1 Switch off the appliance and unplug it.
- 2 Place it on a heat-resistant surface until it cools down.
- 3 To disconnect the nozzle or volume diffuser, pull it off the hairdryer.
- 4 Press the latch to detach the air inlet grille (8) to remove hair and dust.
- 5 Clean the appliance by a damp cloth.
- 6 Keep it in a safe and dry place, free of dust. You can also hang it with the hanging loop (4).

5 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com.cn/support or contact the Philips Customer Care Centre in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

6 Troubleshooting

Problem	Cause	Solution
The appliance does not work at all.	The power socket to which the appliance has been connected may be broken.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local power voltage.

简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com.cn/welcome 注册您的产品。

1 重要事项

- 使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。
- **警告：**请勿在靠近水的地方使用本产品。
- 在浴室使用产品后需拔下插头，即使产品已关闭，近水放置仍存在危险。
- **警告：**不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- **警告符号注释：**禁止在洗澡或淋浴时使用。
- 使用后务必拔下产品的插头。
- 如果产品过热，它将自动关闭电源。拔掉产品插头，让其冷却几分钟。再次启动产品之前，请检查出风口，确保其未被绒毛、头发等杂物堵塞。
- 如果电源线损坏，为了避免危险，必须由制造商、其维修部或类似部门的专业人员更换。
- 本产品可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有所障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们的安全使用，并且让他们明白相关的危害。不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。
- 为了增加保护，建议在浴室供电的电气回路中安装一个额定剩余工作电流不超过 30mA 的剩余电流装置 (RCD)。详情请向 RCD 安装商咨询。
- 切勿将金属物体插入风口，以免触电。
- 切勿阻塞电吹风风口。
- 连接产品之前，请确保产品上标示的电压与当地电源电压相符。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 当产品连接了电源时，切勿让其无人看管。



切勿使用由其它制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。

- 切勿将电源线缠绕在产品上。
- 待产品完全冷却后再存放。
- 使用后请勿拉扯电源线。拔下产品插头时，请握紧插头。
- 切勿用湿手操作本产品。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

-弃置产品时，请不要将其与一般生活垃圾堆放在一起，应将其交给政府指定的回收中心。这样做有利于环保。

- 遵守有关国家和地区关于弃置电子及电器产品的规定。正确弃置产品有助于减少对环境和人类健康产生负面影响。

2 简介

MoistureProtect 电吹风采用创新的保湿传感器技术。该技术专为保持头发的自然滋润而设计。红外传感器可在干发时测量头发的温度，分析并调整风热，以保持头发的自然滋润。这可为头发和头皮提供先进的保护，防止过热现象产生，让您的秀发更健康、亮泽。我们已经打开了传感器，因此您从一开始就可以享受完善的保护。

产品接通电源后，可自动且持续地释放负离子，令秀发更加顺滑、亮泽。

3 概览

- ① 冷风喷出钮
- ② 温度设置
- ③ 风速设置
- ④ 挂环
- ⑤ Moisture Protect 按钮
- ⑥ 集风嘴
- ⑦ 扩散风嘴
- ⑧ 进风口

4 吹干头发

- 将插头连接至电源插座。
- 根据造型需要安装集风嘴(⑥)或扩散风嘴(⑦)。

- 要集中风力，请将集风嘴安装到电吹风上。集风嘴可以将气流集中到您用于造型的发梳上。
- 要提高头发蓬松度，塑造丰盈且有弹性的造型，可将扩散风嘴安装到电吹风上。垂直握住电吹风，将头发放置在梳齿之间进行旋转，并缓慢移动至发根。要增加发根的丰盈度，可将扩散风嘴的梳齿插入头发，作旋转运动。这有助于吹干发根和头皮，且不会烫伤。
- 将风速开关(③)和温度开关(②)调至适当的位置。
- 打开 MoistureProtect ④(⑤)以带来更多保护。首次使用时，保湿功能 是打开的。
 - 产品上的紫色 LED 指示灯用于指示保湿传感器已开启。

开关	设置	功能
Moisture-Protect	④	防止头发过热，保持头发的自然滋润
温度	②	快速吹干 湿透的头发
	③	在恒定护理温度下 吹干头发
	●	轻柔地吹干头发
	●	产生强风，快速吹干头发
风速	II	产生柔风，用于定型
	I	关闭

- 按冷风喷出钮 ※(①)可获得冷风用于定型。

使用后：

- 请关闭产品并拔下电源插头。
- 将产品置于隔热表面上，直至其冷却。
- 要卸下集风嘴或扩散风嘴，请将其从电吹风中拉出。
- 按下门锁拆下进风口盖(⑧)以清除毛发和灰尘。
- 用湿布擦拭产品。
- 将产品存放在安全、干燥、清洁的位置。您也可以使用挂环(④)将产品挂起存放。

5 保修与服务

如果您需要了解有关信息（如更换附件的相关信息）或有任何疑问，请访问飞利浦网站www.philips.com.cn/support。您也可以与您所在国家/地区的飞利浦客户服务中心联系。在全球保修卡中可找到其电话号码。如果您所在的国家/地区没有飞利浦客户服务中心，请向当地的飞利浦经销商求助。

6 故障排除

问题	原因	解决方法
产品完全无法工作。	产品所连接的电源插座可能已损坏。	检查设备已正确插入。检查您家中电源插座的保险丝。
	产品可能过热，因此自动断电。	拔掉产品插头，让其冷却几分钟。再次打开产品电源之前，请检查出口，确保没有被绒毛、头发等杂物堵塞。
	产品连接的电源电压可能与产品电压不符。	确保产品型号铭牌上标示的电压与当地电源电压相符。

保留备用

出版日期：2018-05-31

PHILIPS	
产品型号：HP8281	<input type="checkbox"/>
额定电压：220V~	
额定频率：50Hz	
额定输入功率：2200 W	
生产日期：请见产品本体	
产地：中国广东东莞	
珠海经济特区飞利浦家庭电器有限公司	
中国珠海市三灶镇琴石工业区	
全国顾客服务热线：4008 800 008	
本产品根据国标 GB4706.1–2005, GB4706.15–2008, GB4343.1–2009及GB17625.1–2012制造	



保修及服务：

此产品是一件设计精良，用高品质元件制造之家用电器，在正常使用及保养下应能发挥其优越性能。在购买日期后二年内，若发生任何因制造工艺或元器件造成之损坏，飞利浦中国维修服务中心将持证为用户提供免费门市维修服务，视情况更换零件或整个产品。

无论在保期中或保期后，只要飞利浦正式行错该产品的任何国家皆可获得维修服务。

若飞利浦在当地无行销该项产品，飞利浦同样提供维修服务，但可能因未储备所需零件，维修时间可能较长，敬请谅解。

请联络当地飞利浦经销商，或飞利浦服务部门。

若您需洽询相关资讯，或遇到困难事项时，请联络当地飞利浦维修服务中心，或向飞利浦服务热线咨询。

中国顾客服务热线：4008 800 008（用户需承担本地通话费）。

网址：http://www.philips.com.cn

网上会员注册与产品注册：

- 登陆 http://w ww.philips.com.cn/welcome
- 点击“创建新账户”，创建您的飞利浦账号
- 点击“注册产品”，通过产品名称或产品型号查找产品，完成产品注册

服务须知

需要此产品的售后服务，拨打服务热线：4008 800 008

在维修服务过程中有任何意见，欢迎致函飞利浦（中国）投资有限公司解决疑虑。

	产品中有害物质的名称及含量					
	有害物质					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
马达	X	0	0	0	0	0
负离子发生器	X	0	0	0	0	0
电子元件	X	0	0	0	0	0
电源线	X	0	0	0	0	0

本表格依据SJ/T 11364的规定编制。

0：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在該部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

*该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

*该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理業者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

保修条例：

* 在购买日期后二年内，凡经本公司特约维修站人员确认为正常使用情况下，因制造工艺或元器件造成之损坏，您都将获得免费维修服务。

* 此免费服务不包括需时常更换的易耗零配件（吸尘机纸袋、布袋，空气清新机滤网，滤芯，活性炭，咖啡壶过滤网）及附件（如须刀网膜、刀头，咖啡杯、食品加工机杯刀具等），辅助装置，运输费及维修人员上门服务费。

* 用户请保留此联。

* 此证若经涂改即作废。

* 此证须连同发票正本使用方为有效。

* 以下情况将无法获得免费服务

- 使用不当引起的人为损坏，例如接入不当当电源、使用不当配件、不当之安装、不当说明书使用、错误使用或疏忽而造成损坏等。因运输及其他意外而造成之损坏。非经本公司认可之维修和改装。其他因不可抗力（如自然灾害、电压异常等）造成的损坏。
- 一般家庭以外使用（如工业、商业用）而造成的损坏。
- 正常使用引起的产品老化、磨损等，但不影响产品的正常使用。

* 保修证作为在规定时间内及条件之内进行免费维修的保证，并不限制消费者的法定权利。

* 飞利浦提供2年全球联保服务，在产品由飞利浦正式销售的所有国家中，都提供保修和保修期满的维修服务。要求保修时，您需提供发票正本，且请求保修的日期还在保修期限之内。




飞利浦（中国）投资有限公司
上海市静安区灵石路718号A1幢
4222.005.04224

HP8284



EN User manual ZH-CN 用户手册

   PHILIPS

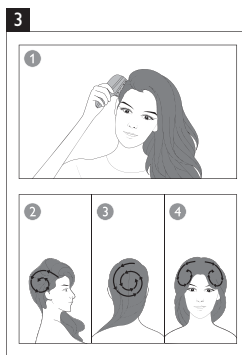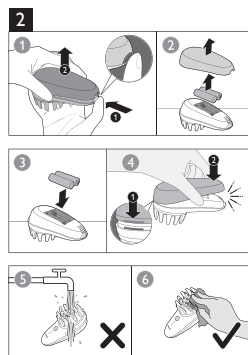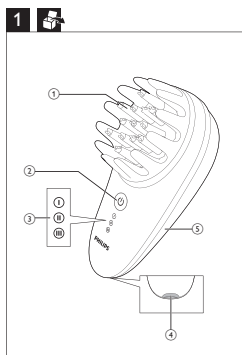

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com.cn/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- **WARNING:** Do not use this appliance near water.
- Never immerse the body of the brush in water or any other liquid, nor rinse it under the tap.
- Always switch off the appliance after use.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people

- could result in an extremely hazardous situation for the user.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- Do not use this massager together with hairdryer for styling purpose.
- Do not expose the brush under sunlight for a long period of time. The ultraviolet ray may

- lead to aging in the brush, which the product can break easily.
- Use and store the appliance at a temperature between 15°C and 35°C.
- The appliance runs on two alkaline AA (LR6) batteries.
- The bypack battery is not rechargeable. Non-rechargeable batteries are not to be recharged.
- Never insert 14500 Lithium Ion Battery (3.7V) into the device as it is dangerous.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of according to Recycling Guideline in next section.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.
- Do not use the scalp massager on wet hair.
- Different types of batteries or new and used batteries are not to be mixed.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Recycling

-This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU).

-This symbol means that this product contains batteries which shall not be disposed of with normal household waste (2006/66/EC).



-Follow your country's rules for the separate collection of electrical and electronic products and batteries. Correct disposal helps prevent negative consequences for the environment and human health.
Removing disposable batteries
To remove disposable batteries, see the instructions for placing and/or removing batteries in the user manual.

2 Overview

- ① Massage bristles
- ② On/off button
- ③ Intensity Indicator
- ④ Release button
- ⑤ Battery cover

3 Massage your scalp

The scalp massager with the soft vibrating bristles helps release scalp tension while improving micro circulation, so your hair will be healthy looking, strong and beautiful and you look fresh and radiant.
** Hereditary, hormonal, lifestyle and environment related parameters would also impact hair health.

Install and remove the battery (Fig.2)

The scalp massager runs on two alkaline AA (LR6) batteries (provided).

- 1 To remove the battery cover (⑤), hold the massager and press the release button (④) to lift it up.
- 2 Put batteries in or remove batteries out from the battery compartment.
- 3 Put the battery cover back on. You will hear a "click" when it is properly closed.

Note

- Make sure your hands are dry when you insert the battery.
- Make sure the + and - poles of the battery are in the right direction.
- If you are not going to use the appliance for a month or more, please remove the battery to avoid battery leakage.
- Do not leave any exhausted battery in the appliance.

How to use the massager (Fig.3)

- 1 Hold the massager with the intensity indicator interface (③) facing you.
- 2 Press the on/off button (②) to turn on the appliance.
- 3 The appliance starts to operate at Intensity ①.
- 4 Massager intensity comes in 3 levels ①, ②, & ③. You may adjust the intensity of the massager by pressing the on/off button. The selected intensity will light up.
- 5 Gently place the massaging bristles on your scalp without putting too much pressure on it.
- 6 Slowly rotate in a circular motion across the scalp and on desired areas. You can also leave the massager in one spot on the scalp to ease the tension in that area.

- 7 You may adjust the vibration intensity according to your needs while massaging.
- For optimal result, you may use the scalp massager after hair drying.

Note: The appliance will automatically turn off after 15 minutes of use.

After use:

- 1 You can use a damp cloth to clean the body of the brush.
- 2 To clean the bristles (①):
 - Use your fingers to remove the dust or hair in the bristles.
 - Use a wet cotton pad to wipe the bristles and a cotton swab to clean the base of the bristles.
 - Never use alcohol and/or corrosive liquid to clean the massager as it may cause damage to the product.
- 3 Keep it in a safe and dry place for daily use.

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com.cn/support or contact the Philips Customer Care Centre in your country. The phone number is in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer.

5 Troubleshooting

Problem	Cause	Solution
The appliance does not work.	The battery is exhausted.	Replace the battery.
	You have not placed the battery in the battery compartment correctly.	Put the battery in the compartment in accordance with the + and - indications in the compartment.
	You have not attached the battery compartment cover properly.	Push the battery compartment cover onto the appliance ("click").

简体中文

感谢您的惠顾，欢迎光临飞利浦！为了您能充分享受飞利浦提供的支持，请在 www.philips.com.cn/welcome 上注册您的产品。

1 重要事项

使用产品之前，请仔细阅读本用户手册，并妥善保管以供日后参考。

- 警告：请勿在靠近水的地方使用本产品。
- 切勿将梳体部分浸入水或其它任何液体，也不要来自来水龙头下冲洗。
- 使用后，务必关闭产品电源。
- 警告：不要在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本产品。
- 本产品适合由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上无障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。
- 不得让儿童玩耍本产品。不要让儿童在无人监督的情况下进行清洁和保养。
- 产品只能送到飞利浦授权的服务中心检修。由不合格人员进行修理可能将用户置于极度危险的境地。
- 切勿使用由其他制造商生产的，或未经飞利浦特别推荐的任何附件或部件。如果使用此类附件或部件，您的保修将失效。
- 请勿将本产品用于本手册中说明以外的任何其它用途。
- 请勿对假发使用本产品。
- 请勿将此按摩器与电吹风一起使用进行美发造型。
- 请勿将梳齿长时间曝晒于阳光下。紫外线可能导致梳齿老化，造成产品容易折断。
- 必须在 15°C 至 35°C 之间的温度下使用和存放本产品。
- 本产品使用两节碱性 AA (LR6) 电池。
- 随附的电池不可充电。一次性电池不能用来充电。



- 切勿将 14500 锂电池 (3.7V) 放入产品中, 因为这样非常危险。
- 应以正确极性装入电池。
- 根据下一章节中的回收规定, 从产品中取出废旧电池并安全处理。
- 如果长期存放产品而不使用, 则应将电池取出。
- 避免电源端短路。
- 切勿在湿发上使用头皮按摩器。
- 不得将不同类型电池及新旧电池混用。

电磁场 (EMF)

本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

回收

- 此符号表示本产品不应与普通生活垃圾一同弃置 (2012/19/EU)。
 - 此符号表示本产品包含电池, 不得将该电池与普通生活垃圾一同弃置 (2006/66/EC)。
 - 请遵循您所在国家/地区的电器与电子产品及电池分类回收规定。正确弃置产品有助于避免对环境对人类健康造成负面影响。
 - 取出一次性电池
- 要拆卸一次性电池, 请参阅用户手册中关于安装和/或拆卸电池的说明进行操作。

2 概览

- ① 按摩梳齿
- ② 开/关按钮
- ③ 强度指示灯
- ④ 释放按钮
- ⑤ 电池盖

3 按摩头皮

头皮按摩器采用软振动梳齿, 有助于舒缓头皮紧张, 同时促进微循环, 从而使您的秀发健康、坚挺、靓丽, 让您看起来精神焕发、光彩照人。

- * 遗传、激素、生活方式和环境相关因素也会影响头发健康。

安装和拆卸电池 (图 2)

头皮按摩器使用两节碱性 AA (LR6) 电池 (附送)。

- 1 要拆下电池盖 (⑤), 握住按摩器并按下释放按钮 (④) 以打开电池盖。
- 2 将电池放入电池仓中或从电池仓中将电池取出。
- 3 装回电池盖。正确闭合时, 您将听到“咔哒”一声。

注意

- 装入电池时, 双手要保持干燥。
- 确保电池的 + 和 - 极方向正确。
- 如果超过一个月不使用本产品, 请取出电池, 以避免电池漏液。
- 切勿将已耗尽的电池留在本产品中。

如何使用按摩器 (图 3)

- 1 握住按摩器, 让指示灯 (③) 朝向您。
 - 2 按开/关 ④ 按钮 (②) 开启产品。
 - ↳ 产品开始以 ① 强度操作。
 - 3 按摩器强度有 3 个级别: ①、② 和 ③。您可以通过按开/关按钮来调整按摩器强度。所选强度的指示灯将亮起。
 - 4 将按摩梳齿轻轻地放在头皮上, 不要施加过大压力。
 - 5 在头皮和所需部位缓慢地旋转。您还可以将按摩器停留在头皮上的一个位置, 以舒缓该部位的紧张感。
 - 6 您可以在按摩时根据需要调整振动强度。
- 要获得出色效果, 建议在头发吹干后使用头皮按摩器。

注意: 本产品将在使用 15 分钟后自动关闭。

使用后:

- 1 您可以用湿布清洁梳体。
- 2 要清洁梳齿 (①):
 - 用手指清理梳齿上的灰尘或毛发。



- 使用湿棉片擦拭梳齿, 并使用棉签清洁梳齿底部。
- 请勿使用酒精和/或腐蚀性液体清洁按摩器, 否则可能会损坏产品。

3 将产品存放在安全、干燥的位置, 便于日常使用。

4 保修与服务

如果您需要了解有关信息 (如更换附件的相关信息) 或有任何疑问, 请访问飞利浦网站 www.philips.com.cn/support 您也可以与您所在国家/地区的飞利浦客户服务中心联系。在全球保修卡中可找到其电话号码。如果您所在的国家/地区没有飞利浦客户服务中心, 请向当地的飞利浦经销商求助。

5 故障排除

问题	原因	解决方法
产品无法工作。	电池电量已耗尽。	更换电池。
	您未将电池正确放入电池的 + 和 - 指示池。	按照电池仓中的 + 和 - 指示池, 将电池装入电池仓。
	电池仓盖安装不正确。	将电池仓盖按回产品上 (可听到“咔哒”一声)。

保修及服务:

此产品是一件设计精良, 用高品质元件制造之家用电器, 在正常使用及保养下应能发挥其优越性能。在购买日期后二年内, 若发生任何因制造工艺或元器件造成之损坏, 飞利浦中国维修服务用户将为持证用户提供免费上门维修服务, 视情况更换零件或整个产品。

无论在保期中或保期后, 只要飞利浦正式行销该产品的任何国家皆可获得维修服务。

若飞利浦在当地无行销该产品, 飞利浦同样提供维修服务, 但可能因未储备所需零件, 维修时间可能较长, 敬请谅解。请联系当地飞利浦经销商, 或飞利浦服务部门。

若您需查询相关资讯, 或遇困难事项时, 请联系当地飞利浦服务中心, 或向飞利浦服务热线咨询。

中国顾客服务热线: 4008 800 008
(用户需承担本地通话费)。
网址: <http://www.philips.com.cn>

网上会员注册与产品注册:

- 1) 登陆 <http://www.philips.com.cn/welcome>
- 2) 点击“创建新账户”, 创建您的飞利浦账号
- 3) 点击“注册产品”, 通过产品名称或产品型号查找产品, 完成产品注册

服务须知

需此产品的售后服务,

拨打服务热线: 4008 800 008

在维修服务过程中有任何疑问,

欢迎致函飞利浦 (中国) 投资有限公司解决疑难。

保修条例:

* 在购买日期后二年内, 凡经本公司特约维修站人员确认为正常使用情况下, 因制造工艺或元器件造成之损坏, 您都将获得免费维修服务。

* 此免费服务不包括需时常更换的易耗零配件 (吸尘机纸袋, 布袋, 空气清新机滤网, 滤芯, 活性炭, 咖啡壶过滤器网) 及附件 (如须刀网膜、刀头, 咖啡杯, 食品加工机杯刀具等), 辅助装置, 运输费及维修人员上门服务费。

* 用户请保留此联。

* 此证若经涂改即作废。

* 此证须连同发票正本使用方为有效。

* 以下情况将不能获得免费服务

1. 使用不当引起的人为损坏, 例如接入不当电源、使用不适当配件、不适当之安装、不依说明书使用、错误使用或疏忽而造成损坏等。因运输及其他意外而造成之损坏。非经本公司认可之维修和改装。其他因不可抗力 (如自然灾害、电压异常等) 造成的损坏。
2. 一般家庭以外使用 (如工业、商业用) 而造成的损坏。
3. 正常使用引起的产品老化、磨损等, 但不影响产品的正常使用。

* 保修证作为在规定时间内及条件之内进行免费维修的保证, 并不限制消费者的法定权利。

* 飞利浦提供 2 年全球联保服务, 在产品由飞利浦正式销售的所有国家中, 都提供保修和保修期届满的维修服务。要求保修时, 您需提供发票正本, 且请求保修的日期还在保修期限之内。

飞利浦 (中国) 投资有限公司
上海市静安区灵石路 718 号 A1 幢

4222.005.0422.4

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
马达	X	○	○	○	○	○
开关	○	○	○	○	○	○
线材	○	○	○	○	○	○
五金件	○	○	○	○	○	○
塑胶材料	○	○	○	○	○	○
包装材料	○	○	○	○	○	○
电子元件	X	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

* 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。

* 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息, 有助于产品废弃时的妥善处理。

保留备用

出版日期: 2018-06-07