

English

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

General description (fig. 1)

- 1 Trimming guard
 - 2 Cutting unit
 - 3 On/off button
 - 4 Socket for small plug
 - 5 Small plug
 - 6 Battery charge indicator
 - 7 Supply unit
- not shown: cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- To charge the battery, only use the detachable supply unit (A00390) provided with the appliance.
- The supply unit contains a transformer. Do not cut off the supply unit to replace it with another plug, as this causes a hazardous situation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- This appliance is not washable. Never immerse the appliance in water and do not rinse it under the tap (Fig. 2).
- Only use this appliance for its intended purpose as shown in the user manual.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100–240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance fully before you use it for the first time and after a long period of disuse. It takes approximately 10 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 45 minutes.

- 1 Make sure the appliance is switched off.
 - 2 Insert the small plug into the appliance (Fig. 3).
 - 3 Put the supply unit in the wall socket.
- The charging light on the supply unit lights up green to indicate that the product is charging.

Note: The charging light on the supply unit does not change color and does not go out when the product is fully charged.

- 4 After charging, remove the supply unit from the wall socket and pull the small plug out of the appliance.

Optimizing the lifetime of the rechargeable battery

When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

- Slide the on/off button up to switch the product on or off (Fig. 4).

Using the appliance

Note: Switch off and clean the appliance after each use.

Always comb the beard and/or moustache with a fine comb before you start trimming.

Be careful when you trim for the first time. Do not move the trimmer too fast. Make smooth and gentle movements.

Trimming with comb

Note: When you trim for the first time, start at the highest length setting to familiarize yourself with the appliance.

Use the trimming comb attached to the cutting element to trim your beard and moustache in your preferred style. Turn the zoom wheel to choose from 11 length settings ranging from 0.5mm to 10mm (1/32in. to 13/32in.).

- 1 Slide the trimming comb straight into the guiding groove of the appliance (Fig. 5).
- 2 Turn the zoom wheel to the desired setting (Fig. 6). The desired hair length setting is shown in the center of the zoom wheel.
- 3 Switch the appliance on.
- 4 To trim most effectively, move the appliance against the hair growth direction. Make sure that the surface of the comb always stays in contact with the skin.

Note: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e., upwards, downwards, or across). Practice is best for optimum results.

- 5 Regularly remove cut hair from the comb. If a lot of hair has accumulated in the comb, remove it from the appliance and blow and/or shake out the hairs (Fig. 7). The selected hair length setting does not change when the comb is removed.
- 6 Switch off and clean the product after each use (see 'Cleaning').

Trimming for 'stubble look'

- 1 Be certain trimming comb is attached to the appliance and use setting 0.5mm (1/32in.) to create a 'stubble look' trim (Fig. 8).

Trimming without comb

Use the trimmer without the trimming comb to trim the edges and single hairs.

Be careful when you trim without the comb as the cutting unit will remove every hair it touches.

- 1 Pull the trimming guard straight off the appliance (Fig. 10).
- 2 Switch the appliance on.
- 3 Make well-controlled movements. Touch the hair lightly with the trimmer (Fig. 9).

Cleaning

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

Caution: Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

- 1 Switch off the appliance and disconnect it from the power outlet.
- 2 Wipe the housing of the appliance with a dry cloth.

Caution: Never immerse the appliance in water, or rinse it under the tap. Only the cutting unit can be rinsed under the tap.


- 3 Remove the comb (Fig. 10) and clean it with the cleaning brush and/or rinse it under the tap.
- 4 Remove the cutting unit by pushing against the teeth of the cutting unit (Fig. 11) and clean it with the brush or rinse it under the tap.
- 5 Carefully shake off excess water and let air dry completely.
- 6 Insert the lug of the cutting unit into the guiding slot and push the cutting unit back onto the appliance (Fig. 12).

Ordering accessories

To buy accessories or spare parts, visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details).

Recycling

- Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
- This product contains a built-in rechargeable battery which shall not be disposed of with normal household waste. Please take your product to an official collection point or a Philips service center to have a professional remove the rechargeable battery.
- Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

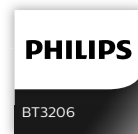

© 2018 Koninklijke Philips N.V.
All rights reserved
保留所有权利
4222.002.8958.2 (6/2/2018)



Removing the rechargeable battery

Only remove the rechargeable battery when you discard the product. Before you remove the battery, make sure that the product is disconnected from the wall socket and that the battery is completely empty.

Take any necessary safety precautions when you handle tools to open the product and when you dispose of the rechargeable battery.

- Check if there are screws in the back or front of the appliance. If so, remove them.
- Remove the back and/or front panel of the appliance with a screwdriver. If necessary, also remove additional screws and/or parts until you see the printed circuit board with the rechargeable battery.
- Remove the rechargeable battery.

Warranty and support

If you need information or support, please visit **www.philips.com/support** or read the international warranty leaflet.

简体中文

简介

感谢您的惠顾，欢迎光临飞利浦！为了让您能充分享受飞利浦提供的支持，请在 **www.philips.com/welcome** 上注册您的产品。

产品图示（图 1）

- 修剪网罩
 - 修剪部件
 - 开/关按钮
 - 小插头插口
 - 小插头
 - 电池充电指示灯
 - 电源部件
- 未显示： 清洁刷

重要安全信息

使用本产品及其附件之前，请仔细阅读本重要信息，并妥善保管以供日后参考。 随附的附件可能因产品而异。

危险

- 保持电源部件干燥 (图)。
- 警告符号注释： 禁止在打开的水龙头下进行清洗 (图)。

警告

- 要给电池充电，请仅使用产品随附的可拆卸电源部件 (A00390)。
- 电源部件中包含一个变压器。 请勿自行更换电源部件的插头，否则将导致严重后果。
- 本产品也可以由 8 岁或以上年龄的儿童以及肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人士使用，但前提是有人对他们使用本产品进行监督或指导，以确保他们安全使用，并且让他们明白相关的危害。 切勿让儿童玩弄本产品。 不要让儿童在无人监督的情况下对本产品进行清洁和保养。
- 使用前，请务必检查产品。 请勿使用损坏的产品，否则可能对人体造成伤害。 请务必用原装型号更换损坏的部件。
- 切勿拆开本产品更换充电电池。

警告

- 本产品不可水洗。 切勿将本产品浸入水中，也不要在水龙头下冲洗 (图)。
- 警告符号注释： 禁止在打开的水龙头下进行清洗 (图)。
- 只能将本产品用于用户手册中所示的原定用途。
- 出于卫生的目的，本产品只能供一个人使用。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。
- 请勿在包含电动空气清新器的墙壁插座上或其周围使用电源部件，以免电源部件受到不可修复的损坏。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准和法规。

概述

- 电源部件适合在 100 - 240 伏的电源电压下工作。
- 该电源部件可将 100-240 伏的电压转换为 24 伏以下的安全低电压。

充电

首次使用前或长时间不用之后，请为产品充满电。 本产品充满电约需要 10 小时。 当电池充满电时，本产品可在不接电源的情况下工作长达 45 分钟。

- 确保产品电源已关闭。
 - 将小插头插入产品 (图 2)。
 - 将电源部件插入电源插座。
- 电源部件上的充电指示灯呈绿色亮起，表示产品正在充电。

注意： 产品充满电后，电源部件上的充电指示灯既不会改变颜色，也不会熄灭。

- 充电之后，从电源插座上拔下电源部件，并从本产品上拔下小插头。

优化充电电池寿命

首次为产品充电后，建议您将产品一直使用到电池耗尽为止。 一直使用本产品，直到马达在修剪过程中几乎停止运行。 然后再为电池充电。 每年至少两次遵循此流程。

- 请向上滑动开/关按钮以打开或关闭 (图 3)本产品。

使用本产品

注意： 每次使用后，请关闭并清洁产品。

开始修剪之前，应始终使用细梳将胡须和/或小胡子梳顺。

首次修剪时要特别小心。 请勿过快移动修剪器。 应确保动作轻柔流畅。

使用修剪梳修剪

注意： 第一次修剪时，从最高的长度设定开始修剪，以熟悉产品的使用方法。

使用连接了修剪部件的修剪梳齿将胡须和须髥修剪成自己喜欢的风格。 旋转调节轮，从 11 种长度设置中进行

选择，长度范围在 0.5 毫米到 10 毫米（1/32 英寸到 13/32 英寸）之间。

- 将修剪梳齿直接滑入产品 (图 4)的导槽中。
- 将调节轮旋转到所需的设定 (图 5)。 所需的须发长度设置显示在调节轮的中心。
- 启动产品。
- 如需要最高修剪效率，请逆着头发生长的方向移动本产品。 确保修剪梳的表面始终接触皮肤。

注意： 由于并非所有的须发均按相同的方向生长，因此您可能需要尝试不同的修剪位置（即向上、向下或交叉）。 不断实践才能获得最佳效果。

- 定期清除梳齿上的残留头发。 如果梳齿中积聚了大量的须发，请将梳齿从产品中取出，然后通过吹气和/或摇晃的方式将须发 (图 6)清除。 取出梳齿时，选定的须发长度设置不会发生更改。
- 每次使用 (请参见 "清洁")后，请关闭电源并清洁修剪器。

修剪“短茬形象”

- 要塑造“短茬形象”形象，请确保将修剪梳齿连接到本产品上，并使用 0.5 毫米（1/32 英寸）设置进行修剪 (图 7)。

不使用修剪梳修剪

在不带修剪梳齿的情况下，用修剪器修剪边缘和单根胡须。

由于修剪部件会去除接触到的每一根须发，因此在不使用修剪梳进行修剪时要特别小心。

- 将修剪网罩竖直抽离产品 (图 9)。
- 启动产品。
- 必须控制好产品的移动。 用修剪器 (图 8)轻轻触碰须发。

清洁

切勿使用钢丝绒、研磨性清洗剂或腐蚀性液体（例如汽油和丙酮）来清洁本产品。

切勿用毛巾或纸巾擦干修剪器齿，否则可能会损坏修剪器齿。

警告： 切勿使用钢丝球、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁本产品。

- 关闭产品并与电源插座断开连接。
- 使用干布擦拭产品表面。

警告： 切勿将本产品浸入水中，也不要在水龙头下冲洗。 仅修剪部件可在水龙头下冲洗。

- 取下梳齿 (图 9)，然后用清洁刷进行清洁和/或放在水龙头下冲洗。
- 朝修剪部件 (图 10)的齿方向推动以将其取下，然后用清洁刷进行清洁或放在水龙头下冲洗。
- 小心地用掉多余的水份然后彻底晾干。
- 将修剪部件的凸缘插入导向槽，然后将修剪部件推回到产品 (图 11)上。

订购配件

要购买附件或备件，请访问 **www.shop.philips.com/service** 或联系您的飞利浦经销商。 您还可以联系所在国家/地区的飞利浦客户服务中心（请参阅全球保修卡了解详细联系信息）。

回收

- 弃置本产品时，请不要将其与一般生活垃圾放在一起，应将其交给政府指定的回收中心。 这样做将有利于环保。
- 此产品包含内置充电电池：请勿将充电电池与一般生活垃圾一起弃置。 请您将产品送到官方收集中心或飞利浦服务中心，请专业人士移除充电电池。
- 遵循您的国家/地区有关分类回收电子电气产品和充电电池的规定。 正确弃置产品有助于避免对环境和人类健康造成不良后果。

部件名称	产品中有毒物质的名称及含量					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	x	o	o	o	o	o
Electrical contact pins 电接触片	x	o	o	o	o	o
Power plug 电源插头	x	o	o	o	o	o
Internal metal parts 内部金属件	x	o	o	o	o	o

本表格依据SJ/T 11364的规定编制。

O:表示该有毒物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X:表示该有毒物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

- 该表格中所显示的“有害物质”在产品正常使用情况下不会对人身和环境产生任何伤害。
- 该表格中所显示的“有害物质”及其存在的部件向消费者和回收处理从业者提供相关物质的存在信息，有助于产品废弃时的妥善处理。

拆下充电电池


必须在丢弃剃须刀前拆下充电电池。 卸下电池之前，请确保本产品与电源断开连接并且电池电量已耗尽。

当您使用工具打开本产品时以及在您弃置充电电池时，请采取必要的安全保护措施。

- 检查产品的前面和后面是否有螺丝。 如果有，请将其拆下。
- 用螺丝刀卸下产品的前面板和/或后面板。 必要时还需要拆下更多的螺丝和/或部件，直到您看见装有充电电池的印刷电路板为止。
- 拆下充电电池。

保修和支持

如需信息或支持，请访问 **www.philips.com/support** 或阅读国际保修卡。

PHILIPS	
<p>产品： 飞利浦胡须造型器</p> <p>型号： BT3206</p> <p>额定电压： 220V~</p> <p>额定频率： 50Hz</p> <p>额定输入功率： 2 W</p> <p>生产日期： 请见产品本体</p> <p>产地： 印度尼西亚</p>	
<p>飞利浦（中国）投资有限公司</p> <p>上海市静安区灵石路718号A1幢</p> <p>全国顾客服务热线:4008 800 008</p>	
<p>本产品根据国标 GB4706.1-2005, GB4706.9-2008制造</p>	