






© 2018 Koninklijke Philips Electronics N.V. All rights reserved. 4222.002.7386.3 (03/2018)



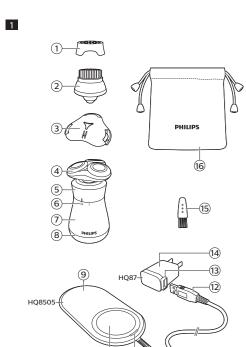

4222 002 7386 3 DFU-Leaflet A7 v4.indd 1-6

ENGLISH

General description (Fig.1)

- Protection cap for cleansing brush
- Cleansing brush Protection cap for shaving unit
- 4 Shaving unit
- 5 On/off ring
- 6 On/off indications
- Handle
- 8 Battery low indicator 9 Charging pad (type HQ8508)
- 10 Charging platform
- 11 Charging indicator
- 12 USB plug
- 13 Socket for USB plug 14 Supply unit (adapter, type HQ87)
- 15 Cleaning brush

Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. The accessories supplied may vary for different products.

Danger

- Keep the supply unit dry (Fig. 2).

Warning

- The appliance is a Class III construction (Fig. 3).
- To charge the battery, only use the detachable supply unit (supply unit, type HQ87. Charging pad, type HQ8508) provided with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.
- Do not open the appliance to replace the rechargeable battery.

Caution

- Never immerse the charging pad in water.
- Always make sure the charging pad is completely dry before you connect it to the wall socket.
- Never use water hotter than 60°C to rinse the shaver.
- Only use this appliance for its intended purpose as shown in the user manual.
- The charging pad is not intended for use in a car. It may interfere with the automotive electronic systems.
- For safety reasons, do not use the shaver while you drive a car.
- For hygienic reasons, the appliance should only be used by one person.
- Never use compressed air. scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Water may trickle out of the shaver after your rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

- Do not use the supply unit in or near wall sockets that contain an electric air freshener to prevent irreparable damage to the supply unit.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields

- This shaver is waterproof (Fig. 4). It is suitable for use in the bath or shower and for cleaning under the tap.
- The supply unit is suitable for mains voltages ranging from 100 to 240 volts.
- The supply unit transforms 100-240 volts to a safe low voltage of less than 24 volts.

Charging

Charge the appliance before you use it for the first time and when the battery low indicator indicates that the battery is almost empty

Note: The shaver is Qi compliant.

Charging takes approx. 2 hours. A fully charged appliance has a operating time of up to 30 minutes. Tip: If your smartphone is compatible with Qi charging, you can also use the charging pad to charge your smartphone.

- 1 Put the adapter in the wall socket and place the appliance onto the charging platform of the charging pad (Fig. 5).
- The charging pad bleeps when the appliance is correctly placed onto the charging platform
- 2 After charging, remove the adapter from the wall socket

Battery charging When the shaver is charging, the charging indicator

flashes white (Fig. 6). Battery fully charged

When the battery is fully charged, the charging indicator lights up white continuously.

Battery low

When the battery is almost empty, the battery low indicator flashes orange (Fig. 7).

Using the appliance

Switching the appliance on and off

- 1 To switch on the appliance, turn the on/off ring anticlockwise to the ,on' indication (I) (Fig. 8).
- 2 To switch off the appliance, turn the on/off ring clockwise to the ,off' indication (0).

Shaving

Skin adaptation period

Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system. To allow your skin to adapt to this new appliance, we advise you to shave regularly (at least 3 times a week) and exclusively with this appliance for a period of 3 weeks.

Dry shaving

- 1 Switch on the appliance.
- 2 Move the shaving unit over your skin in circular movements (Fig. 9).

Note: Circular movements provide better

- shaving results than straight movements.
- 3 Switch off the appliance. 4 Clean the appliance after every use.

Wet shaving

For a more comfortable shave, you can also use this appliance on a wet face with shaving foam or shaving gel. To shave with shaving foam or shaving gel, follow the steps below:

- 1 Apply some water to your skin. 2 Apply shaving foam or shaving gel to your skin.
- 3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.
- 4 Switch on the appliance. 5 Move the shaving unit over your skin in circular

movements (Fig. 9). Note: Rinse the shaving unit regularly to ensure

that it continues to glide smoothly over your skin. **6** After use, rinse and dry your face gently and clean the appliance (see ,Cleaning and

maintenance'). Note: Make sure you rinse all foam or shaving gel off the appliance.

Using click-on attachments

Removing or attaching the click-on

- 1 Make sure the appliance is switched off. 2 Pull the attachment straight off the appliance (Fig. 11).
- Note: Do not twist the attachment while you pull it off the appliance.
- 3 Insert the lug of the click-on attachment into the slot in the top of the appliance (Fig. 12). Then press down the attachment to attach it to the appliance (, click')

Using the click-on cleansing brush

Use the rotating cleansing brush with your daily cleansing cream. The cleansing brush removes oil and dirt, contributing to a healthy and oil-free skin. 1 Make sure the appliance is switched off.

- 2 Remove the shaving unit from the appliance and attach the click-on brush (Fig. 12).
- 3 Moisten the brush with water (Fig. 13)
- Caution: Do not use the appliance with a dry brush, as this can irritate the skin.

- 4 Moisten your face with water and apply a
- cleanser to your face (Fig. 14). Switch on the appliance
- 6 Gently move the brush across your skin from the nose towards the ear (Fig. 15). Do not push the attachment to hard onto the skin to make sure the treatment remains comfortable.
- 7 After approx. 20 seconds, move the appliance to your other cheek and start cleansing this part of your face (Fig. 16).

Do not cleanse the sensitive area around

8 After approx. 20 seconds, move the appliance to your forehead and start cleansing this part of your face. Gently move the brush head from left

Note: We advise you to not overdo the cleansing and to not cleanse any zone longer

- **9** After the treatment, rinse and dry your face. Your face is now ready for the next step of your daily skincare routine
- 10 Clean the click-on brush after use (see ,Cleaning the click-on attachment').

Cleaning and maintenance

Cleaning the appliance

Clean the shaver after every shave for optimal performance

- Switch off the appliance.
- 2 Rinse the shaving unit under a warm tap (Fig. 10) Be careful with hot water. Always check if the water is not too hot, to prevent burning your
- 3 Pull the shaving head holder off the bottom part of the shaving unit (Fig. 17).
- 4 Rinse the shaving head holder under a warm
- 5 Carefully shake off excess water and let the shaving head holder air-dry completely

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

6 Reattach the shaving head holder to the bottom part of the shaving unit (,click') (Fig. 19).

Thorough cleaning

We advise you to clean the shaving heads thoroughly once a month or when the appliance does not shave as well as it used to

Note: The shaving heads are locked by a blue (Fig. 21) or an orange (Fig. 22) retaining ring. Follow

- 1 Switch off the appliance.
- 2 Pull the shaving head holder off the bottom part of the shaving unit (Fig. 17).
- 3 Rinse the hair chamber and shaving head holder under the tap (Fig. 23).
- 4 Turn the retaining ring anticlockwise and lift it off the shaving head (Fig. 25). Repeat this process for the other retaining rings.
- 5 Remove the shaving heads from the shaving head holder (Fig. 26). Each shaving head consists of a cutter and guard.
- Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before
- optimal shaving performance is restored. 6 Clean the cutter and guard under the tap (Fig. 27).
- 7 Shake off excess water

Place them aside in a safe place.

- 8 Put the cutter back into the guard. **9** Place the shaving heads in the shaving head
- holder (Fig. 28). Note: Make sure the notches on both sides of the shaving heads fit exactly onto the
- projections in the shaving head holder. 10 Blue retaining ring: Place the retaining ring on the shaving head and turn it clockwise to
- reattach the retaining ring. Place the arrows on the ring in line with the projections in the shaving head holder (Fig. 29). Turn the ring clockwise until it clicks to indicate
- that the ring is fixed (Fig. 31). Orange retaining ring: Place the retaining ring on the shaving head and turn it clockwise to reattach the retaining ring (Fig. 30). Repeat this process for the other retaining rings.
- Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage

exactly into the projections of the shaving head holder. Turn the ring clockwise until your hear a click to indicate that the ring is fixed (Fig. 32).

Each retaining ring has two recesses that fit

11 Attach the shaving head holder to the bottom part of the shaving unit ('click') (Fig. 19).

Cleaning the charging pad

- 1 Wipe the surface of the charging pad with a slightly damp cloth to remove any dirt (Fig. 20).
- 2 Dry the surface with a dry cloth after cleaning. Caution: Always make sure the charging pad is completely dry before you connect it to the

Cleaning the click-on attachment

Cleaning the click-on brush

power outlet.

- 1 Make sure the appliance is switched off. **2** Detach the brush head from the attachment
- Note: Do not twist the brush head while you pull it off the brush base

3 Clean both parts thoroughly with warm water

and mild soap. 4 Dry the cleansing brush with a towel.

Replacement

Replacing the cleansing brush head

The cleansing brush attachment should be replaced every 3 months or earlier if the brush hairs

- are bent or damaged. Switch off the appliance.
- 2 Detach the brush head from the attachment holder. 3 Throw away the used brush head (see chapter
- .Recvcling') 4 Attach the new cleansing brush head to the
- brush base.

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years. Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips shaving heads.

Replacement reminder

The replacement reminder indicates that the shaving heads need to be replaced. The shaving unit symbol lights up continuously, the arrows flash white and

you hear a beep when you switch off the shaver.

1 To replace the shaving heads, remove the shaving heads from the shaving head holder one by one. See chapter Thorough Cleaning for the instructions on how to remove the retaining rings and shaving heads.

Note: The shaving heads are locked by a blue (Fig. 21) or an orange (Fig. 22) retaining ring. Follow the correct instructions.

2 To reset the replacement reminder, press and hold the on/off button for approx. 7 seconds. Wait until you hear two beeps.

Ordering accessories

To buy accessories or spare parts visit www.shop.philips.com/service or go to your Philips dealer. You can also contact the Philips Consumer Care Center in your country (see the international warranty leaflet for contact details) The following accessories and spare parts are

available SH90 Philips shaving heads

Recycling

- RQ560 Philips cleansing brush head
- RQ111 Philips beard styler
- HQ110 Philips Shaving head Cleaning Spray

normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve

- Do not throw away the product with the

Removing the rechargeable battery Only remove the rechargeable battery when you discard the shaver. Before you remove the battery, make sure that the shaver is

the battery is completely empty Take any necessary safety precautions when you handle tools to open the shaver and when

disconnected from the wall socket and that

- you dispose of the rechargeable battery. 1 Remove the bottom plate of the appliance with a screwdriver.
- 2 Undo the screws in the bottom of the housing with a screwdriver and remove the cap. 3 Undo the screws in the body and remove
- the body by pushing on the shaving head connector 4 Remove the rechargeable battery.

Warranty and support If you need information or support, please visit www.philips.com/support or read the international

warranty leaflet **Troubleshooting**

Problem Possible

This chapter summarizes the most common problems you could encounter with the product. If you are unable to solve the problem with the information below, visit www.philips.com/support for a list of frequently asked questions or contact the Consumer Care Center in your country.

Solution

'Charging').

The charging indicator on the charging pad lights up red.	Wrong adapter used or adapter malfunction (e.g. no original Philips adapter is used)	Use the original Philips 7.5W adapter
	Metal objects are placed on the pad during charging (e.g. paper clip, coins, etc)	Remove any metal objects from the pad
	Shaver/ pad charge malfunction (e.g. either pad or shaver not working properly)	If the first and second solution do not solve the issue, return the appliance to Customer Care Centre in your country.
The appliance does not charge.	The appliance is not placed correctly onto the charging pad.	Place the appliance onto the charging platform of the charging pad. When placed correctly, the charging pad will make a sound and the charging indicator on the charging pad starts flashing white (see

cause The wall socket Verify whether there into which you is a power failure have inserted and if the wall the adapter is socket to which you connect the charging plate is live. If you use a wall socket in a bathroom cabinet you may need to switch on the light to activate the socket. If the charging light on the charging plate still does not light up or if the appliance still does not charge. take it to your Philips

Solution

Possible

Problem

work.

The

used to.

The battery is Charge the appliance appliance (see 'Charging'). does not

> The appliance Turn the on/off ring is switched off. anticlockwise to the 'on' indication (I) (see 'Switching the appliance on and

> > Replace the shaving

heads before you

dealer or the nearest

Philips service

The shaving Clean the shaving head holder heads or replace is soiled or them. Also see 'Hairs or dirt obstruct the damaged to such an extent shaving heads'. that the motor

Turn the on/off ring appliance back and forth, the appliance should does not switch now switch 'on'. 'on' after charging

The shaving

obstruct the

appliance heads are damaged or does not shave as worn. well as it Clean the shaving

shaving heads. continue shaving

(see 'Cleaning and maintenance'). We advise you to clean the shaving heads more thoroughly by rinsing them under the tap. To do this, first remove the shaving heads from the shaving head holder one by one. Then separate the cutter from its guard and rinse each matching set under the tap. Make sure you keep each set of a cutter and guard together After rinsing, place the cutter back into its guard. Finally, but the shaving heads back into the

shaving head holder

For a more detailed

to remove and place

description of how

back the shaving

'Replacement'.

heads, see chapter

The cleansing brush

is suitable for all skin

types. However, do

skin, open wounds,

not use the brush

on dry, chapped

I do not know if the cleansing brush is suitable for use on my

healing wounds, skin recovering from surgery or if you suffer from a skin disease or skin irritation, such as severe acne, sunburn, skin infection, skin cancer, inflammatio eczema, psoriasis etc. Do not use the cleansing brush if you are taking steroidbased medication.

The brush I do not know If you experience feels too if the cleansing the brush head as harsh on brush is too harsh, we advise suitable for use you to start using on my skin. the Sensitive or

Extra Sensitive brush head. The Sensitive and Extra Sensitive brush heads have softer bristles. We recommend the Sensitive brush head for sensitive skin and the Extra Sensitive brush head for extra sensitive and dry skin.

03/04/18 14:13

Problem	Possible cause	Solution
I don't know with which cleansing products I can use the brush head.		We advise you to cleanse your skin with your favorite cleanser. You can use cleansing gel, foam, oil, milk or lotions. Please do not use scrub cream or gel with particles.
My smart-	The	Place the smartphone

phone does smartphone not charge is not placed when correctly onto placed onto the charging the charging pad.

phone onto the charging platform of the charging pad. When placed correctly, the charging pad will make a sound and the charging indicator on the charging pad starts flashing white (see 'Charging').

The wall socket Verify whether there into which you is a power failure and have inserted if the wall socket to

the adapter is which you connect the charging plate is live. If you use a wall socket in a bathroom cabinet, you may need to switch on the light to activate the Your smartphone

smartphone is might not be with Qi charging

not compatible compatible with Qi charging; contact smartphone's manufacturer or retailer

简体中文

一般说明(图1)

- 1 洁面刷保护盖
- 剃须刀头部件保护盖
- 剃须刀头部件 开/关环
- 开/关指示
- 电池电量不足指示灯

• ----

- 充电基座(类型 HQ8508)
- 11 充电指示灯

- 14 电源部件(适配器, 类型 HQ87)

使用本产品及其附件之前,请仔细阅读本重要信息,并 妥善保管以供日后参考。 随附的附件可能因产品而异。

- 保持电源部件干燥 (图 2)。
- 警告符号注释: 禁止在打开的 水龙头下进行清洗 (图 2)。

- 本产品为 Ⅲ 级构造 (图 3)。
- 要给电池充电,请仅使用该产品 随附的可拆卸电源部件(电源部 件,类型 HQ87。 充电基座, 类型 HQ8508)。
- 本产品也可以由8岁或以上年龄 的儿童以及肢体不健全、感觉或 精神上有障碍或缺乏相关经验和 知识的人士使用,但前提是有人 对他们使用本产品进行监督或指 导,以确保他们安全使用,并且 让他们明白相关的危害。 切勿 让儿童玩弄本产品。 不要让儿 童在无人监督的情况下对本产品 进行清洁和保养。
- 使用前,请务必检查产品。请 勿使用损坏的产品,否则可能对 人体造成伤害。 请务必用原装 型号更换损坏的部件。
- 切勿拆开本产品更换充电电池。

- 切勿将充电基座浸入水中。
- 务必确保充电基座完全干燥后, 再将其连接至电源插座。
- 切勿使用温度高于 60°C 的热 水冲洗剃须刀。

- 只能将本产品用于用户手册中所 示的原定用途。
- 充电基座不适用于车载充电。 它可能会干扰汽车的电子系统。
- 出于安全原因,请勿在驾车时使 用剃须刀。
- 出于卫生的目的,本产品只能供 一个人使用。
- 切勿使用压缩气体、钢丝绒、 研磨性清洁剂或腐蚀性液体 (例如汽油或丙酮)来清洁产品。
- 请勿在包含电动空气清新器的 墙壁插座上或其周围使用电源部 件,以免电源部件受到不可修复 的损坏。

电磁场 (EMF)

本 Philips 产品符合所有有关暴露于电磁场的适用标准

- 符号注释:适合于在洗澡或淋浴时使用(图 4)。 允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近
- 该剃须刀具有防水性能 (图 4)。 适合在沐浴或淋浴
- 时使用, 也可以放在水龙头下清洗。 电源部件适合在 100 - 240 伏的电源电压下工作。 该电源部件可将 100-240 伏的电压转换为 24 伏以

第一次使用本产品之前,以及当电池电量不足指示灯指 示电池电量快要耗尽时, 请先为本产品充电。

注意: 剃须刀兼容 Qi。

下的安全低电压。

- 充电约需 2 小时。 充满电的产品最长可使用 30 分钟。 提示: 如果您的智能手机与 Qi 充电兼容,您还可以使 用充电基座为您的智能手机充电。
- 1 将适配器插入插座,并将本产品放到充电垫(图 5) 的充电架上。
- 当本产品正确放到充电架上时,充电基座会发出 短促的信号音。
- 2 充电之后,请断开适配器与插座的连接。

电池正在充电 剃须刀充电时, 充电指示灯会呈白色 (图 6)闪烁。

电池已完全充满

电池充满电时,充电指示灯将呈白色持续亮起。

使用本产品

电池电量不足 当电池的电量几乎耗尽时, 电池低电量指示灯会呈橙色

打开或关闭产品

- 1 要打开本产品,请将开/关环逆时针转至"开"指示
- 2 要关闭本产品,请将开/关环顺时针转至"关"指示 处 (0)。

剃须

皮肤适应期

前几次剃须可能不会带给您预期效果, 并且您的皮肤可 能会受到轻度刺激。 这是正常的。 您的皮肤和胡须需 要时间适应任何新的剃须系统。 为了让您的皮肤适应这 款新产品, 我们建议您在 3 周时间内定期(至少每周 3 次) 仅使用本产品剃须。

干剃

- 1 启动产品 2 将剃须刀头部件在皮肤上以划圈形式移动 (图 9)。
- 注意: 划圈动作比直线动作的剃须效果更好。
- 3 关闭产品。
- 4 每次使用后均应清洁产品。

湿剃

- 要获得更舒适的剃须体验, 您也可以先用剃须泡沫或剃 须啫喱将脸弄湿,然后再用本产品进行剃须。要用剃须 泡沫或剃须啫喱剃须,请按照下面的步骤执行操作: 1 用水润湿皮肤
- 2 在皮肤上涂抹剃须泡沫或剃须啫喱。 3 在水龙头下冲洗一下剃须刀头部件,确保剃须刀头
- 部件可以在您的皮肤上顺畅滑动。 4 启动产品。
- 注意: 定期冲洗剃须刀头部件, 确保其能够继续在
- 您的皮肤上顺畅滑动 6 使用后,冲洗并轻轻擦干脸部,然后清洁本产品 (请参见'清洁和保养')
- 注意: 确保冲洗干净本产品上的所有泡沫或剃须

使用卡入式附件

拆卸或安装卡入式附件

- 1 确保产品电源已关闭 2 将附件竖直抽离产品(图 11)。
- 注意: 将附件从产品上抽出时,不要旋转。
- 3 将卡入式附件的凸缘插入本产品 (图 12)顶部的槽 内。 然后,按下附件将其安装到本产品上(可听 到"咔哒"一声)。

使用卡入式洁面刷

将旋转洁面刷与日常洁面产品一起使用。 洁面刷可去除 油脂和污垢,焕发健康无油脂的肌肤。 确保产品电源已关闭

- 2 取下本产品的剃须刀头部件并连接卡入式洁面刷 (图 12)。
- 3 用水 (图 13)湿润洁面刷。
- 警告: 切勿在洁面刷干燥的情況下使用产品, 否则 可能会刺激皮肤。 4 用水润湿面部,并将洁面乳涂抹到脸(图 14)上。
- 5 启动产品。
- 6 在鼻子至耳朵 (图 15)的皮肤上轻轻地移动刷头 请勿用力地将附件压在皮肤上,以确保舒适护理。
- 7 约 20 秒后, 可将本产品移至另一侧面颊, 开始清洁

这部分面部皮肤 (图 16)。

切勿清洁眼部周围的敏感区域。

8 约 20 秒后,可将本产品移至前额,开始清洁这部分 面部皮肤。 轻轻将刷头从左向右移动。

注意: 建议您不要过度清洁, 任何部位的清洁时间 不要超过 20 秒钟。

- 9 护理后,洗脸并擦干。现在您可以进行日常面部护
- 10 使用 (请参见 '清洁卡入式附件')后,请清洁卡入式

清洁和保养

清洁产品

每次剃须后请清洁剃须刀, 以获得出色性能。

- 2 用温水 (图 10)冲洗剃须刀头部件。
- 使用热水要当心。 切记先检查水温是否太高, 以防
- 3 将剃须刀头支架从剃须刀头部件(图 17)的底部抽离。 4 用温水 (图 18)冲洗剃须刀头支架。
- 5 小心地甩掉多余水分并彻底晾干剃须刀头支架。
- 不要用毛巾或纸巾擦拭剃须刀头部件, 因为这样可 能会损坏剃须刀头。 6 将剃须刀头支架重新装回剃须刀头部件的底部

(可听到"咔哒"一声) (图 19)。 彻底清洁

我们建议您每个月彻底清洁一次剃须刀头, 或在剃须效 果没有以前好时进行清洁。

- 注意: 剃须刀头被蓝色 (图 21)或橙色 (图 22)固定环锁
- 住。 按照正确的说明操作。 2 将剃须刀头支架从剃须刀头部件(图 17)的底部抽离。
- 3 逆时针转动固定环, 然后将它从剃须刀头 (图 25)
- 对其他固定环重复此过程。将其存放在安全的地方。 4 从剃须刀头支架上卸下剃须刀头。 每个剃须刀头都
- 包括刀片和网罩。 5 在水龙头 (图 27)下清洁刀片和网罩。
- 6 将刀片重新装回至网罩。 7 将剃须刀头装到剃须刀头支架 (图 28)中。
- 注意: 确保剃须刀头两侧的槽口正好卡入剃须刀头 支架上的凸起部位。
- 8 蓝色固定环: 将固定环放在剃须刀头上, 顺时针旋 转以重新安装固定环。 将剃须刀头上的箭头与剃须刀头支架 (图 29)上的凸 起部位对齐。 顺时针旋转固定环, 直至听到
- "咔哒"一声,表明固定环已就位 (图 31)。 橙色固定环: 将固定环放在剃须刀头上, 顺时针旋 转以重新安装固定环 (图 30)。 对其他固定环重复
- 每个固定环均具有两个凹槽, 正好能够装入剃须刀 头支架的凸缘上。 顺时针旋转固定环, 直至听到' 咔哒"一声,表明固定环已就位(图 32)。
- 当您重新插入剃须刀头并重新安装固定环时, 请将 剃须刀头支架握在手中。 当您执行此操作时,切勿
- 将剃须刀头支架放在平面上, 否则可能会造成损坏。 9 将剃须刀头支架安装到剃须刀头部件的底部(可听
- 10 要重置更换提醒,请按住开/关按钮约7秒钟。请等 到听见两声蜂鸣音。

清洁充电基座 1 使用微湿的布擦拭充电基座表面以清除所有尘垢

- (图 20) 2 清洁后,用干布干燥表面。
- 警告: 务必确保充电基座完全干燥,再将其连接至

清洁卡入式附件

- 清洁卡入式洁面刷 1 确保产品电源已关闭。
- 2 从附件基座上卸下刷头。 注意: 将刷头从洁面刷基座上拉下时, 不要旋转
- 3 用温水和中性肥皂彻底清洁两个部件。 4 用毛巾擦干洁面刷。

更换 更换洁面刷头

- 每3个月应更换一次刷头,或当刷毛在更短时间内出现 弯曲或损坏时更换。
- 2 从附件基座上卸下刷头。 3 丢弃用过的刷头(请参阅"回收"一章)。 4 将新的洁面刷刷头连接到洁面刷基座。
- 更换剃须刀头 为获得更好剃须效果,建议每两年更换一次剃须刀头。

立即更换损坏的剃须刀头。

将听到蜂鸣音。

务必使用原装飞利浦剃须刀头进行更换。 出现更换提醒表示需要更换剃须刀头。 剃须刀头部件符 号持续亮起,箭头呈白色闪烁,并且在关闭剃须刀时您

1 要更换剃须刀头,请将剃须刀头从剃须刀头支架上 逐一卸下。 有关如何拆卸固定环和剃须刀头,请参阅"彻底清洁"一章中的说明。

注意: 剃须刀头被蓝色 (图 21)或橙色 (图 22)固定 环锁住。 按照正确的说明操作。 2 要重置更换提醒,请按住开/关按钮约7秒钟。

请等到听见两声蜂鸣音。 订购配件

如需购买附件或备件,请访问 www.shop.philips.com/ service 或联系您的飞利浦经销商。 您还可以联系所在 国家/地区的飞利浦客户服务中心(请参阅国际保修卡了 解详细联系信息)

可选配以下附件和备件 SH90 飞利浦剃须刀头 RQ560 飞利浦洁面刷头 RQ111 飞利浦胡须造型器

利干环保。

回收 - 弃置本产品时,请不要将其与一般生活垃圾放在一 起,应将其交给政府指定的回收中心。 这样做将有

HQ110 飞利浦剃须刀头清洁喷雾剂

拆下充电电池

仅在丢弃剃须刀时方可取出充电电池。 拆下电池之 前,请确保剃须刀与插座断开连接,并且电池电量

产品中有害物质的名称及含量						
有害物质						
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCB's 集成电路板	х	0	0	0	0	0
Electrical contact pins 电接触片	х	0	0	0	0	0
Power plug 电源插头	x	0	0	0	0	0
本表格依据SJ/T 11364的规定编制。						
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。						
X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。						

- 该表格中所显示的"有害物质"在产品正常使用情 況下不会对人身和环境产生任何伤害。
- 该表格中所显示的"有害物质"及其存在的部件 向消费者和回收处理从业者提供相关物质的存在信 息,有助于产品废弃时的妥善处理。

保修和支持

如需信息或支持,请访问 www.philips.com/support 或 阅读国际保修卡。

故障处理方法

本章归纳了使用本产品最常遇到的问题。 如果您无 法根据以下信息解决问题,请访问 www.philips.com/ support 查阅常见问题列表,或联系您所在国家/地区的

各厂服务甲心。		
问题	可能的原因	解决方法
充电基座上的 充电指示灯以 红色亮起。	使用错误的适配 器或适配器故障 (如没有使用 原装飞利浦适 配器)	使用原装飞利浦 7.5W 适配器
	充电期间,有金属物体放置在充电基座上(如纸夹、硬币等)	从充电基座上取下所 有金属物体
	剃须刀/充电基 座充电故障(如充电基座或剃 须刀不能正常 工作)	如果前两个解决方案 不能解决此问题,则 将本产品返回您所 在国家的客户服务 中心。
产品不能充电。	本产品未正确放 到充电基座上。	将本产品放到充电基 座的充电架上。正确 放置时,充电基基的 发出信号充电,且充示灯 号流电,自指示灯 开始呈白色(请参见, 充电)闪烁。

		发出信号音,且充电基座上的充电指示灯开始呈白色 (请参见'充电')闪烁。
本产品未正确 放到充电基座 上。	适配器插入的电 源插座未通电。	检查是否存在完全 医克克克氏 医克克克克氏 医克克克氏 医克克克克氏 医克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克氏 医克克克克克克克克
检电及的电用墙可开座查源连插。浴壁能灯电是故接座如军插需要接。将壁能灯电存,电否您中,通通,在一个,电话。		如果充电板的充电指示灯仍未亮起, 示灯仍未亮起, 充或 如果产品仍无法充 电, 请将其送往飞利 浦经销商处或附近的 飞利浦服务中心。
产品不能工 作。	电池已耗尽。	为产品 (请参见 '充 电')充电。
	产品已关闭电	将开/关环逆时针转

		坐 电源。
全点, 是放接座如室插需来源不停,电否您不是那样的。 是那样的一个。 是一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个		如果充电板的充电指示灯仍未亮起,或有 如果产品仍无法充 电,请将其送往飞利 浦经销商处或附近的 飞利浦服务中心。
品不能工 。	电池已耗尽。	为产品 (请参见 '充 电')充电。
	产品已关闭电源。	将开/关环逆时针转至"开"指示处(I) (请参见'打开或关闭产品')。
	剃须刀头支架被 污染或损坏, 导致马达无法 运行。	清洁剃须刀头或将其 更换。 另外,确认是 否是"毛发或污垢堵 塞了剃须刀头"。
电后,产品 法"打开"		来回切换开/关环, 现在应该可以"打 开"产品。
品的剃须效 2没有以前	剃须刀头已损坏 或磨损。	更换剃须刀头。

	毛发或污垢堵 塞了剃须刀头。	请先清洁剃须刀头, 然后再继续剃须 (请参见 '清洁和保养')。
		建洗彻此从一刀龙和起刀后中头架和详述的此从一刀龙和起刀后中头架和详知的情况,则是有一个人,一个人,一个人,一个人,一个人,一个人,一个人,一个人,一个人,一个人,
我不知道本洁面刷是否适合我的皮肤。		本肤果裂愈后严肤炎皮状刷类使活类皮、合恢重感、肤,。固用合是干处、或晒肤牛肤用正物刷刺、疹或勿果类活。则。存行口,,皮、皮使您药面型肤开的复粉染、疹或勿果类活。以一种,正于存、或晒肤牛肤用正物刷。上于存、疾处,等症面用勿较在术在皮发等症面用勿以,是一种,较在术在皮发等症面用须
感觉刷头太粗		如果感觉刷头太粗

糙,建议您先使用敏

敏咸和超敏咸剛斗的

刷毛更柔软。建议您

在敏感皮肤上使用敏

感刷头, 在超敏感和

干性皮肤上使用超敏

感刷头。

感或超敏感刷头

问题	可能的原因	解决方法
我不知道刷头 可与哪款清 洁产品配合使 用。		建议您使用自己喜爱的洁面乳清洁肌肤。您可以使用清洁肌素胶、泡沫、精洁、快奶或混流。请待时,他奶或混放。请约使用带微粒的磨砂膏或凝胶。
我的智能手机 放在充电基座 上无法充电。	智能手机未正确放到充电基 确放到充电基 座上。	请将智能手机放到充。 电基座的充电免充电 在一个大型。 在一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个一个
	适配器插入的电 源插座未通电。	检查是否存在电源 管,以及是是不好连接。 以及是否通知。 如果基壁插进开 切需要 通知, 所需 整理, 所需 等 等 等 等 等 等 等 等 等 等 等 等 等 等 等 等 等 等
	智能手机与 Qi 充电不兼容。	您的智能手机可能与 Qi 充电不兼容,请联 系智能手机的制造商 或零售商。
PHILIPS	5	
产品 : 飞利浦 型号 : S8870 额定电压 : 220\	电动剃须刀 /~	

额定频率 : 50Hz 额定输入功率: 11 W 产地 : 中国广东珠海 生产日期 : 请见产品本体

珠海经济特区飞利浦家庭电器有限公司 中国珠海市三灶镇琴石工业区 全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005,

保留备用 发行日期: 03/04/2018

GB4706.9-2008制造



1 (6)

28





4222 002 7386 3 DFU-Leaflet A7 v4.indd 7-12 03/04/18 14:13