

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded Trimmer that has fallen into water. Unplug immediately.
2. Use Trimmer only in a dry condition. Do not use while bathing or in a shower.
3. Do not place or store Trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this Trimmer from the electrical outlet immediately after (re)charging.
5. Unplug and remove power supply cord from Trimmer before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
2. Use this Trimmer for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this Trimmer if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. For assistance call 1-800-243-3050.
4. Keep the Trimmer, cord, charging plug and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not operate, charge, clean or plug in Trimmer outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check cutters, cutting unit and combs before using the Trimmer. Do not use the Trimmer if cutters, cutting unit and combs are damaged, as injury may occur.
9. Always attach plug to Trimmer first, then to outlet. To disconnect, turn on/off switch to "OFF" position, then remove plug from outlet.
10. Only use the cord provided. To prevent possible damage to the cord, do not wrap cord around the Trimmer.
11. Never put Trimmer in direct sunlight or store at a temperature above 140°F (60°C).
12. Never immerse the Trimmer in water or rinse under the tap.
13. This Trimmer is for use on human hair only. Do not use this Trimmer for any other purpose.
14. Always store your Trimmer, attachments and power plug in a moisture-free area. Make sure the cord is disconnected from the Trimmer.
15. Only use the power plug supplied with the appliance.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Registration

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.norelco.com/register

To Charge/Recharge

- ▶ Fully charge Trimmer before using for the first time or after non-use for a long period of time.
- ▶ Charging, recharging or using Trimmer at temperatures below 40°F (4°C) or higher than 95°F (35°C) adversely affects lifespan of the battery.
- ▶ Continuously recharging Trimmer will reduce lifespan of battery.

1 Be certain Trimmer is OFF (fig. 1).

2 Connect appliance plug directly into the Trimmer and plug adapter into any 120VAC outlet (fig. 2). Use only the cord provided.

▶ An adaptor plug may be necessary for cord usage in some foreign countries. Use an attachment plug adaptor of the proper configuration for power outlet.

3 The charging light lights up to indicate the Trimmer is charging (fig. 3).

▶ It will take approximately 10 hours to fully charge the Trimmer for a cordless trimming time of up to 45 minutes (BT1300/BT1200) or 30 minutes (BT1100).

4 Disconnect the cord and unplug from electrical outlet.


Optimize the working life of the battery

- ▶ After the Trimmer has been charged for the first time, do not recharge the Trimmer between trimming sessions. Continue using it until the battery is completely empty.
- ▶ Do not charge for more than 24 hours.
- ▶ Do not keep cord permanently plugged in.
- ▶ Discharge/run down the battery completely twice a year by letting the motor run until it stops.
- ▶ If the Trimmer hasn't been used for a long period of time, it must be recharged for a full 8 hours.

Cordless Trimming

- ▶ Use this Trimmer for its intended household use as described in this manual.
- ▶ Always comb the beard and/or moustache with a fine comb before you start trimming.
- ▶ If you are trimming for the first time, be careful. Do not move the Trimmer too fast. Make smooth and gentle movements.
- ▶ Make sure that the Trimmer is fully charged before you start trimming.

Features

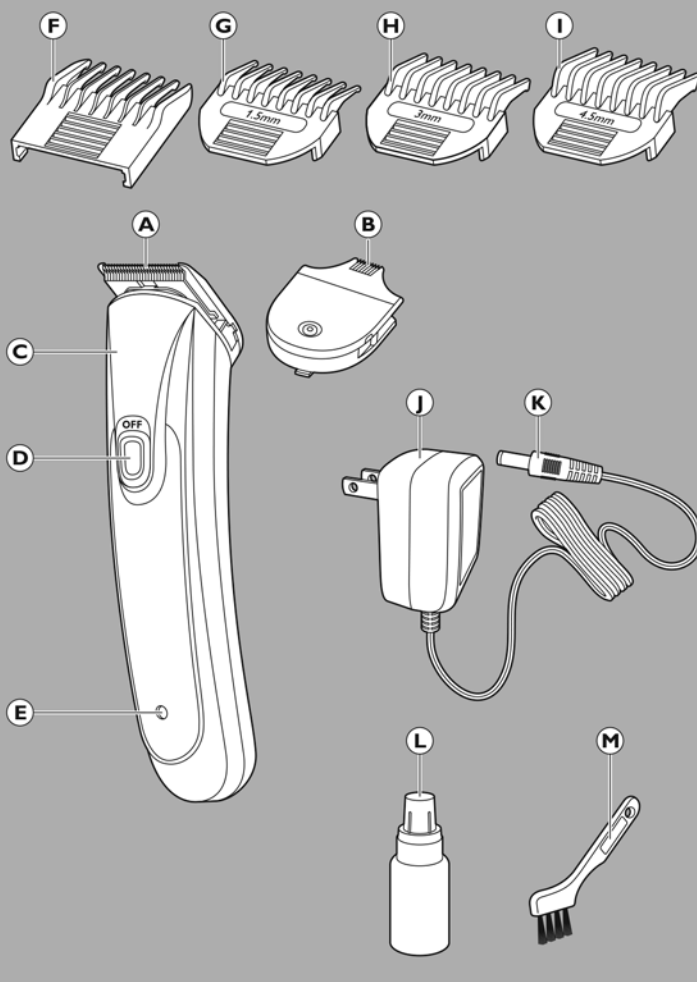

- A Cutting element
 - B Detail Trimmer (BT1300)
 - C Handle
 - D On/Off Slide Switch
 - E Charging Light
 - F Adjustable Comb (1/8–9/32in./3–7mm)
 - G Stubble Comb (1/16in./1.5mm)
 - H Short Beard Comb (1/8in./3mm)
 - I Long Beard Comb (3/16in./4.5mm)
 - J Adapter
 - K Appliance Plug
 - L Oil
 - M Cleaning Brush
- Full Two-Year Warranty
45-Day Money-Back Guarantee



- 1** Charge according to directions. Unplug Trimmer from outlet and remove cord.
- 2** Slide ON/OFF switch ON to begin trimming.
- 3** When finished, turn Trimmer OFF.

Trimming with a Comb

- ▶ The fixed combs have 3 lengths that are indicated on each comb.
- ▶ The adjustable comb has 5 hair length settings from 1/8–9/32 in./3–7mm in steps of 3/64 in./1mm.
- ▶ The indications on the combs correspond to the remaining hair length after trimming.

1 Be certain Trimmer is OFF (fig. 1).

2 Slide the comb onto the cutting element by pressing down until it is fixed into place (fig. 4).

NOTE: When you slide the adjustable comb all the way down, you have selected the 1/8 in./3mm setting. Push the comb up to select another length setting. Each click is a step of 3/64 in./1mm.

▶ If you are trimming for the first time, start by using the comb at the maximum trimming length setting to prevent accidentally trimming hairs too short.

3 Switch the Trimmer ON (fig. 5).

4 To trim in the most effective way, move the Trimmer upwards against the direction of hair growth. Make sure the surface of the comb always stays in contact with the skin (fig. 6).

Trimming Without a Comb

Remove comb if you are:

- ▶ Defining hair lines
- ▶ Trimming nape of neck
- ▶ Removing single, unwanted hairs

- 1 Be certain the Trimmer is OFF (fig. 1).
- 2 Push the back of the comb upwards until the comb slides off the Trimmer (fig. 7).
- 3 Switch the Trimmer ON (fig. 5).
- 4 Make well-controlled movements. Touch the hair/skin lightly with the Trimmer.

–For a comfortable trim close to your skin, place the flat side of the trimming head against your skin and make strokes against the direction of hair growth (fig. 8)

–For contouring, hold the cutting element perpendicular to your skin and move the Trimmer upwards or downwards with gentle pressure (fig. 9).

Be careful when you are trimming without the comb as when the Trimmer is turned on it will trim every hair it touches.

Styling/Contouring with Detail Trimmer (BT1300)

- ▶ Use the detail trimmer to contour or style your beard, moustache, sideburns or neckline to a length of 1/32 in./0.5mm
- ▶ The detail trimmer gives you more precise detailing of sideburns and areas around the mouth and nose.

- 1 Remove the cutting element from the handle by gently pushing the teeth of the cutting element upwards until it releases (fig. 10).
- 2 Attach the detail trimmer onto the appliance making sure the projection on the back of the detail trimmer fits exactly into the recesses in the hair chamber (fig. 11).
- 3 Switch the Trimmer ON (fig. 5).
- 4 Make careful and controlled movements while touching hair lightly (fig. 12).

Cleaning

- ▶ Clean the Trimmer after each use.
- ▶ Always switch Trimmer OFF, unplug and remove power supply cord from Trimmer before cleaning.
- ▶ Never immerse the Trimmer in water or rinse under the tap.
- ▶ Do not use abrasive cleaning agents, scourers or aggressive liquids such as alcohol, gasoline, or acetone to clean the Trimmer and attachments.
- ▶ Never clean, replace or remove Trimmer comb with motor ON.
- ▶ Do not apply pressure to cutters.
- ▶ Do not touch cutters with hard objects as this may damage them.
- ▶ Use a soft, dry cloth to clean Trimmer handle.

After Each Use:

For optimal trimming performance, clean and lubricate the cutting element after each use.

- 1 Make sure the Trimmer is switched OFF and disconnected from the electrical outlet.
- 2 Remove the trimming comb and clean with the brush (fig. 13).
- 3 Remove the cutting element from the handle by gently pushing the teeth of the cutting element upwards until it releases (fig. 10).
- 4 Clean the cutting element with the cleaning brush (fig. 14).
- 5 Clean the hair chamber with the cleaning brush (fig. 15).
- 6 Push the cutting element back into place making sure the projection on the back of the cutting element fits exactly into the recesses in the hair chamber (fig. 16).
- 7 For optimal trimming performance, lubricate the cutting element teeth with a drop of the oil supplied every 6 weeks (fig. 17).

This Trimmer has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

- ▶ Be sure Trimmer is turned OFF. Remove cord from outlet and Trimmer before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap cord around Trimmer when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store Trimmer where it can fall or be pulled into a tub or sink, water or other liquid.

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-3050

Online information is available 24 hours a day, 7 days a week.

Disposal

- ▶ This Philips Norelco Trimmer contains a rechargeable Nickel Metal Hydride battery, which must be disposed of properly (fig. 18).
- ▶ The built-in battery should not be disposed of with normal household waste (fig. 19).
- ▶ Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbr.com for battery drop-off locations.
- ▶ For assistance, visit our website, www.philips.com/support or call toll free 1-800-243-3050.

PHILIPS

NORELCO

Beard
Trimmer



BT1100
BT1200
BT1300

Rechargeable
Cordless

BC

Always here to help you

Register your product and get support at
www.norelco.com/register



4222 002 8616 2

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips Norelco product, Models BT1300/BT1200/BT1100 (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty. **NOTE:** No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Consumer Lifestyle
A Division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

PHILIPS is a Registered Trademark of Koninklijke Philips N.V.

© 2015 Philips Electronics North America Corporation. All Rights Reserved.

PHILIPS

NORELCO

**45-DAY MONEY-
BACK GUARANTEE**

If you are not fully satisfied with your Philips Norelco Trimmer send the product back and we'll refund you the full purchase price.

The Trimmer must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.

The Trimmer must be postmarked no later than 45 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance.

Delivery of refund check will occur 6–8 weeks AFTER receipt of returned product.